

# MC6-Ex

## Intrinsically Safe Advanced Field Calibrator and Communicator



Applies to firmware version 5.20

Dear user,

We have made every effort to ensure the accuracy of the contents of this manual. Should any errors be detected, we would greatly appreciate to receive suggestions to improve the quality of the contents of this manual.

For more information on the Beamex MC6-Ex, Intrinsically Safe Advanced Field Calibrator and Communicator, please visit the MC6-Ex product page on Beamex website.

© Beamex 2025

**Beamex Oy Ab**

Ristisuonraitti 10

FIN-68600 Pietarsaari

Finland

Tel:

+358-10-5505000

E-mail:

sales@beamex.com

service@beamex.com

Website:

<https://www.beamex.com>

# Table of Contents

---

<b>Prologue.....</b>	<b>6</b>
Unpacking and Inspection.....	6
About This Manual.....	7
Typographical Conventions.....	8
<b>Safety.....</b>	<b>9</b>
Safety Information Related to Intrinsic Safety.....	9
Certifications.....	9
Specific Conditions of Use.....	10
Maximum Input Parameters, Simple Connections.....	12
Combined Connections.....	12
Maximum Output Parameters, Simple Connections.....	13
Safety Symbols.....	13
Safety Precautions and Warnings.....	14
Warnings Concerning Electrical Measurement and Generation.....	15
Warnings Concerning Pressure.....	16
Warnings Concerning High Pressure.....	17
Warnings Concerning Smart Instruments.....	18
Warnings Concerning the NiMH Battery Pack.....	19
<b>Specifications.....</b>	<b>21</b>
<b>About MC6-Ex.....</b>	<b>23</b>
Hardware Overview.....	23
Pressure Modules.....	25
Support Stand.....	28
Memory and Data Management.....	28
Display.....	28
Battery and Charging.....	29
Checking Battery Level and Charging Status.....	29
Charger and Charging Procedure.....	31
Power Management.....	33
User Interface.....	34
Home View and User Interface Modes.....	34
Interacting with MC6-Ex.....	35
Editable Fields.....	37
Calibration Management Software.....	42
Communicating with LOGiCAL.....	42
Communicating with CMX.....	42
Options, Accessories and Services.....	42
Software Options.....	43
Accessories and Related Products.....	44

Services.....	44
Available PC Tools.....	44
<b>Calibration Capabilities and Connections.....</b>	<b>45</b>
Measurements.....	46
Pressure Measurement.....	46
User-Defined Pressure Units.....	47
Connecting and Disconnecting External Pressure Modules...	49
Temperature Measurement (RTD).....	50
Temperature Measurement (Thermocouple).....	51
Resistance Measurement.....	52
Current Measurement.....	53
Voltage Measurement.....	54
Frequency Measurement.....	54
Pulse Counting.....	56
Switch Sensing.....	57
Electrical Generations and Simulations.....	59
RTD Simulation.....	59
Thermocouple Simulation.....	60
Resistance Simulation.....	61
Current Generation (Source or Sink).....	62
Voltage Generation.....	63
Frequency Generation.....	63
Pulse Generation.....	65
Smart Instrument Connections.....	66
Thermocouple Connections.....	68
<b>Meter.....</b>	<b>70</b>
<b>Calibrator.....</b>	<b>72</b>
<b>Documenting Calibrator.....</b>	<b>74</b>
Calibration Process with MC6-Ex.....	75
Instrument Data.....	75
Calibration Execution and Calibration Results.....	76
Instrument List.....	77
Plant Structure Levels.....	80
Instrument List Menu.....	80
Instrument Overview Window.....	82
Calibrating an Instrument.....	83
Calibration Point Acceptance.....	85
Calibration Results Window.....	87
Viewing Saved Calibration Results.....	90
Deleting Calibration Results.....	91
Creating Instruments in MC6-Ex.....	91
Identification Related Data.....	92
Instrument Function Related Data.....	93
Calibration Procedure Related Data.....	97

Error Limit Related Data.....	99
Device Related Data.....	100
Group Calibration.....	101
Creating and Editing a Group.....	101
Calibrating a Group.....	104
Group Settings.....	106
Special Use Cases.....	107
Changing a Pressure Module During Calibration.....	107
Using External Controllers in Calibration.....	108
Changing a Controller During Calibration.....	108
Work Order View Mode.....	109
Mobile Security Plus Option.....	111
<b>Data Logger.....</b>	<b>113</b>
Configuring a Data Log.....	113
Logging Data.....	117
Data Log Results.....	118
Viewing Saved Data Log Results.....	119
Data Log Viewer.....	120
<b>Communicator.....</b>	<b>122</b>
Device Description Files.....	123
Basic View.....	127
Managing Smart Instrument Configurations in MC6-Ex.....	128
Saving Configurations.....	129
Viewing or Opening Configurations.....	130
Linking Configurations to CMX.....	131
<b>Working With Smart Instruments.....</b>	<b>132</b>
About Smart Instrument Parameters.....	133
Editing Parameters.....	135
Selecting Instruments.....	136
List of Found Devices.....	137
Get Mapped Values feature.....	139
Preparations.....	139
Mapping the Instrument Data.....	139
Customizing the Mappings.....	140
Calibrating Smart Instruments.....	144
Calibrating or Data Logging HART Instruments.....	144
Calibrating or Data Logging Fieldbus Instruments.....	146
Trimming Smart Instruments.....	148
Trimming a HART Instrument.....	148
Trimming a Fieldbus Instrument.....	150
<b>Advanced Features.....</b>	<b>152</b>
Tools.....	152
User-Defined Transfer Functions.....	156
User-Defined Steps/Calibration Points.....	158

User Sensors.....	160
Creating a New User Sensor.....	160
Using User Sensor.....	162
Updating User Sensor Data.....	163
Callendar-Van Dusen Formula.....	163
ITS-90.....	164
Factor.....	166
Check Sensor Conversion.....	167
Controller Communication.....	168
Enabling Communication with the Controller.....	168
Calibration Methods with External Controllers.....	171
Wireless Communication.....	172
Connection Security.....	173
Requirements.....	173
Enabling Communication with a Client Device.....	174
Information Window.....	176
Troubleshooting.....	178
<b>Settings.....</b>	<b>180</b>
<b>Maintenance.....</b>	<b>183</b>
Cleaning Instructions.....	183
Firmware Update.....	184
Replacing the Battery Pack.....	185
Teaching the Battery.....	187
Recalibrating and Adjusting MC6-Ex.....	188
Recalibrating the Calibrator.....	188
Calibration and Adjustment Instructions.....	188
Changing Calibration Date and Interval.....	188
Adjusting the Calibrator.....	189
Preparing the MC6-Ex for Service Returns.....	189
Resetting the Calibrator.....	190
Disposing of Waste Electrical and Electronic Equipment.....	191
Disposing the Battery Pack.....	192
<b>Index.....</b>	<b>195</b>

# Prologue

Thank you for buying Beamex MC6-Ex Intrinsically Safe Advanced Field Calibrator and Communicator.

The Beamex MC6-Ex is a reliable and stable, high-accuracy, intrinsically safe field calibrator and communicator. It is ATEX, IECEx, and North American certified, and can be used in hazardous areas as specified in the certificates. The main features of MC6-Ex are intrinsic safety, advanced functionality, enhanced usability and fully digitalized calibration process.

MC6-Ex offers calibration capabilities for pressure, temperature, and various electrical signals. It also contains a multi-bus field communicator for HART, FOUNDATION Fieldbus H1, and Profibus PA protocols, allowing you to calibrate, configure, and trim your smart instruments.

It includes several intuitive user interface modes, optimized for different use cases and available in multiple languages. The calibrator guides you step by step through your calibration work and can even perform fully automatic calibrations.

Additionally, the MC6-Ex is a documenting calibrator that communicates with Beamex Calibration Management Software, enabling a fully digitalized calibration process.

---

## Unpacking and Inspection

At the factory, each new MC6-Ex passes a careful inspection. It should be free of scrapes and scratches and in proper working order upon receipt. The receiver should, however, inspect the unit for any damage that may have occurred during transportation. If there are signs of obvious mechanical damage, package contents are incomplete, or it does not operate according to specifications, contact your Beamex representative as soon as possible.

A leaflet listing all standard accessories is included in the package. To verify the contents of your delivery, please check the leaflet.

---

# About This Manual

The MC6-Ex User Manual is divided into several parts as follows:

- **Safety** - explains how to ensure safe use of the calibrator. Read the warnings and the **Specific Conditions of Use** carefully before using the calibrator.
- **Specifications** - includes information about the operating conditions and specifications of the calibrator.
- **About MC6-Ex** - provides an overview of the calibrator's hardware and software. It also explains how calibration capabilities can be expanded by utilizing other Beamex products and services, as well as battery, charger, and power management information.
- **Calibration Capabilities and Connections** - describes all the measurement, simulation and generation functions the calibrator supports. It also explains how to make the necessary connections to the calibrator's terminals.
- **Meter** - introduces the user interface mode designed for quick and easy signal measurement.
- **Calibrator** - presents the user interface mode for calibrating various process instruments. It allows you to measure, simulate, or generate two signals at a time.
- **Documenting Calibrator** - explains the user interface mode for documented and automated calibration of various types of process instruments. Use the Documenting Calibrator together with Beamex LOGiCAL or CMX Calibration Management Software to fully benefit from the digitalized calibration process.
- **Data Logger** - describes the optional user interface mode designed for logging various measurement results over shorter or long periods of time.
- **Communicator** - outlines the user interface mode for viewing and editing the configuration of HART, FOUNDATION Fieldbus H1, or Profibus PA smart instruments.
- **Working With Smart Instruments** - explains how to use your smart instruments in various user interface modes of the MC6-Ex.
- **Advanced Features** - introduces various functionalities of the MC6-Ex that support your calibration process.
- **Settings** - presents how to edit different settings of the calibrator.
- **Maintenance** - provides a description of maintenance actions that can be performed by the user.

## Typographical Conventions

The following typographical conventions apply to the MC6-Ex User Manual:

**Bold** text is typically used in cases like:

- keywords, such as terms and User Interface buttons
- other keywords, for example, fieldbus parameters



**Note:** This is a note. Notes typically provide important information to consider and remember.



**Tip:** This is a tip. Tips offer useful advice or practical information related to the current topic.



**Caution:** This is a caution. Cautions highlight situations that could result in damage to the calibrator if not observed. Always read cautions carefully and follow the instructions.



**Warning:** This is a warning. Warnings indicate situations that could cause serious injury or damage if not followed. Always read warnings carefully and comply with them to ensure safety.

# Safety

MC6-Ex calibrator is a precision tool intended for use by skilled personnel who have read and understood this manual. Working with the MC6-Ex involves the use of pressure, electrical and/or temperature instruments. Make sure to know how to handle these instruments safely, including how to connect and disconnect pressure hoses, electrical test leads clips, and other accessories.

**Use the MC6-Ex calibrator only if you are confident that it can be operated safely. Safe use of the MC6-Ex is no longer possible if any of the following cases are true:**

- The enclosure of the MC6-Ex is visibly damaged.
- The MC6-Ex is not functioning as expected.
- There is an unusual smell coming from the unit's battery.
- The calibrator has been stored for a prolonged period under unfavorable conditions.
- The calibrator has suffered serious damage during transportation.

---

## Safety Information Related to Intrinsic Safety

### Certifications

The MC6-Ex complies with the ATEX Directive, EMC Directive, and Low Voltage Directive. It is also IECEx and North American certified. The EU Declaration of Conformity and the UK Declaration of Conformity contain approvals, certificates, and detailed standard references. The declarations are available under the Resources tab on the [MC6-Ex page](#) on the Beamex website.

#### Ex Certifications

##### ATEX

Ex ia IIC T4 Ga

(Ta = -10 ... +50°C)

EESF 18 ATEX 071X

 0537



**IECEX**

Ex ia IIC T4 Ga

(Ta = -10 ... +50°C)

IECEX EESF 18.0033X

**North America**

Class I, Zone 0, AEx ia IIC T4 Ga

Class I, Division 1, Groups A-D, T4

(Ta = -10 ... +50°C)

Intrinsically Safe

Sécurité intrinsèque

SGSNA/18/SUW/00222X



## Specific Conditions of Use

- The maximum allowed ambient temperature range is  $-10\text{ °C} \leq T_a \leq +50\text{ °C}$ .
- The calibrator shall only be used with rechargeable battery pack type RB-796-Ex.
- The battery pack shall not be charged in a hazardous area.
- Recharging shall be done in a non-hazardous area by using Beamex BC15-Ex type charger only.
- Auxiliary USB devices shall not be connected to MC6-Ex when used in a hazardous area.
- The hand strap shall not be adjusted in a hazardous area due to risk of electrostatic discharge.
- The PX connector shall only be connected to the EXT-IS or EXT-s-IS external pressure module in a hazardous area.
- Any stickers with surface are larger than  $400\text{ mm}^2$  ( $0,62\text{ in}^2$ ) shall not be affixed to the calibrator.
- Capacitance of the metallic parts is 110 pF. This shall be considered in handling the device.
- The non-conductive film protecting the display during shipment shall be removed before entering a hazardous area.
- The aluminium parts of the external pressure modules and calibration pump shall not be subjected to impacts or friction due to risk of sparking.

The connection cable of the external pressure module, the pressure measurement hose, and the adapter cables for the R2 connection are made of non-conductive material. The user should be aware of the danger of ignition caused by hazardous electrostatic charges.

The Soft case for MC6-Ex and the PGM calibration pump are approved accessories for use in a hazardous area.



**Warning:** Do not use the USB ports or the USB Bluetooth adapter in a hazardous area. Remove the adapter before entering any hazardous area. Wireless Communication may only be used in a safe area.


A reminder warning (see picture below) is displayed when the calibrator is started with the adapter connected or when the adapter is plugged to the USB port.



**Figure 1: Hazardous area warning prompt**

## Maximum Input Parameters, Simple Connections

The following tables refer to connections labelled in the figure below.

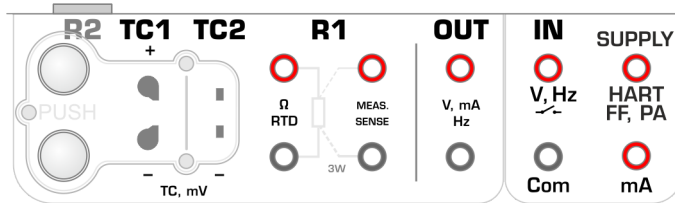

**Figure 2: Connections used in Input/Output parameters tables**

Connection	$U_i/V$	$I_i/mA$	$P_i/mW$	$C_i/nF$	$L_i/mH$
TC1, TC2	30	215	500	26.2	0
R1	30	215	500	26.2	0
R2	30	215	500	5.2	0
OUT	30	215	1000	31.3	0
IN: V/Hz, Com IN: mA, Com	30	215	1000	3.7	0
HART/FF/ PA, Com SUPPLY, mA	24	215	1000	7.3	0.01

## Combined Connections


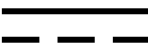

Connections are handled in groups, which partially share their protective circuitry. If using multiple measurements/generations within one group simultaneously, the total power, capacitance and inductance shall be within given limits for the whole group. For example, connections **TC1** and **TC2** belong to same group with a maximum total power limit of 500 mW. If the input power for connection **TC1** is 400 mW, the maximum allowable input power for connection **TC2** is 100 mW when **TC1** and **TC2** are used simultaneously. Voltage and current limit values apply to each connection, i.e. the voltage in both **TC1** and **TC2** may be 30 V, if the total power does not exceed 500 mW. For other combined connections, all limit values apply for each connection. For example, 500 mW can be applied to **TC1** at the same time as 500 mW is applied to connection **R1**.

## Maximum Output Parameters, Simple Connections

Connection	$U_o/V$	$I_o/mA$	$P_o/mW$	$C_o/nF$	$L_o/mH$
TC1, TC2	2.58	47.9	30.8	39.8	15
R1	5.36	82.2	102	39.8	5
R2	2.58	17.1	11	60.8	100
OUT	18.3	338.3	482	34.7	0.1
	5.36	348.2			
IN: V/Hz, Com IN: mA, Com	5.36	13.8	18.1	62.3	100
HART/FF/ PA, Com	23.1	179.5	1025	53.7	0.7
SUPPLY, mA	4.72	192.2			

## Safety Symbols

The following safety-related symbols are used on the MC6-Ex.

	Alternating current, AC
	Direct current, DC
	Caution! See manual for further information

---

## Safety Precautions and Warnings



**Caution:** Read and fully understand this manual and all other safety instructions before operating the Beamex MC6-Ex Intrinsically Safe Advanced Field Calibrator and Communicator.



**Warning:** Do not use the MC6-Ex in any way other than as described in this user manual. Using the calibrator in a manner not specified by the manufacturer may impair the protection it provides against hazards.

**Opening the MC6-Ex enclosure will compromise safety and void the warranty.**

Replacement of components may impair intrinsic safety.



**Caution:** Only qualified and trained personnel are allowed to use the MC6-Ex. Incorrect use may result in damage to the calibrator and/or personal injury.



**Warning:** Only use the calibrator for purposes and in environments specified in the user manual.



**Note:** If the calibrator has been stored in different environment, allow it to stabilize to new environment before use.



**Warning:** Do not tap the touch screen with sharp or hard objects or press hard on the display, especially with fingernails. Instead, tap lightly using your fingertips.



**Warning:** The MC6-Ex enclosure is sensitive to ultraviolet light, so avoid leaving it in direct sunlight or exposed to other strong UV light sources for prolonged periods.



**Warning:** The calibrator does not meet IP65 requirements when the connector cover is open. With the connector cover open, the calibrator is rated only IP20.



**Note:** The MC6-Ex endures shocks with the help of the built-in impact protectors.



**Note:** For all measurement ports except IN and OUT, use cables not longer than 3 m.



**Note:** Sometimes it is necessary to use a portable radio transceiver while working with the calibrator. To prevent calibration errors caused by radio frequency interference, keep the radio at least 1 m away from the calibrator and the circuit under calibration while transmitting.

---

## Warnings Concerning Electrical Measurement and Generation



**Warning:** All MC6-Ex terminals are protected against overvoltage and overcurrent as far as possible without affecting accuracy. Do not connect signals that exceed the measurement range of the selected function.

The maximum output voltage from MC6-Ex terminals is below 30 V. However, if you connect voltages from both the IN and TC-R-OUT sections together, or connect external voltages to the MC6-Ex, the resulting voltage may be high enough to be hazardous.

There is no galvanic isolation between the USB, the charger, and the internal pressure module connectors.

Although there is a galvanic isolation between the MC6-Ex IN and TC-R-OUT sections, it is intended for functional purposes only. Do not exceed 30 V DC / 30 V AC / 100 mA between any terminals.

Functional insulation is not intended for protection against transient overvoltages. Do not connect measuring terminals to circuits where transient overvoltages may occur.

---

## Warnings Concerning Pressure



**Warning:** The PX connector shall only be connected to the EXT-IS or EXT-s-IS external pressure module in a hazardous area. Never exceed the maximum pressure of a pressure module. The maximum pressure is indicated on the module's sticker or in the user manual. Never exceed the maximum allowable pressures of optional pressure hoses.

Applying pressure above these limits can be hazardous.

We recommend using Beamex pressure hoses, fittings and optional pressure hose sets. If using other hoses or fittings, ensure they are of high quality and withstand the applied pressure.



**Warning:** Always depressurize the system before opening or connecting any pressure fittings or connectors. Use appropriate venting valves and ensure all connections are correct, with hoses and connectors in good condition.



**Warning:** For external pressure modules, always use the pressure media specified on the module:

- 6 bar (90 psi) and lower: dry, clean, inert, non-toxic, non-corrosive gases.
- 20 bar (300 psi) and higher: clean, inert, non-toxic, non-corrosive gases or liquids.

Use of the wrong type of pressure media may destroy the pressure module or calibrator.



**Caution:** Avoid spilling liquid on the MC6-Ex when connecting or disconnecting pressure hoses to or from pressure modules.



**Warning:** Pressure modules with a measuring range of 6 bar (90 psi) and lower are equipped with overpressure protection. If the measurement pressure of a pressure module exceeds the module's maximum pressure value, the overpressure protector vents excess pressure through a hole in the back of the enclosure.



**Caution:** To avoid damaging the pressure module or the calibrator, tighten the pressure measurement hoses by hand only (max. torque 5 Nm, approx. 3.6 lbf ft). If the use of tools is required to secure the connection (typically for pressure modules with a pressure range higher than 20 bar (300 psi)), apply counterforce by placing a 14 mm (approx. 9/16") spanner on the flats found in the module's connector. The overpressure protection of the internal pressure modules vents to the inside of the module rack.



**Warning:** Never plug a hose with your hands or place your hands in front of a gas spray coming from a leak. A gas bubble in the bloodstream can be fatal.

## Warnings Concerning High Pressure



**Warning:** High pressure is always dangerous. Only personnel with sufficient experience and knowledge of high-pressure liquid, air, and nitrogen operations are permitted to work with the pressure module. **Carefully** read these instructions and familiarize yourself with local safety regulations for high-pressure operations before starting use.



**Warning:** When using gas, ensure that the system does not contain any liquid, especially if you do not know how it may react under pressure. Use of clean air or nitrogen is recommended as the gaseous pressure media. Liquid pressure media should be preferred when using modules with a pressure range of 60 bar (30,000 psi) and higher.



**Warning:** If you use nitrogen, minimize the leakage to the atmosphere and ensure sufficient ventilation. Close the valve of the nitrogen cylinder, when the system is not in use. An increase in the percentage of nitrogen in the ambient air may cause unconsciousness and death without warning. **Carefully** read the safety instructions for nitrogen and make sure that other people in the same space are aware of the danger.

Use of liquid pressure medium is recommended with pressure measurement modules at higher pressure ranges. Use water or suitable hydraulic oil. Check that the liquid used is not aggressive against the materials of the transducer or tubing. When using liquid, minimize the amount of air in the system. This way you can minimize the amount of spilled liquid in case of leakage.



**Warning:** Do not use the same hoses with different liquids or gases.

Check the local regulations regarding the construction and use of pressurized vessels. The regulations usually apply to systems where the product of the pressure and volume exceeds a certain limit. The volume of the system depends on the instrument connected to it.

High-pressure gas is dangerous because it can break the container, and the flying splinters may cause injury. Also, small leaks of gas may be dangerous because the high velocity of the leaking gas jet enables penetration through skin. If a gas bubble gets into the bloodstream, it can cause death. The leak jet is particularly dangerous if some liquid is coming with the gas.

---

## Warnings Concerning Smart Instruments



**Warning:** Configuring or calibrating an instrument while it is a part of a live segment is possible only with HART and FOUNDATION Fieldbus H1. When working on a live segment, first ensure that the control loop the instrument belongs to is set to manual. Always follow the instructions provided in the instrument's own manual.

Beamex is not responsible for any damage caused by connecting an MC6-Ex to a live factory fieldbus segment.



**Warning:** When working in PROFIBUS PA, never connect two master devices (e.g. MC6-Ex, a Field Communicator, or a control system) to the same segment at the same time. This will cause conflicts and make the fieldbus segment unstable. Always remove the instrument to be calibrated from the live segment before calibration.



**Warning:** Using an MC6-Ex to change instrument parameters may cause discrepancies, as a fieldbus host control system may mirror all instrument parameters in its permanent database. In such cases, when returning an instrument with changed parameters to a live segment, make sure the updated parameters are also entered into the control system's permanent database. Additionally, confirm that the new parameters do not lead to an unstable control loop.

---

# Warnings Concerning the NiMH Battery Pack

## General Safety



**Warning:** The RB-796-Ex Nickel Metal Hydride (NiMH) battery pack requires careful and responsible handling. To prevent accidents or damage to people or property, always follow the safety precautions and warnings provided in this user manual. The battery pack is intended for use exclusively with the Beamex MC6-Ex. Using it in any other application may be hazardous.



**Warning:** Always use the battery pack supplied by Beamex. Using battery packs not intended for MC6-Ex is dangerous. Never short-circuit the battery pack. A short-circuit can burn you, damage equipment, or even cause a fire. Keep in mind that new replacement battery pack is also shipped in a charged state.

Ignoring these warnings could lead to an explosion.



**Warning:** Never leave the battery pack in a car on a hot day, in direct sunlight, or near any heat source. Excessive heat reduces performance and may cause the battery pack to ignite or explode.



**Warning:** While the MC6-Ex, including its installed battery pack, is IP65 protected, a battery pack removed from the device is not. The battery pack has vent holes to release generated gas and heat. Avoid exposing a stand-alone battery pack to liquids.



**Warning:** To prevent the “memory effect” common to NiMH batteries, fully discharge them once a month.

## Charging and Charger Safety



**Warning:** Charge the battery pack only with the charger provided for MC6-Ex (BC15-Ex). Charging must be done indoors and in a safe area. Never leave the MC6-Ex unattended while charging, and always charge it away from flammable materials.



**Warning:** If the battery fails to recharge within the specified time, stop charging immediately. The expected charging time is approximately 6 to 8 hours for a 4200 mAh battery pack.



**Warning:** During charging, rechargeable batteries may release small amounts of gas. Although this gas usually disperses quickly, it can be highly explosive. To avoid danger, always use the original charger and never charge in a gas-tight container.

### Battery Pack Replacement



**Warning:** Always replace the battery pack with a new one purchased directly from Beamex or an authorized Beamex representative. For details, visit the [Beamex Webshop](#).



**Warning:** Do not replace the battery pack with any other type. Using unauthorized battery packs may make the MC6-Ex unsafe and could result in fire or explosion. It will also void the warranty.

### Battery Pack Disposal



**Warning:** The MC6-Ex battery pack is classified as hazardous waste. Dispose of used battery packs responsibly and according to local regulations.

Never crush, short-circuit, or incinerate battery cells under any circumstances.

# Specifications

Each MC6-Ex is delivered with a traceable, accredited calibration certificate as standard, providing proof of its accuracy.



**Note:** Accuracy specifications for all measurement, generation, and simulation functions can be found under the Specifications tab on the [MC6-Ex page](#) on the Beamex website.

**Table 1: General Specifications**

FEATURE	VALUE
Display	5.7" Diagonal 640 x 480 TFT LCD module
Touch panel	5-wire resistive touch screen
Weight	2.5 ... 2.9 kg (5.5 ... 6.4 lb)
Dimensions	207 mm x 231 mm x 80 mm (8.15" x 9.09" x 3.15")
Operating temperature	-10 ... 50 °C (14 ... 122 °F)
Operating temperature during battery charging	0 ... 40 °C (32 ... 104 °F)
Operating humidity	0 ... 80 % R.H. non condensing
Storage temperature	-20 ... 60 °C (-4 ... 140 °F)
Max. altitude	3000 m (approx. 9,800 ft)
Max. input voltage	30 V AC, 30 V DC
Ingress protection	IP65
Drop	IEC 60068-2-32. 1 meter (3.28 ft)

**Table 2: Battery Pack Specifications**

FEATURE	VALUE
Battery pack type	Rechargeable NiMh battery, 4200 mAh, 9.6 V
Charging time	Approximately 10 hours
Charger supply	100 ... 240 V AC, 50 ... 60 Hz
Battery pack operation	4 ... 8 hours
Battery pack storage temperature (charged 30% )	15 ... 25 °C (59 ... 77 °F)



**Warning:** Store the battery pack in a dry environment whenever possible.

If the battery pack has been stored for an extended period, charging and discharging it several times may be necessary to restore maximum performance.




**Note:** If MC6-Ex is not in use for an extended period, it is recommended to recharge it every 3 months.

**Specifications are subject to change without prior notice.** For the latest technical information, visit the [MC6-Ex page](#) on the Beamex website.

# About MC6-Ex

## Hardware Overview

### MC6-Ex - Main View

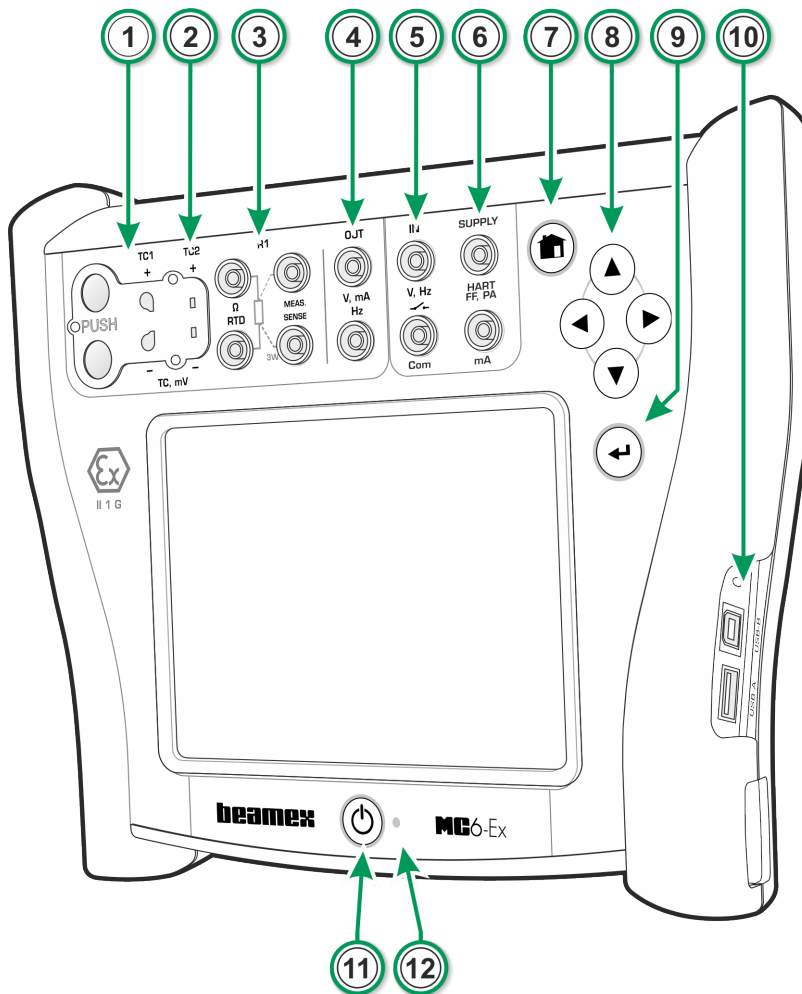


**Figure 3: MC6-Ex, overview**

Legend:

1. **Thermocouple** and **Millivolt** port (TC1) with release buttons. The port is designed for cables and standard TC plugs.
2. **Thermocouple** and **Millivolt** port (TC2). The port accommodates TC plugs with flat contacts.
3. **RTD** and **Resistor** terminals (R1). An R2 connector is located on the top of the MC6-Ex.

4. **Voltage, Current, and Frequency** output (**OUT**).
5. **Voltage, Frequency, and Switch** input (**IN** and **Com**).
6. **Current Measurement, Loop Supply, Supply** voltage and **Smart instrument** (HART and fieldbus) terminal (**IN**).
7. **Home** button — press to return to Home View.
8. **Arrow** buttons — press once to display the hardware focus indicator.
9. **Enter** button — selects the item surrounded by the hardware focus indicator.
10. **Connectors** on the right side of MC6-Ex.
11. **Power** button.
12. Light Emitting Diode (LED). See more in chapter [Checking Battery Level and Charging Status](#).

### MC6-Ex - Top View

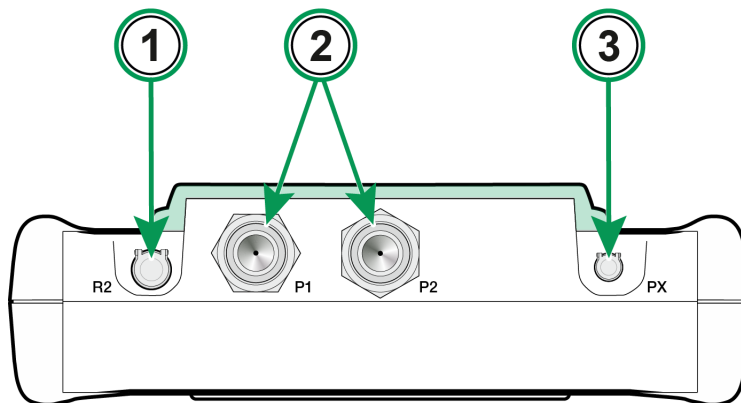

**Figure 4: MC6-Ex, top view**


Legend:

1. **R2** connector (6-pin LEMO). Provides the possibility to connect an external RTD sensor to MC6-Ex.
2. Pressure connections P1 and P2 for optional internal pressure modules. See the available ranges and connections in chapter [Pressure Modules](#).
3. **PX** connector (4-pin LEMO). Provides the possibility to connect Beamex external pressure module to MC6-Ex.



**Warning:** The PX connector shall only be connected to the EXT-IS or EXT-s-IS external pressure module in a hazardous area.

## MC6-Ex - Side View

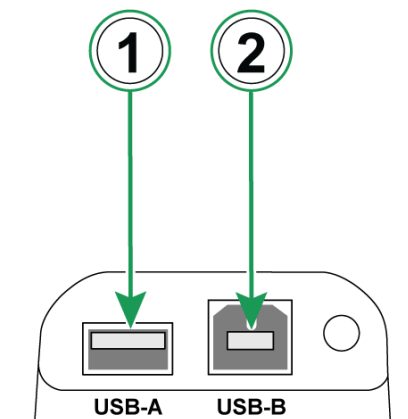

**Figure 5: Connectors on the right side of MC6-Ex**

Legend:

1. **USB-A** port for connecting various USB devices, such as external controllers and a Bluetooth adapter, to MC6-Ex.
2. **USB-B** port used for communication with a PC.



**Warning:** Do not use the USB ports or the USB Bluetooth adapter in a hazardous area. Remove the adapter before entering any hazardous area. Wireless Communication may only be used in a safe area.

---

## Pressure Modules


Beamex offers a wide range of internal and external pressure modules for MC6-Ex, covering pressure ranges from barometric up to 1000 bar. MC6-Ex can hold two internal pressure modules and one barometric pressure module. In the MC6-Ex User Interface, pressure modules are labeled as **Pn: P1C**, where:

- **n** refers to the location of a pressure module.
- **P1C**, and similar, represent the pressure module types.

In addition to the internal modules, one external module can be connected to the calibrator at a time using the PX connector and a communication cable.

### Barometric Pressure Module

The optional internal barometric pressure module is located inside MC6-Ex, with a measurement opening on the back side of the calibrator. For accurate barometric pressure readings, do not plug the measurement opening.

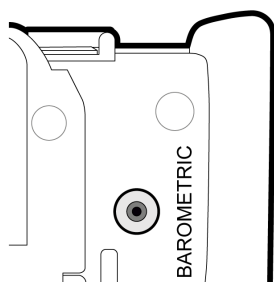

**Figure 6: Venting hole of the internal barometric module**

**Table 3: Available pressure measurement module types and their measurement ranges**

Internal modules	External modules	Range	Pressure connection
PB-Ex	EXTB-IS	70 ... 120 kPa a 700 ... 1200 mbar a 10.15 ... 17.4 psi a	10/32" (M5) female
P10mD-Ex	EXT10mD-IS	±1 kPa diff ±10 mbar diff ±4 iwc diff	2 x adapters for 1/8" ID hose (3,2 mm)
P100m-Ex	EXT100m-IS	0 ... 10 kPa 0 ... 100 mbar 0 ... 40 iwc	Bx G1/8" male compatible with Beamex 40 bar hoses
P400mC-Ex	EXT400mC-IS	±40 kPa ±400 mbar ±160 iwc	Bx G1/8" male compatible with Beamex 40 bar hoses
P1C-Ex	EXT1C-IS	±100 kPa ±1 bar -14.5 ... 15 psi	Bx G1/8" male compatible with Beamex 40 bar hoses
P2C-Ex	EXT2C-IS	-100 ... 200 kPa -1 ... 2 bar -14.5 ... 30 psi	Bx G1/8" male compatible with Beamex 40 bar hoses
P6C-Ex	EXT6C-IS	-100 ... 600 kPa -1 ... 6 bar -14.5 ... 90 psi	Bx G1/8" male compatible with Beamex 40 bar hoses

Internal modules	External modules	Range	Pressure connection
P20C-Ex	EXT20C-IS	-100 ... 2000 kPa -1 ... 20 bar -14.5 ... 300 psi	Bx G1/8" male compatible with Beamex 40 bar hoses
P60-Ex	EXT60-IS	0 ... 6000 kPa 0 ... 60 bar 0 ... 900 psi	<u>P60-Ex</u> : Bx 1215 male compatible with Beamex 630 bar hoses <u>EXT60-IS</u> : G1/4" B male
P100-Ex	EXT100-IS	0 ... 10 MPa 0 ... 100 bar 0 ... 1500 psi	<u>P100-Ex</u> : Bx 1215 male compatible with Beamex 630 bar hoses <u>EXT100-IS</u> : G1/4" B male
P160-Ex	EXT160-IS	0 ... 16 MPa 0 ... 160 bar 0 ... 2400 psi	<u>P160-Ex</u> : Bx 1215 male compatible with Beamex 630 bar hoses <u>EXT160-IS</u> : G1/4" B male
-	EXT250-IS	0 ... 25 MPa 0 ... 250 bar 0 ... 3700 psi	G1/4" B male
-	EXT600-IS	0 ... 60 MPa 0 ... 600 bar 0 ... 9000 psi	G1/4" B male
-	EXT1000-IS	0 ... 100 MPa 0 ... 1000 bar 0 ... 15,000 psi	G1/4" B male




**Note:** Use caution when working with pressure and pressure modules. For more information, see chapter [Warnings Concerning Pressure](#).

---

## Support Stand

The support stand can be raised to support MC6-Ex when placed on a table, making the touch screen easier to operate. By rotating the stand up, you can hang MC6-Ex on, for example, a pipeline — keeping your hands free while calibrating instruments.

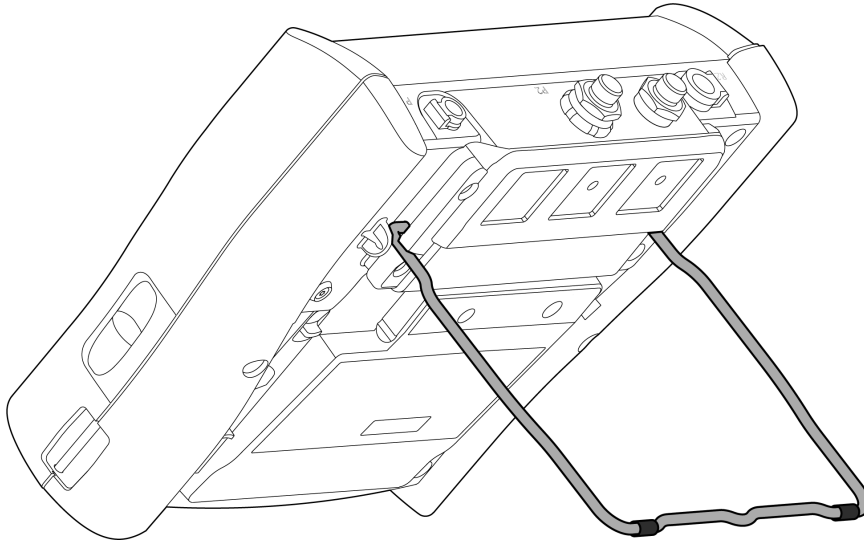

**Figure 7: MC6-Ex support stand**

---

## Memory and Data Management

The MC6-Ex can safely store a large amounts of data, such as instruments, calibration results, and data logs. The data is stored on solid-state memory that preserves information without requiring power. This shock-proof memory ensures that no data is lost even if the calibrator is damaged.

All data is stored locally on the MC6-Ex. The calibrator does not transmit any user-entered or generated data to Beamex.

You can erase all data with a factory reset. For more information, see chapter [Resetting the Calibrator](#).



**Caution:** Deleted data cannot be recovered.

---

## Display

The MC6-Ex features a backlit 5.7" TFT LCD display with a resolution of 640×480 pixels and a responsive touch panel. You can operate the touch

screen with your fingers, whether wearing gloves or not. Optionally, use a stylus designed for touch screens.



**Tip:** For brightness adjustments, see chapter [Settings](#).



**Warning:** Do not tap the touch screen with sharp or hard objects, and avoid pressing hard on the display, especially with fingernails. Always tap gently with your fingertips. Using sharp tools like screwdrivers can damage the screen.

## Battery and Charging

The MC6-Ex is powered by a removable, rechargeable Nickel Metal Hydride (NiMH) battery pack, type RB-796-Ex.



**Note:** For detailed battery safety instructions, refer to chapter [Warnings Concerning the NiMH Battery Pack](#).

## Checking Battery Level and Charging Status

An icon indicating battery level (or a plug when the battery is full) is visible in several user interface views.



**Figure 8: Battery level icons**

Battery operating time without recharging varies based on the use of the display backlight and transmitter supply voltage. Under constant full load, the standard rechargeable batteries should provide approximately 4 hours. In typical conditions, an average operating time of 6 hours can be expected.



**Note:** Nickel Metal Hydride (NiMH) batteries have a higher self-discharge rate than lithium-ion types. A fully charged RB-796-Ex battery pack typically loses 10–20% of its capacity per month at room temperature when not installed in the calibrator. When connected to an MC6-Ex calibrator in Power Off mode, the battery pack generally discharges within 6–8 weeks.



**Note:** An approximate time (hh:mm) appears on the battery icon:

- **Charging time remaining** — while charging
- **Operating time remaining** — while running on battery

For detailed battery and charging status, tap the battery icon.



**Caution:** The MC6-Ex internal clock and calendar consume a small amount of power even when the calibrator is switched off. Check the battery capacity periodically, even if the MC6-Ex is not being used. Recharge when necessary.

Light Emitting Diode (LED) – #12 in [Figure 3: MC6-Ex, overview](#) – shows battery and charging status as follows:

- **Charging:** Flashes once per second while charging.
- **Fully charged:** Stays continuously lit when charging is complete and the charger remains connected.
- **Low battery:** Briefly lights up for one second every 10 seconds.




**Note:** During normal operation, when the batteries have sufficient capacity, the LED remains off.

To check the battery level, press the **Push for status** button on the back of the MC6-Ex (see [Figure 9: MC6-Ex, rear view](#)). The Status LED will indicate the level according to the table below.

Status LED Color	Capacity
Blinking Red	Less than 20%
Red	20% to less than 40%
Yellow	40% to less than 60%
Green	60% to less than 80%
Blinking Green	80% to 100%


## Charger and Charging Procedure

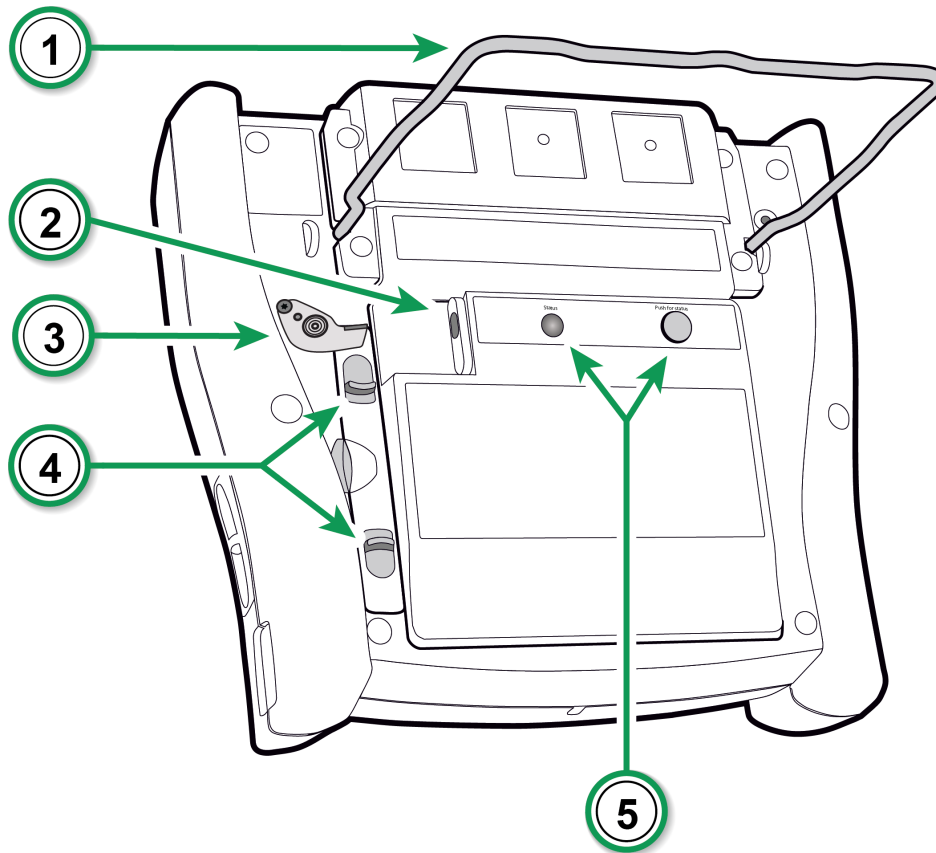

**Figure 9: MC6-Ex, rear view**

Legend:

1. Support stand
2. Charger connector
3. Battery safety mechanism
4. Battery tabs
5. Status LED and **Push for status** button

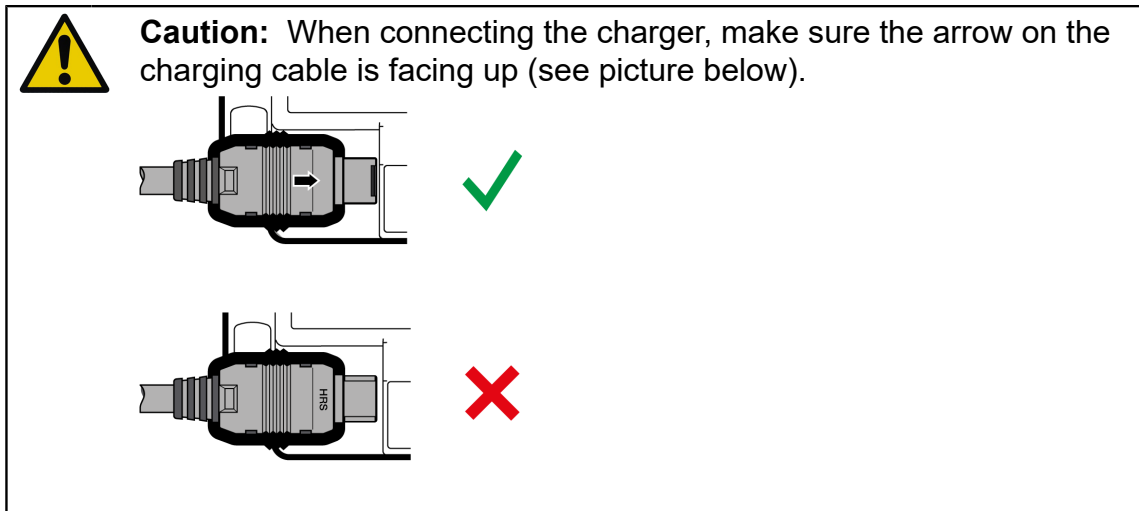

The MC6-Ex can be used during battery charging. It takes approximately 10 hours to fully charge empty batteries. The Status LED (5 in [Figure 9: MC6-Ex, rear view](#)) shows the charging status as described in the table below.


Status LED Color	Charge Status	Explanation
Yellow	Initiating	Charging starts
Blinking Red/Green	Failure	Failed to start charging
Blinking Red	Soft start	In special cases*
Blinking Yellow	Rapid Charge	Main charge phase
Blinking Green	Trickle Charge	Approaching full charge
Green	Full	Battery full

\* Battery voltage is low, or temperature inside the battery pack is too high or too low

During charging, the battery icon and plug symbol alternate on the status bar. Once charging is complete, only the plug symbol is shown.

When MC6-Ex is turned off and connected to the charger, the battery icon appears on the display.

After some time, the estimated charging time is shown below the battery icon.

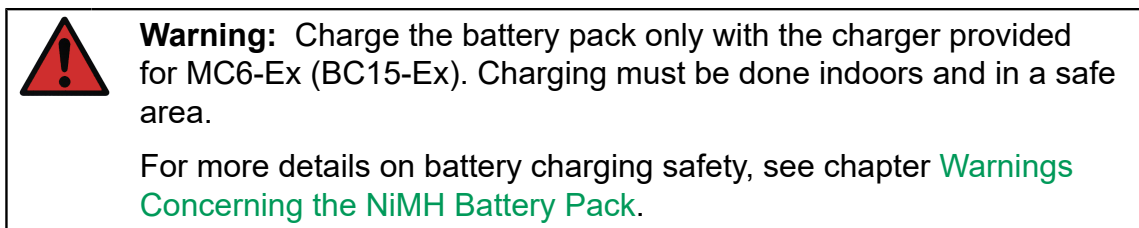

# Power Management


To start the MC6-Ex press and hold the **Power** button for a few seconds. The startup procedure ends in the **Home View**.




**Figure 10: MC6-Ex Power button**


Pressing the **Power** button while the MC6-Ex is running opens the Power Menu dialog with the following options:

- **Power Off** — shuts down the MC6-Ex, using minimum battery power and requiring a full startup on next power-on.
- **Standby** — puts the MC6-Ex into Standby Mode, allowing faster startup when the **Power** button is pressed again.
- **Backlight Off** — temporarily turns off the display backlight

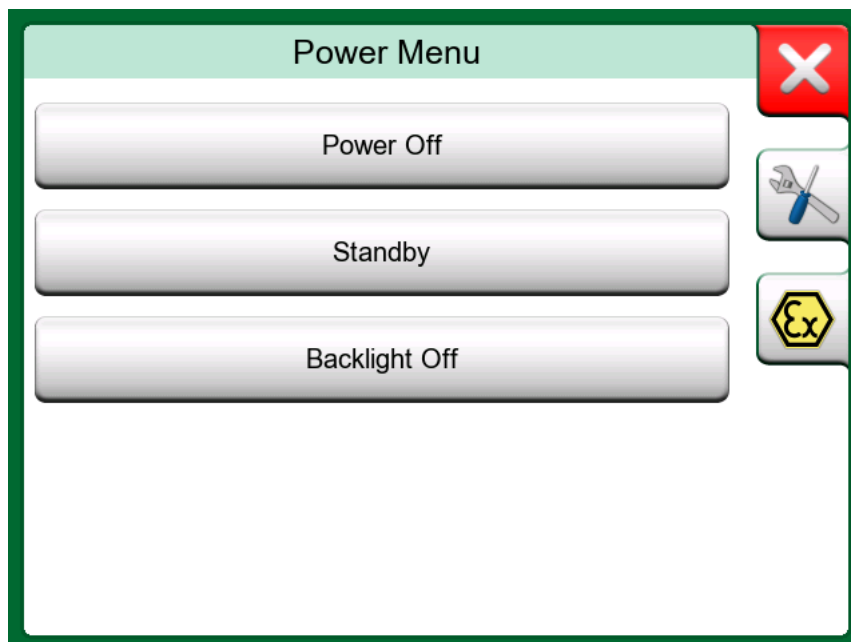


**Figure 11: Power Menu dialog**

Pressing the **Tools** button () in the Power Menu window opens **Power Management** window, where you can adjust the Backlight Brightness and set auto-off delays for the backlight, display, and calibrator to save battery power.

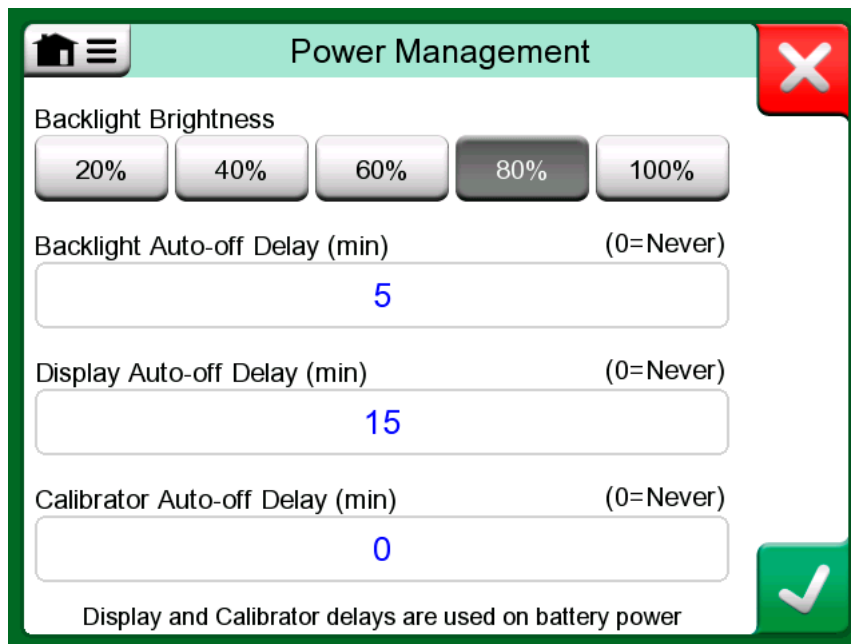


**Figure 12: Power Management window**

 **Note:** Auto-off feature is disabled in the following cases:

- Charger is connected
- Adjusting MC6-Ex own measurement, generation, or simulation ranges
- A data log is in progress
- An instrument calibration is in progress

## User Interface

The MC6-Ex offers several user interface modes optimized for different use cases.


 **Note:** Some modes are optional and become available after enabling the software option.

## Home View and User Interface Modes


Starting from the MC6-Ex **Home View**, you can access any available user interface mode. This manual provides detailed information on the main user interface modes as follows:

- [Meter](#)
- [Calibrator](#)


- Documenting Calibrator
- Data Logger
- Communicator
- Settings

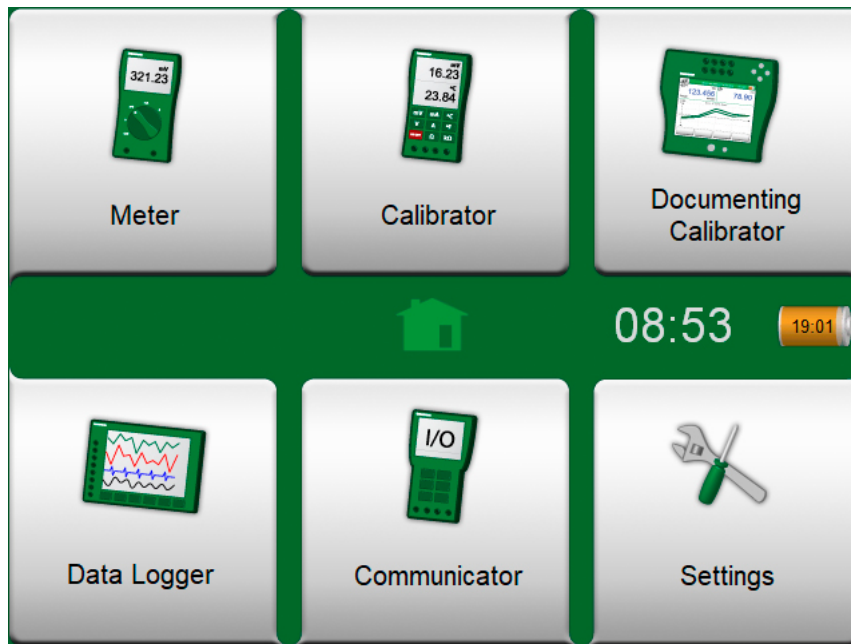

**Figure 13: Home view**



**Tip:** Use the **Home** button to quickly return to the Home View from anywhere.



**Figure 14: Home button**

## Interacting with MC6-Ex

You can interact with MC6-Ex by tapping the available buttons and controls displayed on the touch screen. Alternatively, use the hardware **Arrow** buttons to navigate between buttons and controls. The first time you press a hardware **Arrow** button, the hardware focus indicator appears as a blue border around the active button or control. When navigating with the hardware Arrow buttons, press the hardware **Enter** button to confirm a selected button or control.



**Figure 15: Button with and without hardware focus indicator**

Buttons often open pop-up windows for entering data—for example, tapping a unit button labeled mmH<sub>2</sub>O opens a pop-up window with available units. Some buttons have special functions, such as **Accept** and **Close** buttons, which close pop-up windows and either confirm or cancel changes. Other buttons allow you to move to the next or previous page or scroll through wide tables. **Back** button (←) can, for example, delete a number in a numeric field or clear a numeric field.




**Figure 16: Accept button (left) and Close button (right)**

The **Menu** button, located in the upper left corner of nearly every window, opens a context-sensitive menu.



**Figure 17: Menu button**

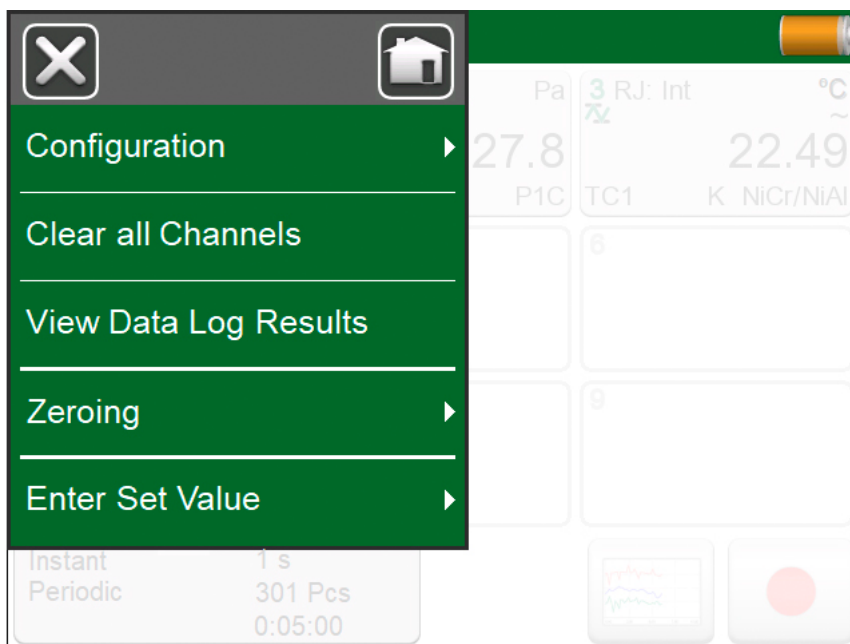


**Figure 18: Open menu example**

**Check Boxes** are a special type of button that can be either checked or unchecked.



**Figure 19: Check boxes – checked (top) and unchecked (bottom)**

MC6-Ex also includes flat buttons, commonly used in lists. Their color may vary depending on the context. For example, to visually group calibration events, combined results belonging to the same event share the same shade of gray background. If an instrument's settings have changed, the related field displays a blue background.

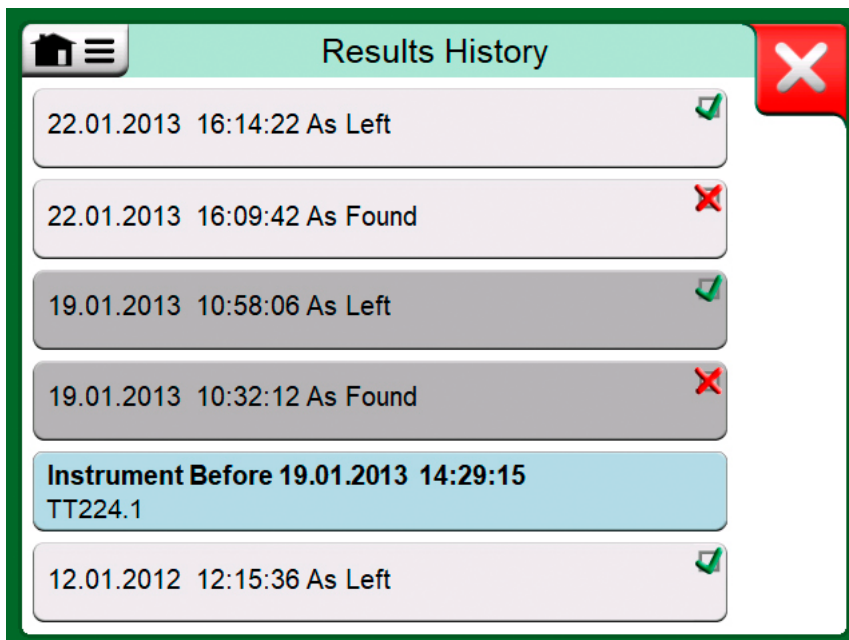

**Figure 20: Flat button list example**


## Editable Fields

The following editable fields are available:


- **Text fields,**
- **Numeric fields** (in certain cases including Spinning)
- **Date/Time fields.**

## Text Fields

Letters and numbers in editable fields are shown in **blue** to indicate that they can be modified. **Black** text represents descriptive user interface labels that are not editable. An example of a text field and its edit window is shown in the images below.

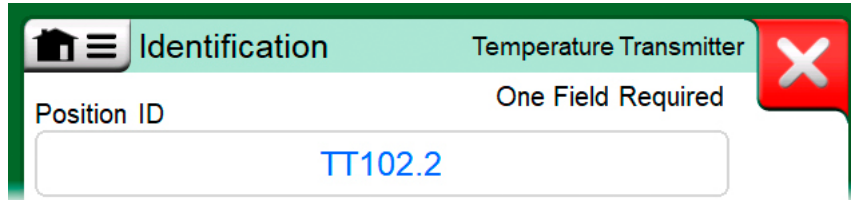

**Figure 21: Text field**

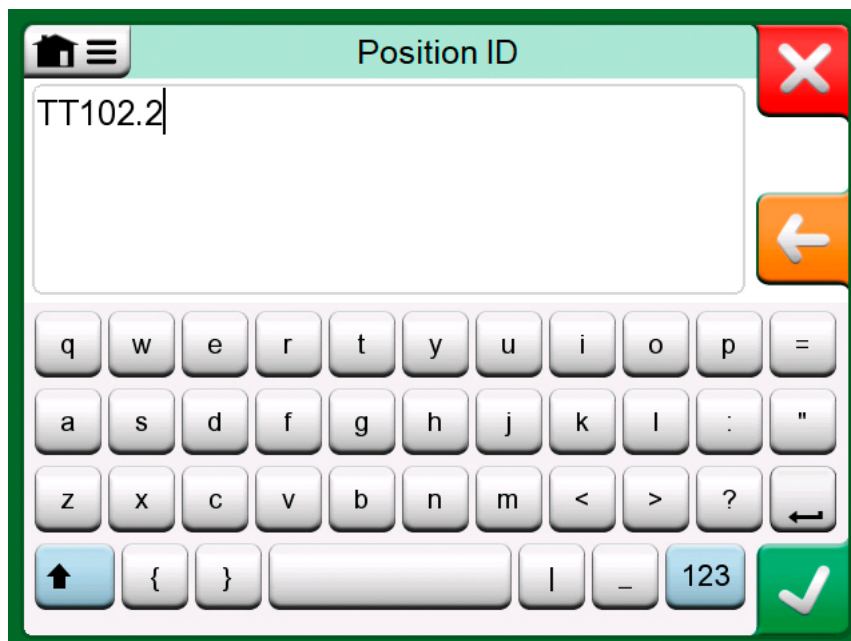


**Figure 22: Text edit window**

## Numeric Fields

Numeric fields are used when a generated, simulated, or other numerical value is either empty (displaying dashes) or when a new value is needed. To enter a value:

1. Tap the field to open the **soft numeric keypad**.

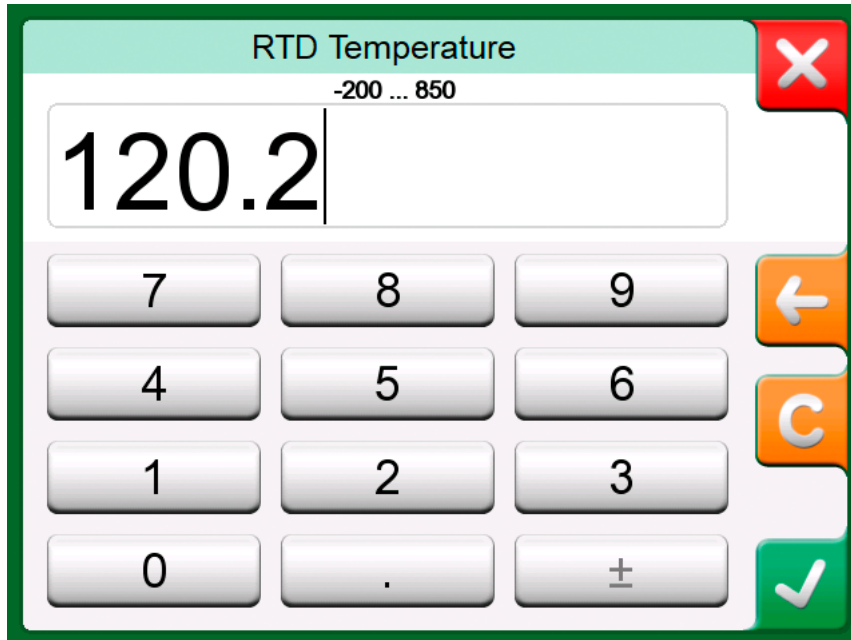

**Figure 23: Soft numeric keypad**

2. Use the keypad to enter the desired value.



**Tip:** Use the **Clear** button (C) to clear the entered value. The **Back** button (←) will delete the number to the left of the cursor.

3. Close the keypad by tapping **Accept** button — the entered value will then be applied.



**Note:** MC6-Ex may use the entered value as a source for determining resolution. To ensure useful resolution, include trailing zeros where appropriate.


When applicable, **minimum and maximum limits** for the value are displayed above the numeric entry. If you enter a value outside these limits and attempt to accept it, MC6-Ex will stay in the keypad window and replace your entry with the nearest acceptable limit, highlighting the replaced value.



**Note:** Because the MC6-Ex uses floating-point numbers with six significant digits, rounding errors may occur in the seventh digit. When converting between binary and decimal values, exact matches may not always be found.



**Tip:** To input very small or large numbers into the **Factor** field, use the context-sensitive menu in the **Soft Numeric Keypad**. When available, this menu lets you insert an exponent and enter values in scientific notation, like 5.775E-07.

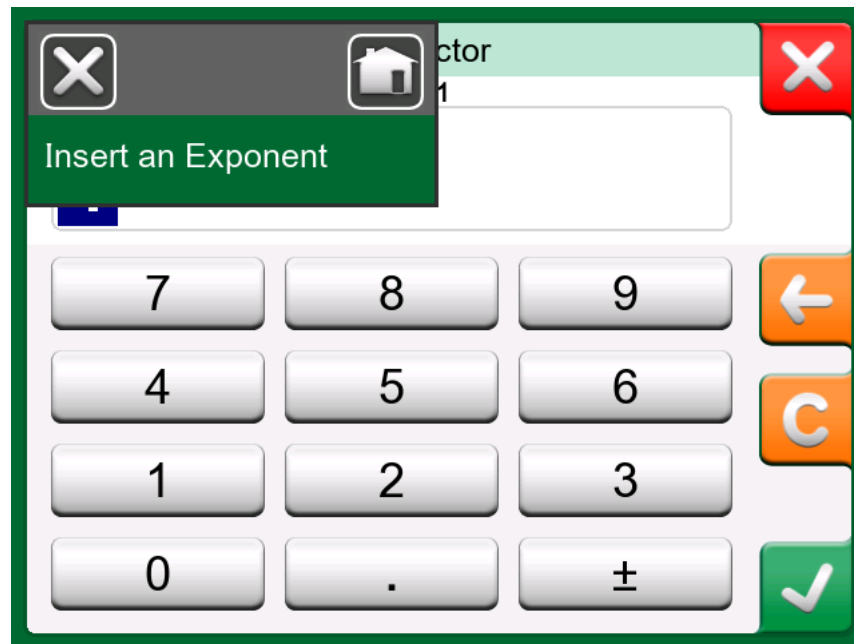


**Figure 24: Context-sensitive menu in Factor window — Insert an Exponent**

## Spinning

Spinning is a tool available in **Calibrator** and **Documenting Calibrator** modes. It allows small, digit-by-digit adjustments to an existing numeric value.

Non-empty numeric fields in generation and simulation windows have a

**Spinner** button () to the left of the value. Tap the **Spinner** button to activate spinning.



**Figure 25: Active spinner**

When spinning is active, one digit will be highlighted. Use the **Up** and **Down** arrow buttons to increase or decrease its value. **Left** and **Right** arrow buttons will move the highlight to another digit.



**Figure 26: Inactive spinner**

To stop spinning, tap the **Spinner** button again.



**Note:** Changes made with the Spinner are applied immediately to the generated or simulated signal.

You cannot exceed the function's defined minimum and maximum limits.


The spinned value follows the resolution rules of the function.

If the numeric field is empty (showing dashes), you must first enter a value using the soft numeric keypad before you can use the Spinning tool.

### Date/Time Fields

Date and time fields work as a specific case of numeric fields. Entering a date is done in the same way as entering a numeric value using the soft numeric keypad.

Setting the time for MC6-Ex is a special case of the Spinning functionality.

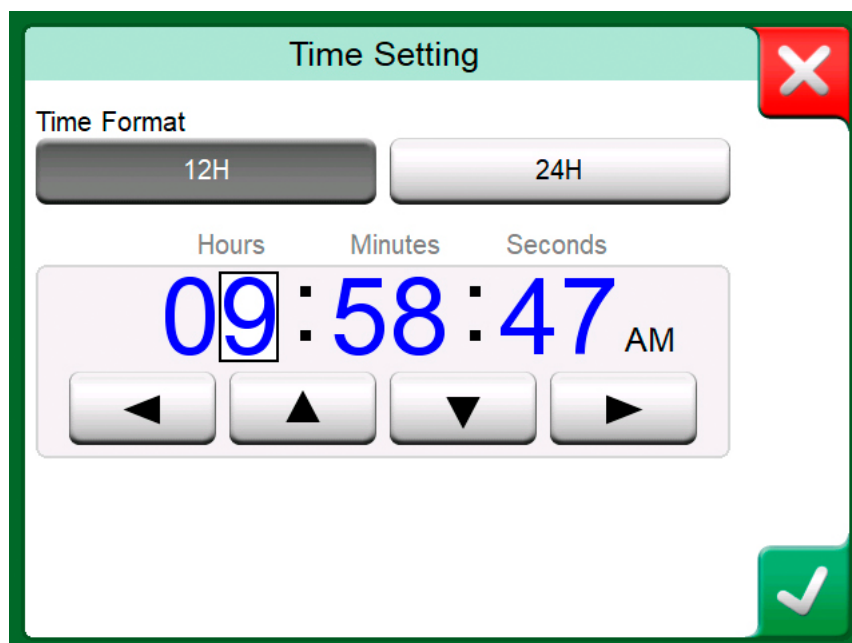

**Figure 27: Time Setting window**

---

# Calibration Management Software

The MC6-Ex communicates with Beamex CMX and LOGiCAL Calibration Management Software, supporting a fully digitalized calibration process.

The MC6-Ex must be connected to a PC to communicate with the software. It operates with Microsoft's generic USB driver (WinUSB) and supports Windows® 11 operating system.

## Communicating with LOGiCAL

MC6-Ex communicates with LOGiCAL via the Beamex Sync application installed on a PC. Communication options include USB cable or wireless communication.

For wireless communication, a **Wireless Communication** option and Bluetooth adapter are required. More details are provided in chapter [Wireless Communication](#).

For instructions on syncing data between MC6-Ex and LOGiCAL using Beamex Sync, refer to the [LOGiCAL Help](#).

## Communicating with CMX

MC6-Ex is compatible with CMX version 2.11.2 and later.

The MC6-Ex can establish direct communication with a PC with CMX installed, using either a USB connection or Bluetooth.

For Bluetooth communication, a wireless option and Bluetooth adapter are required. More details are provided in chapter [Wireless Communication](#).

In addition to local connections, MC6-Ex can communicate with CMX over Wide Area Networks via the Calibration Web Service Interface (CWSI).

Customers may either implement a local CWSI environment or use [Connect.beamex.com](https://connect.beamex.com), a secure web service hosted by Beamex.

For more details about transferring data between MC6-Ex and CMX, refer to the *CMX User Manual*.

---

# Options, Accessories and Services

To support your changing needs, Beamex regularly releases firmware updates that add features and enhance performance. You can also upgrade your

calibrator with additional hardware modules or software options. Accessories are available in the [Beamex Webshop](#). For further details, contact Beamex.

## Software Options

The following software options are available:

- **Communicator options for HART, FOUNDATION Fieldbus H1, or Profibus PA** allow the calibrator to function as a fieldbus communicator. All three options can be installed in the same unit. The Communicator user interface mode is activated when any of these protocols are installed.



**Note:** Fieldbus hardware capability must be installed with FOUNDATION Fieldbus and Profibus PA Communicator options. You can verify if the communication hardware required for fieldbus communication is installed on the first page of the **Settings > About** window.

- **Data Logger** allows logging of various measurement results. The Data Logger user interface mode is activated only if this option is installed.
- **Communication drivers** are available for external pressure controllers and temperature dryblocks, enabling fully automatic calibration of various pressure and temperature instruments.
- **Wireless Communication** functionality supports wireless transfer of instrument and calibration data between MC6-Ex and Beamex Calibration Management Software.



**Note:** Bluetooth is an alternative data transfer method between the calibrator and PC. USB cable connection is also supported.

- **Mobile Security Plus** technology ensures calibration data integrity during calibrations. This option works only with CMX Calibration Management Software, version 2.11 or later, and when the Mobile Security Plus option is installed in CMX and the MC6 family calibrator.



**Note:** The software options installed in your MC6-Ex can be viewed on the third page of the **Settings > About** window.



**Note:** You can purchase additional software options for your existing calibrator. After purchase, Beamex provides you with an option file (.opt). The option file is installed on the calibrator using the **MC6 Option Installer** PC tool. To purchase options, please contact Beamex Sales.

## Accessories and Related Products

You can use the MC6-Ex together with a wide selection of complementary products, including Beamex ePG Electric Pressure Pump and Controller, RPRT, IPRT, and SIRT temperature sensors, EXT External Pressure Modules, and calibration pumps for different pressure ranges. Visit the [Beamex website](#) for more details.

Accessories are available in the [Beamex Webshop](#).



**Warning:** The Soft case for MC6-Ex, EXT-IS and EXT-s-IS external pressure calibration modules, as well as the PGM calibration pump are approved accessories for use in a hazardous area.

## Services

Like any precision instrument, calibrators require regular calibration to maintain accuracy and meet compliance requirements. Keeping your calibrator up to date with scheduled recalibrations ensures reliable performance and extends its service life.

Beamex provides calibration services, repairs, and service plans to support the long-term performance of your equipment.

For details, visit the [Beamex website](#).

## Available PC Tools

A selection of PC tools is available under the Resources tab on the [MC6-Ex page](#) on the Beamex website. Available tools include:

- **Data Log Viewer** – transfer and view logged data from the calibrator on your PC. See chapter [Data Log Viewer](#) for details.
- **Option Installer** – install optional features on your calibrator. After purchasing a software option for an existing calibrator, Beamex creates and delivers an option file (.opt) to you.
- **Remote Controller** – control the calibrator from a PC, which is particularly useful for training purposes and capturing user interface screenshots.
- **Device Description Installer** – transfer updated Device Descriptions from your PC to the calibrator. More details can be found in chapter [Device Description Files](#).
- **Fieldbus Configuration Viewer** – view and manage smart instrument configurations. Additional information is available in chapter [Managing Smart Instrument Configurations in MC6-Ex](#).


# Calibration Capabilities and Connections

The MC6-Ex is a high-accuracy, multifunction calibrator designed for calibrating pressure, temperature, and a variety of electrical signals. This section of the user manual describes all the measurement, generation, and simulation functions the MC6-Ex can perform.

Each diagram shows which connectors and terminals to use for each function, along with the required connection cables and any optional connections.



**Tip:** The connection diagrams are also available in the Documenting Calibrator user interface mode to help make the required connections for the selected measurement, generation, or simulation function.

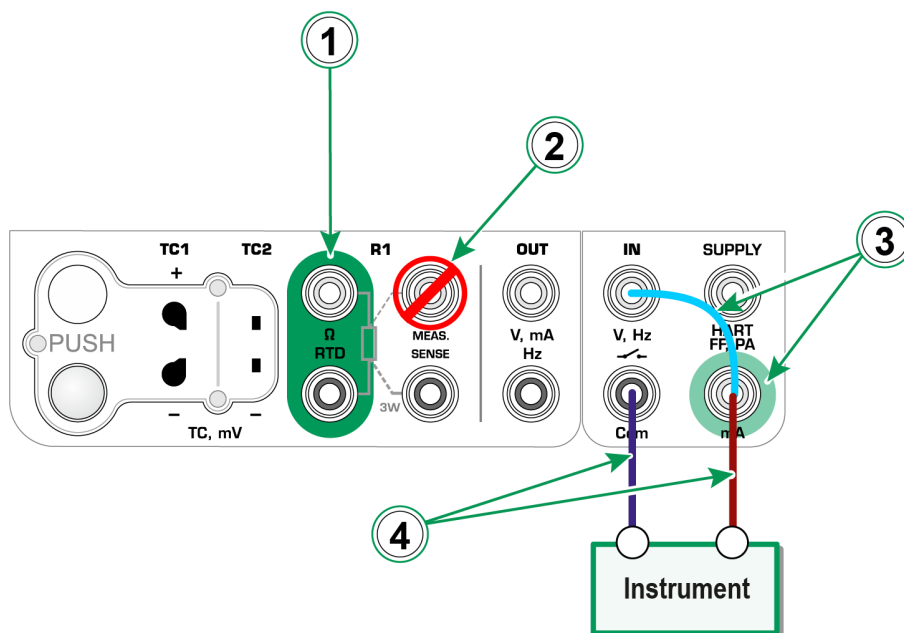

**Figure 28: Connection diagram example**

Legend:

1. Active terminals
2. Terminal not to be used
3. Possible optional connections
4. Connection cables



**Warning:** To prevent disturbances in the electrical network that could interfere with measurements, generations, or simulations, avoid connecting the charger while performing these operations.

For information about using external controllers like pressure controllers and temperature dry blocks in Calibrator and Documenting Calibrator modes, see chapter [Controller Communication](#).

## Measurements

### Pressure Measurement

MC6-Ex works with both internal pressure modules (if installed) and supported external pressure modules **EXT** when connected to the **PX** connector.

You can find the available pressure module types and their measurement ranges in chapter [Pressure Modules](#).




**Warning:** Always choose a pressure module with a measurement range appropriate for your pressure signal. Using a module outside its intended range can cause inaccurate results, damage to the module, or safety risks.



**Caution:** Accurate pressure measurement requires understanding the different **pressure types**: absolute, gauge, and differential. Measuring pressure without adequate knowledge of these types or the hazards of pressure devices can lead to incorrect measurement results and potentially serious accidents.

Please refer to the warnings in chapter [Warnings Concerning Pressure](#).

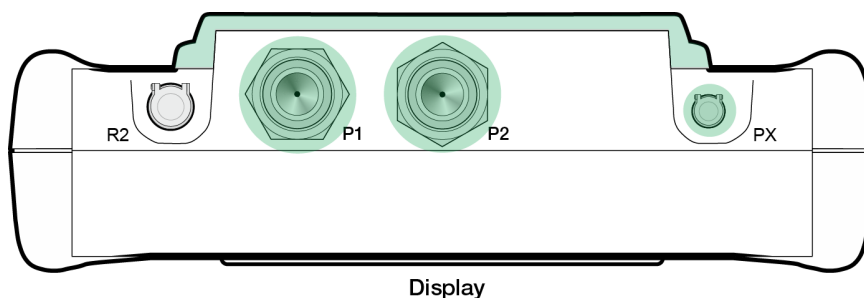

**Figure 29:** Internal pressure module connectors (P1 and P2) and connector for external pressure module communication cable (PX)



**Note:** The number of internal pressure modules in your MC6-Ex may not match the illustration shown above.


Before starting pressure measurements, check these settings:


- **Pressure Type** — lets you select the appropriate type based on your measurement setup.
- **Zeroing** — allows you to set the pressure module reading to zero.



**Figure 30: Pressure measurement buttons**



**Note:** If a selected pressure module does not display zero when no pressure is applied, it must be zeroed. To zero a pressure module, ensure zero gauge pressure is applied, then press the **Zero** button ()

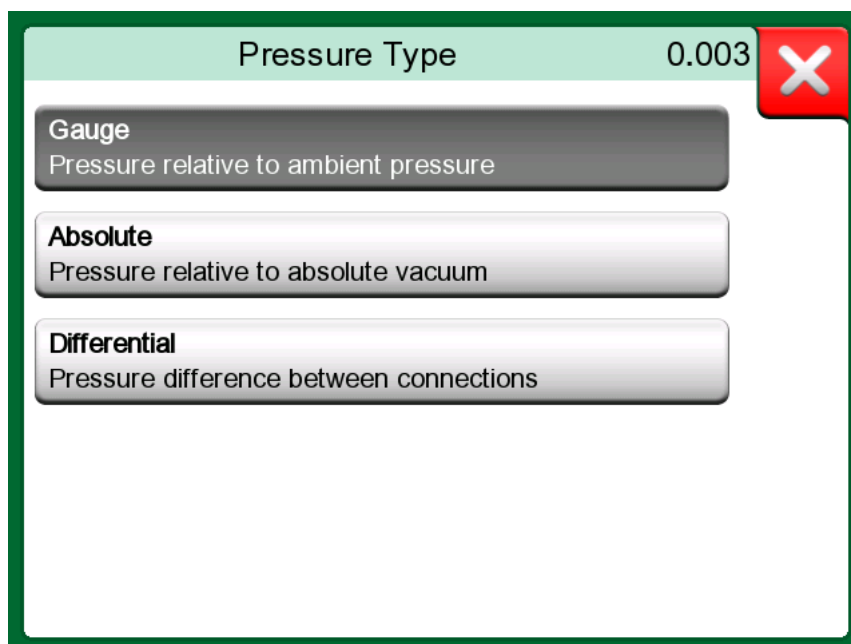


**Figure 31: Pressure Type window**

## User-Defined Pressure Units


When pressure is selected as the **Quantity**, you can choose from a wide range of pressure units organized across multiple pages. Additionally, you can add your own custom pressure units to the following page(s)

To create a new custom unit, go to the **Configuration** page, press **Create New** button (📄), and give the unit a clear, descriptive name.

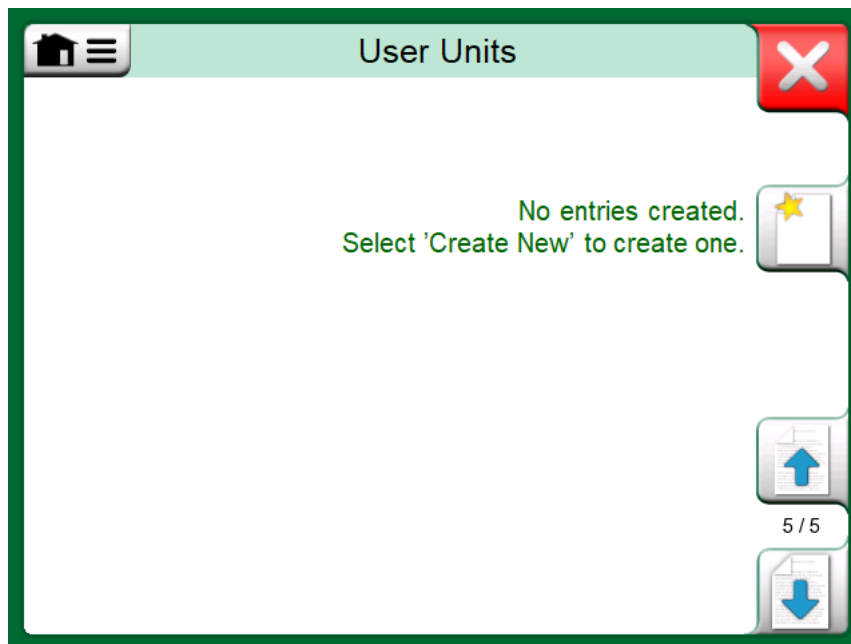


**Figure 32: User Units window — Create New button for user-defined pressure units**

Next, select a **Reference Unit** and enter the **Factor**, which defines the relationship between your new unit and the reference unit. The **Reference Unit** can be any of the predefined pressure units available in MC6-Ex.

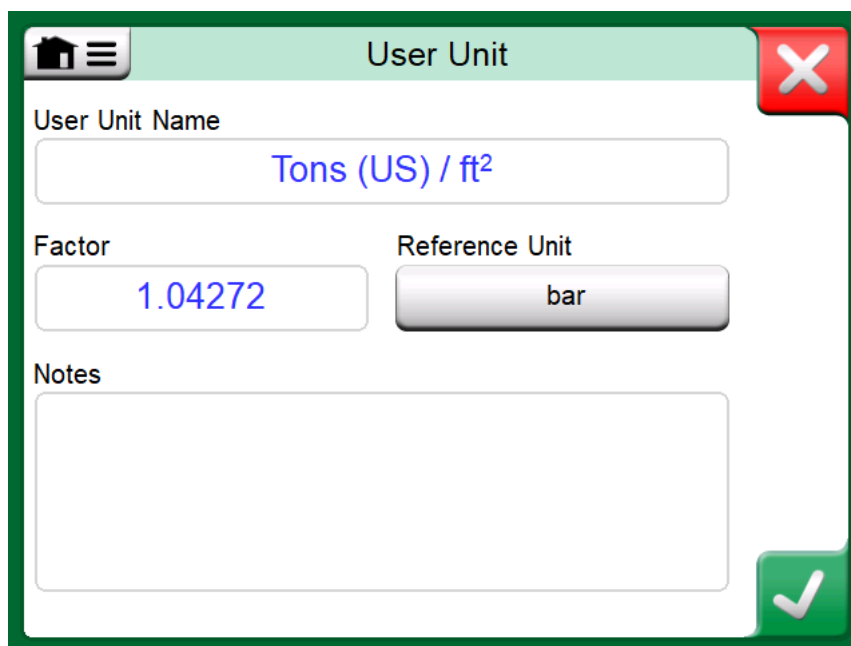

**Figure 33: User-defined pressure unit configuration window**

Whenever a custom unit is in use, a warning symbol ( $\Delta$ ) appears next to the unit's name, as shown in the example below. together with the name of the user defined pressure unit, as shown in the example below.

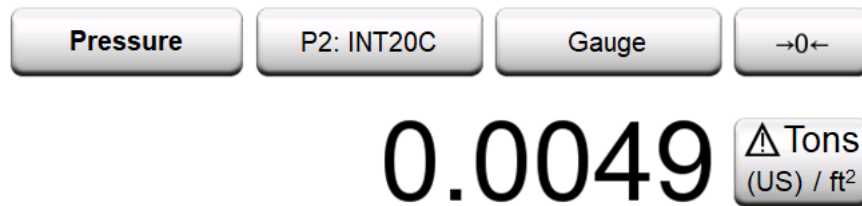

**Figure 34: User-defined pressure unit example in Calibrator**

Other user interface modes display the custom unit in a similar way.



**Note:** To select **pressure** as a **Quantity**, make sure you have either an internal barometric module or an external pressure module connected to MC6-Ex.

## Connecting and Disconnecting External Pressure Modules

All Beamex EXT external pressure modules use a 4-pin LEMO connector compatible with the PX connector.

When you connect an external pressure measurement module, MC6-Ex opens a dialog where you can review information and select where to use the connected module.

You can disconnect an external pressure module whenever needed. MC6-Ex will notify you when a module has been removed, and if it was active in a measurement, that measurement will stop.




**Note:** When using MC6-Ex with an EXT module together with CMX or LOGiCAL, keep the module connected to the calibrator while communicating with the software. This ensures that, if the module has been recalibrated, its calibration date is automatically updated in the CMX/LOGiCAL reference database.



**Warning:** The PX connector shall only be connected to the EXT-IS or EXT-s-IS external pressure module in a hazardous area.

## Temperature Measurement (RTD)

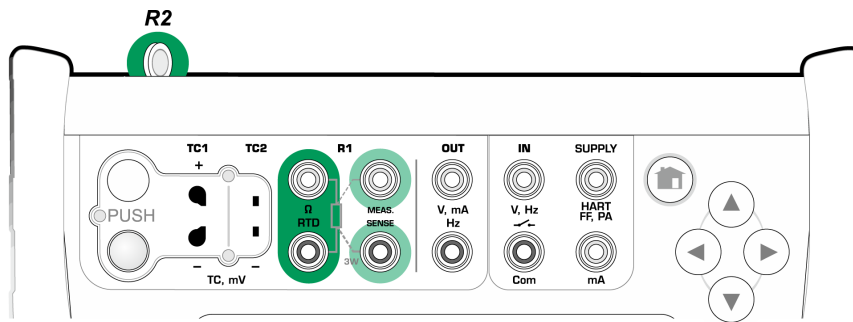

**Figure 35: RTD temperature measurement terminals**

MC6-Ex supports a range of standard Platinum Resistance Temperature (PRT) RTD sensors, available when RTD Temperature is selected as the Quantity. Always confirm the sensor type on your connected device and set the same type in your MC6-Ex unit. Incorrect settings will lead to inaccurate measurements. The available measurement range depends on the selected sensor type.


### For R1 terminals:

For 2-wire measurements, use the two leftmost terminals. MC6-Ex automatically detects and displays the wiring configuration (2-wire, 3-wire, or 4-wire) when a connection is made.



**Note:** For 3-wire systems, use the terminal marked "3W".

**For R2 connector:** All Beamex temperature sensors use a 6-pin LEMO connector compatible with the R2 connector. If you need to connect a non-Beamex Pt-sensor, suitable adapter cables can be found in the [Beamex Webshop](#).

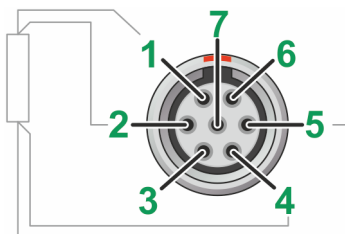

**Figure 36: Female connector (R2) in MC6-Ex**

R2 connector pin layout:

1. Excitation current +

2. Sense +
3. Not used
4. Sense -
5. Excitation current -
6. Not used
7. Not used

See also chapters:

- [RTD Simulation](#)
- [Resistance Measurement](#)
- [Resistance Simulation](#)




**Tip:** To ensure proper contact between the test leads and the device under test, we recommend using the supplied alligator clips.



**Note:** If you encounter a “+OVER” or “-OVER” error, check your connections. You can also use the 2-wire resistance measurement function to verify the wiring.

## Temperature Measurement (Thermocouple)

MC6-Ex has two thermocouple ports: **TC1** for standard thermocouple plugs and cables, and **TC2** for plugs with flat contacts.

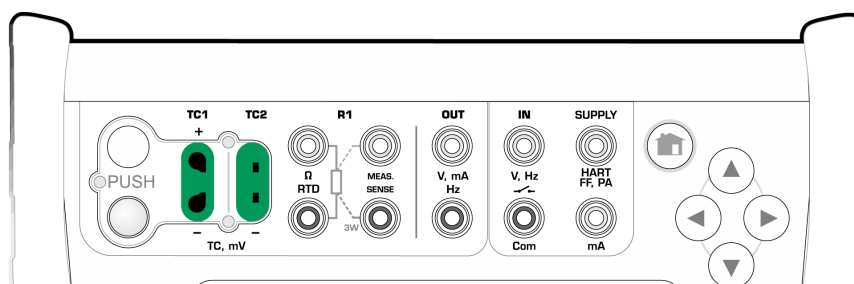

**Figure 37: Thermocouple temperature measurement terminals**

Before starting measurements, confirm the sensor type of your connected device and select the corresponding thermocouple type in your MC6-Ex. Choosing the wrong type will result in unreliable data. The available measurement range depends on the sensor type. Make sure to also select an appropriate **Reference Junction** compensation method. Incorrect settings will result in invalid measurement results.

See also chapters:

- [Thermocouple Simulation](#)
- [Voltage Measurement](#)




**Warning:** When using another thermocouple or an RTD connected to MC6-Ex to measure the external reference junction temperature, remember that there is no galvanic isolation between the connected devices.



**Note:** Thermocouple measurements can be sensitive to errors caused by poor connections, incorrect extension cables, or wrong settings in MC6-Ex. If you're uncertain about your setup, see chapter [Thermocouple Connections](#) and consult thermocouple reference materials.

## Resistance Measurement

Measurement range: -1 ... 4040  $\Omega$

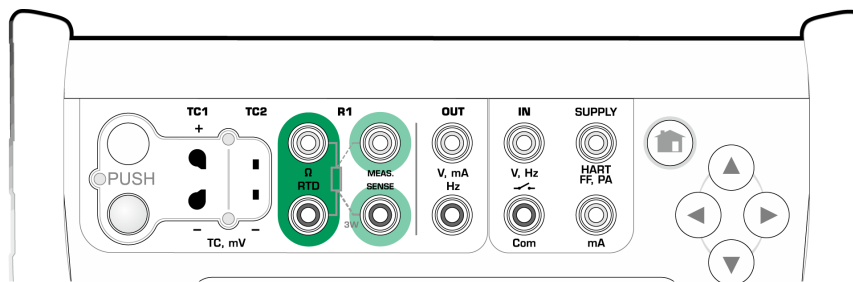

**Figure 38: Resistance measurement terminals**

### For R1 terminals:

For 2-wire measurements, use the two leftmost terminals. MC6-Ex automatically detects and displays the wiring configuration (2-wire, 3-wire, or 4-wire) when a connection is made.



**Note:** For 3-wire systems, use the terminal marked "3W".

**For R2 connector:** All Beamex temperature sensors use a 6-pin LEMO connector compatible with the R2 terminal. If you need to connect a non-Beamex Pt-sensor, suitable adapter cables can be found in the [Beamex Webshop](#).

See also chapters:

- [Resistance Simulation](#)
- [Temperature Measurement \(RTD\)](#)



**Note:** To ensure proper contact between the test leads and the device under test, we recommend using the supplied alligator clips.




**Note:** If you encounter a “+OVER” or “-OVER” error, check your connections. You can also use the 2-wire resistance measurement function to verify the wiring.

## Current Measurement


Measurement range (internal supply): **-101 ... 101 mA DC**

When measuring electric current, you need to decide whether MC6-Ex will supply the 24 V **loop supply voltage**. If it does not, an external device must be used to provide the loop supply voltage.

The connection depends on the selected loop supply setting.

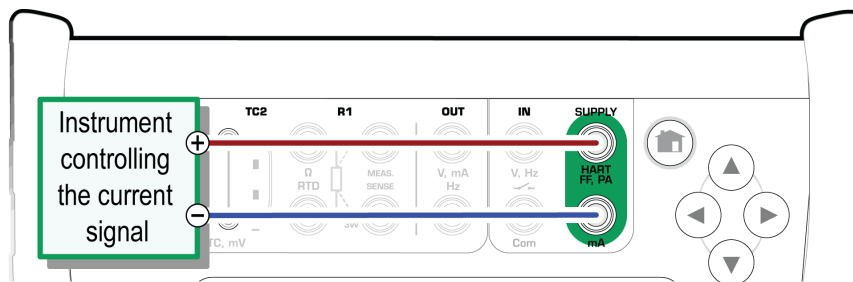

**Figure 39: Current measurement terminals, internal supply**

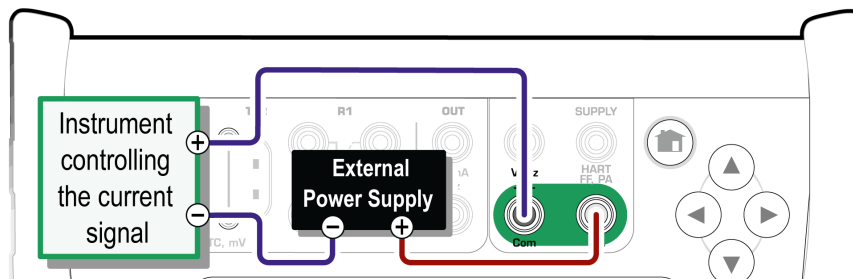

**Figure 40: Current measurement terminals, external supply**


See also chapter:

- [Current Generation \(Source or Sink\)](#)

## Voltage Measurement

The voltage measurement ports available on MC6-Ex, along with their ranges, are listed below:

- **TC1** Measurement range: -500 ... 500 mV DC
- **TC2** Measurement range: -500 ... 500 mV DC
- **IN** Measurement range: -30 ... 30 V DC

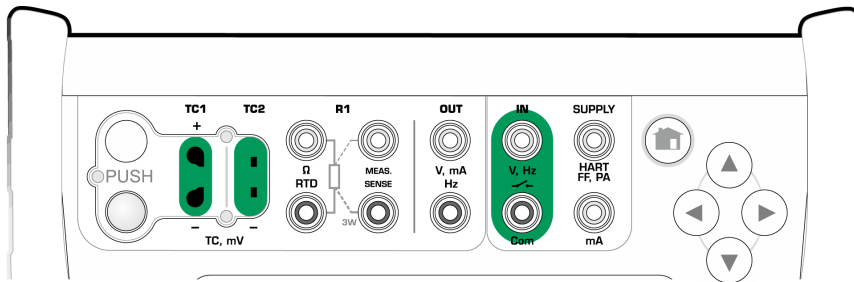

**Figure 41: Voltage measurement terminals**



**Note:** Non-supported thermocouple signals can be measured with MC6-Ex using the TC1 or TC2 ports. The result will be shown in millivolts (mV), and you'll need a reference table to convert those values into temperatures.



**Tip:** The **Scaling** function, available in Calibrator user interface mode, makes it possible to convert millivolt readings into temperatures.




**Warning:** Never apply hazardous voltages (over 30 V AC or 60 V DC) to the MC6-Ex terminals.

See also chapters:

- [Voltage Generation](#)
- [Temperature Measurement \(Thermocouple\)](#)

## Frequency Measurement

Measurement range: **0.0027 ... 51 000 Hz**

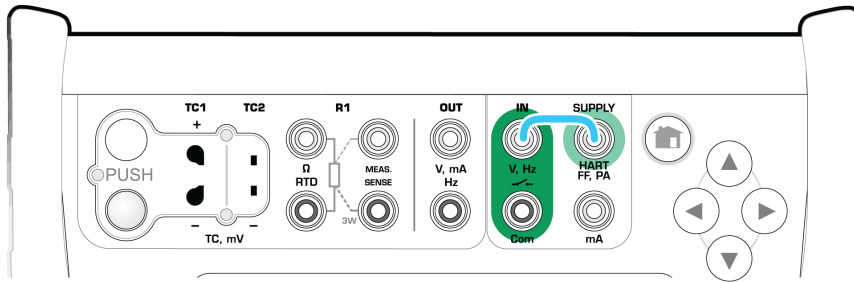

**Figure 42: Frequency measurement terminals**


When measuring frequency, be sure to select an appropriate **Trigger Level** setting. You can access the settings by pressing the Trigger Level button.



**Figure 43: Trigger Level button**

There are separate trigger level options for dry and wet contacts:

- **Dry Contact** — typically, the signal comes from a mechanical switch. MC6 supplies 3 V and sets the trigger level to 1 V, allowing it to detect the state of the contact.
- **Wet Contact** — the signal has its own internal voltage supply. You only need to set the trigger level voltage in the calibrator to detect the signal state. The value can also be manually adjusted using the **Manual Trigger Level (V) flat button**.

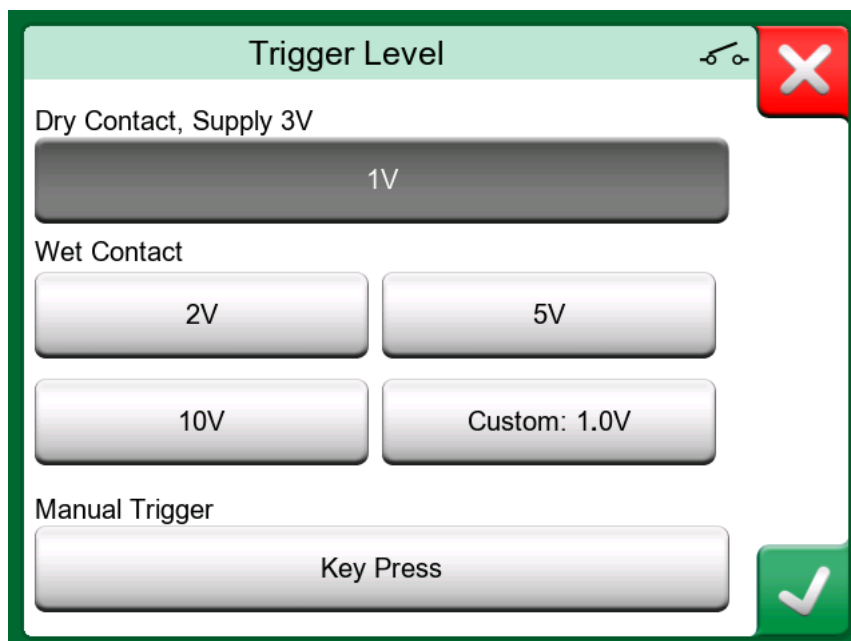

**Figure 44: Trigger Level window**

See also chapters:


- [Frequency Generation](#)
- [Pulse Counting](#)
- [Switch Sensing](#)



**Note:** MC6-Ex internal supply may be used either as a supply (with **Com**) or as a signal source (with **V**, **Hz** and **Switch**).

## Pulse Counting

Measurement range: **0 ... 9,999,999 pulses**

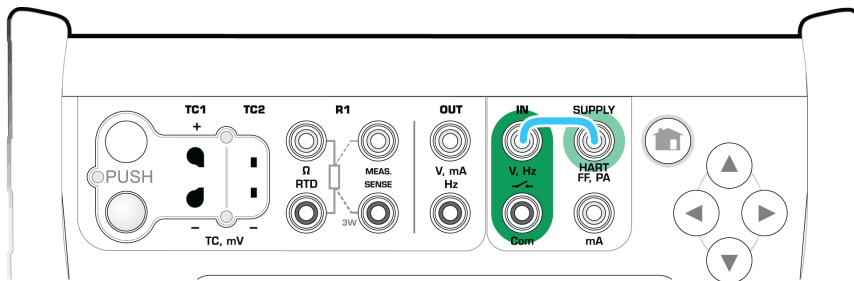


**Figure 45: Pulse counting terminals**

Before you start or restart a pulse count, make sure to check the following settings:

- **Trigger Level** — choose a level appropriate for your signal. For details, see chapter [Frequency Measurement](#).
- **Trigger Edge** — set to either rising or falling edge, depending on your needs.
- **Zeroing** — use this to reset the pulse count to zero if needed.



**Figure 46: Trigger Level, Trigger Edge, and Zeroing buttons**

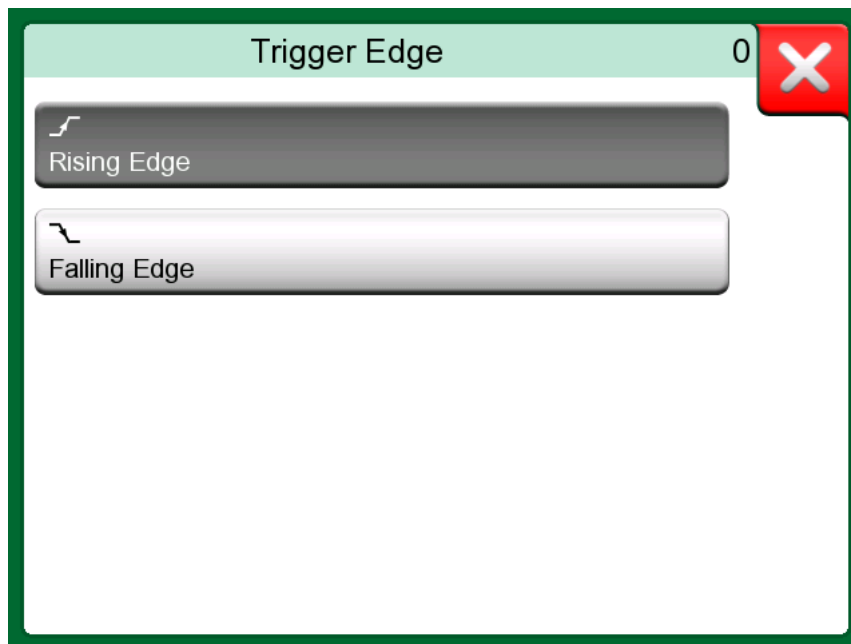

**Figure 47: Trigger Edge window**


See also chapters:

- [Pulse Generation](#)
- [Frequency Generation](#)
- [Frequency Measurement](#)



**Note:** MC6-Ex internal supply may be used either as a supply (with **Com**) or as a signal source (with **V**, **Hz** and **Switch**).

## Switch Sensing

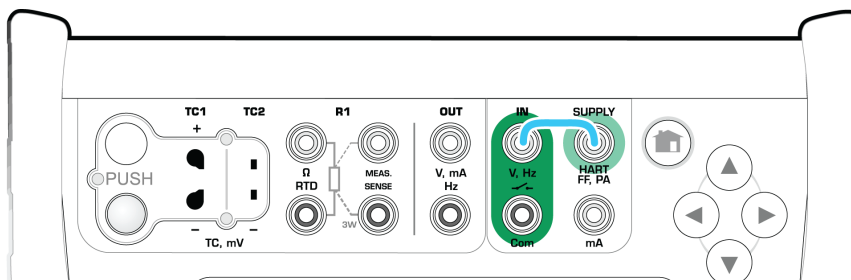


**Figure 48: Switch sensing terminals**

Make sure to check the following switch sensing settings:

- **IN: Normal** — allows you to reverse the open/close indication of the switch.
- **Trigger Level** — choose a trigger level suitable for your switch.
- **Switch Sound** — decide whether MC6-Ex plays a sound when the switch changes state, and define which event triggers it.



**Figure 49: Trigger Level and Switch Sound buttons**

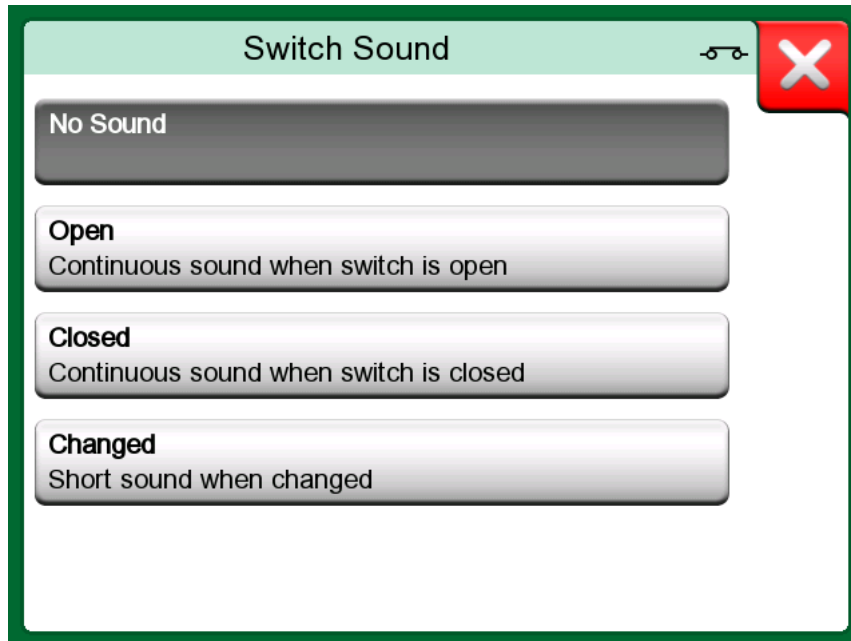

**Figure 50: Switch Sound window**

See also chapters:

- [Pulse Counting](#)
- [Pulse Generation](#)




**Note:** MC6-Ex internal supply may be used either as a supply (with **Com**) or as a signal source (with **V**, **Hz** and **Switch**).



**Tip:** Switch sensing can also detect binary signals.

By default, an open switch equals **1 / True** — and a closed switch equals **0 / False**.



**Tip:** For switches without an electrical contact, use the Manual Trigger by pressing the **Switch** button (  ) during calibration.

# Electrical Generations and Simulations


Generations and simulations are supported in **Calibrator**, **Documenting Calibrator**, and **Data Logger** user interface modes.



**Note:** The **Meter** mode cannot perform generations or simulations.

## RTD Simulation

RTD simulation is available only from the R1 terminals.

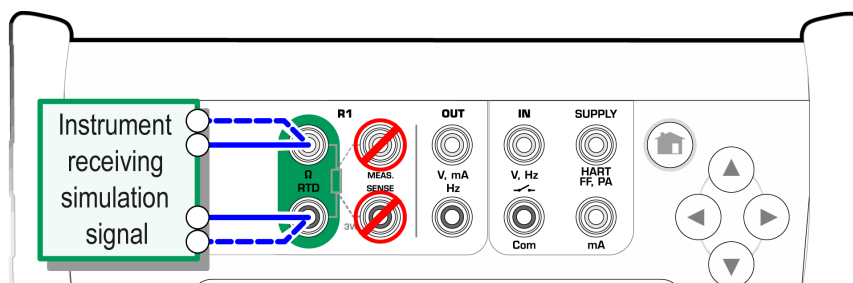

**Figure 51: RTD simulation terminals**

The receiving instrument determines whether a 2-, 3-, or 4-wire connection is used. Connect any additional third and fourth wires as required but always **use only the two leftmost R1 terminals** in MC6-Ex.

Always confirm the sensor type on your connected device and set the same type in your MC6-Ex unit. Incorrect settings will lead to inaccurate measurements. The available measurement range depends on the selected sensor type.

See also chapters:

- [Temperature Measurement \(RTD\)](#)
- [Resistance Simulation](#)



**Warning:** Keep in mind that RTD simulation accuracy can be affected if the connected transmitter uses a test pulse function that cannot be disabled.




**Tip:** To ensure proper contact between the test leads and the device under test, we recommend using the supplied alligator clips.



**Note:** AC measurement current from the device under test is not supported. If the device under test uses pulsed measurement current, include a delay of a few milliseconds before measuring resistance.

## Thermocouple Simulation

Thermocouple simulation is available only from the TC1 terminals.

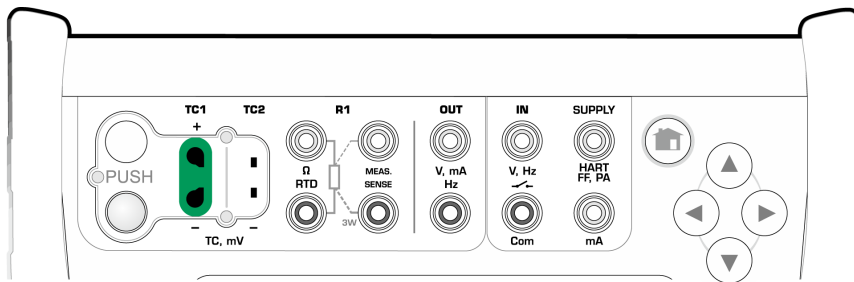

**Figure 52: Thermocouple simulation terminals**

Always confirm the sensor type on your connected device and set the same type in your MC6-Ex unit. Incorrect settings will lead to inaccurate measurements. The available measurement range depends on the selected sensor type. Make sure to also select an appropriate **Reference Junction** compensation method. Incorrect settings will result in invalid measurement results.

For more information on thermocouple connections and reference junction setting, see chapter [Thermocouple Connections](#).

See also chapter:

- [Temperature Measurement \(Thermocouple\)](#)



**Warning:** Keep in mind that thermocouple simulation accuracy can be affected if the connected transmitter uses a test pulse function that cannot be disabled.



**Warning:** When using another thermocouple or an RTD connected to MC6-Ex to measure the external reference junction temperature, remember that there is no galvanic isolation between the connected devices.




**Note:** Thermocouple measurements can be sensitive to errors caused by poor connections, incorrect extension cables, or wrong settings in MC6-Ex. If you're uncertain about your setup, see chapter [Thermocouple Connections](#) and consult thermocouple reference materials.

## Resistance Simulation

Resistance simulation is available only from R1 terminals.

Simulation range: 0 ... 4000  $\Omega$

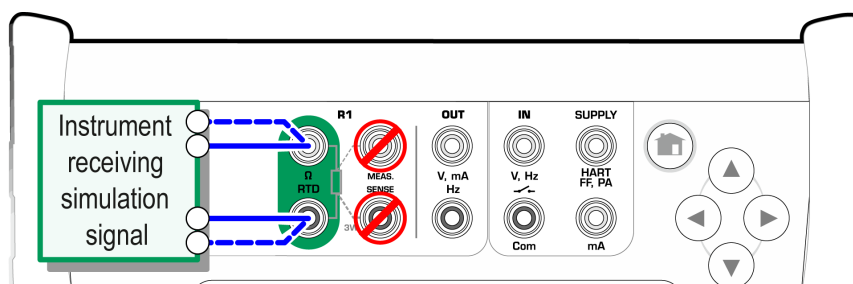

**Figure 53: Resistance simulation terminals**

The receiving instrument determines whether a 2-, 3-, or 4-wire connection is used. Connect any additional third and fourth wires as required but always **use only the two leftmost R1 terminals** in MC6-Ex.

MC6-Ex monitors the resistance measurement current. If the current rises too high, MC6-Ex cannot simulate the desired resistance value and will display an error message.

See also chapters:

- [Resistance Measurement](#)
- [RTD Simulation](#)



**Warning:** Keep in mind that resistance simulation accuracy can be affected if the connected transmitter uses a test pulse function that cannot be disabled.



**Note:** When you simulate the resistance or an RTD sensor using R1 terminals, MC6-Ex does not support measuring the simulated signal using R2 terminals.



**Tip:** To ensure proper contact between the test leads and the device under test, we recommend using the supplied alligator clips.



**Warning:** AC measurement current from the device under test is not supported. If the device under test uses pulsed measurement current, include a delay of a few milliseconds before measuring resistance.

## Current Generation (Source or Sink)

Generation range (internal supply): **0 ... 25 mA DC**

You can generate current with MC6-Ex using one of two methods:


- MC6-Ex provides a loop supply voltage (source mode).

Setting: **Supply: On.**


- An external device provides the loop supply voltage (sink mode)

Setting: **Supply: Off.**

Connection depends on the loop supply setting.

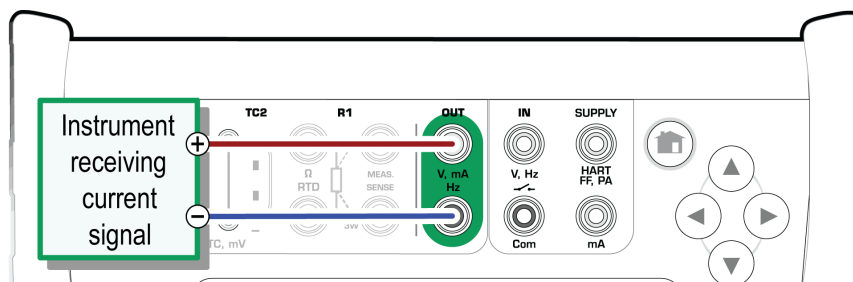

**Figure 54: Current generation terminals, internal supply**

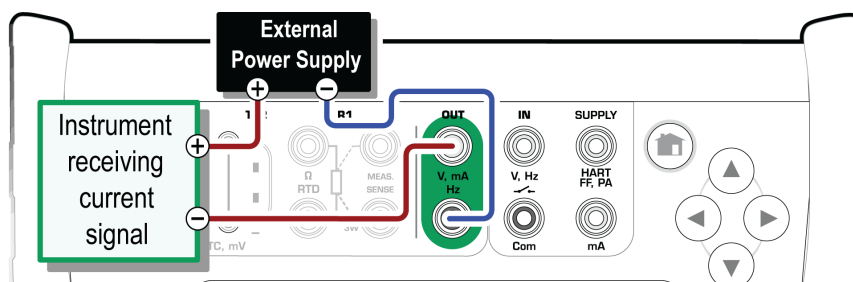

**Figure 55: Current generation terminals, external supply**

See also chapter:

- [Current Measurement](#)




**Note:** If MC6-Ex is supplying 24 V and you connect a smart instrument, the battery symbol (🔋) appears in the Documenting Calibrator and Data Logger user interface modes.

## Voltage Generation

The voltage generation terminals of MC6-Ex and their corresponding generation ranges are shown below:

- **TC1** Generation range: -500 ... 500 mV DC
- **OUT** Generation range: -1.5 ... 10.5 mV DC

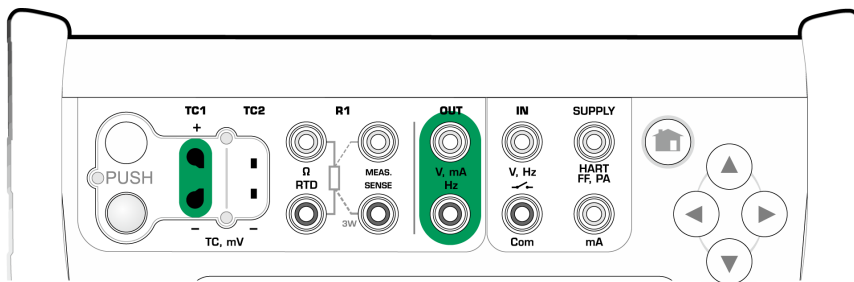

**Figure 56: Voltage generation terminals**

See also chapters:

- [Voltage Measurement](#)
- [Thermocouple Simulation](#)


## Frequency Generation

Generation range: **0.0005 ... 10 000 Hz\*** (see the note below)




**Note:** The default generation range: **0.0005 ... 3000 Hz.**

Signal quality at higher frequencies may be distorted due to the characteristics of the protective circuits. To prevent this, the extended range is turned off by default, but you can enable it under **Settings > General**.

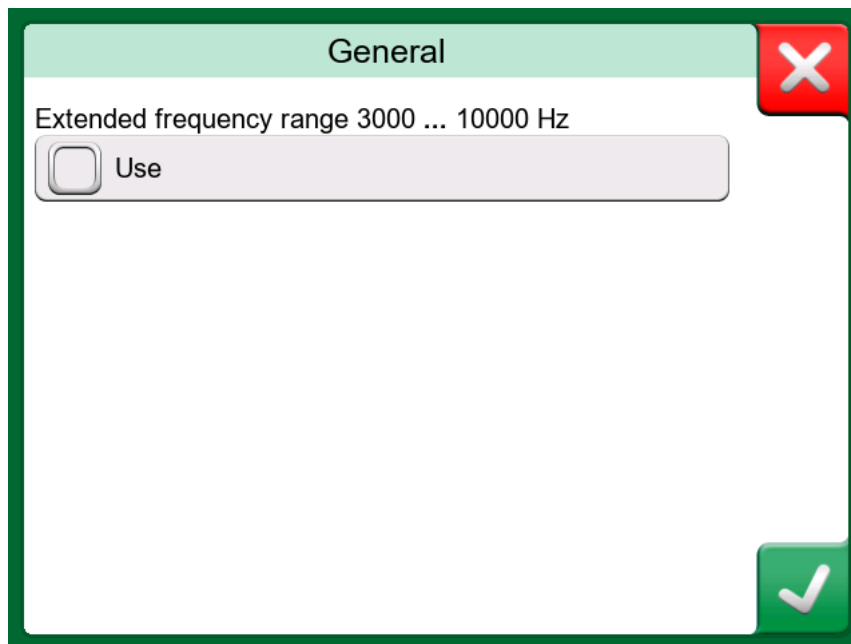

**Figure 57: Settings – General (Extended frequency range)**

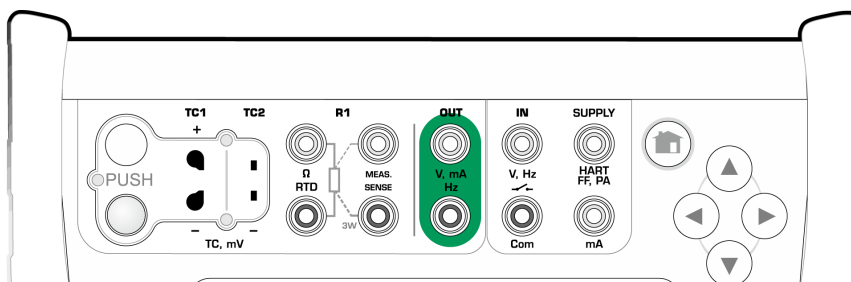

**Figure 58: Frequency generation terminals**


Before generating a frequency signal, check the following settings:

- **Amplitude** — define the desired voltage using the '**value**' V flat button.
- **Waveform & Duty Cycle** — choose either a Positive or Symmetric waveform and set the Duty Cycle.



**Figure 59: Amplitude and Waveform & Duty Cycle buttons**

The Duty Cycle defines the proportion of high output time relative to the total cycle. At higher frequencies, technical limitations may prevent the calibrator from achieving the exact Duty Cycle you set. In such cases, an asterisk (\*) appears before the displayed Duty Cycle to indicate the difference.

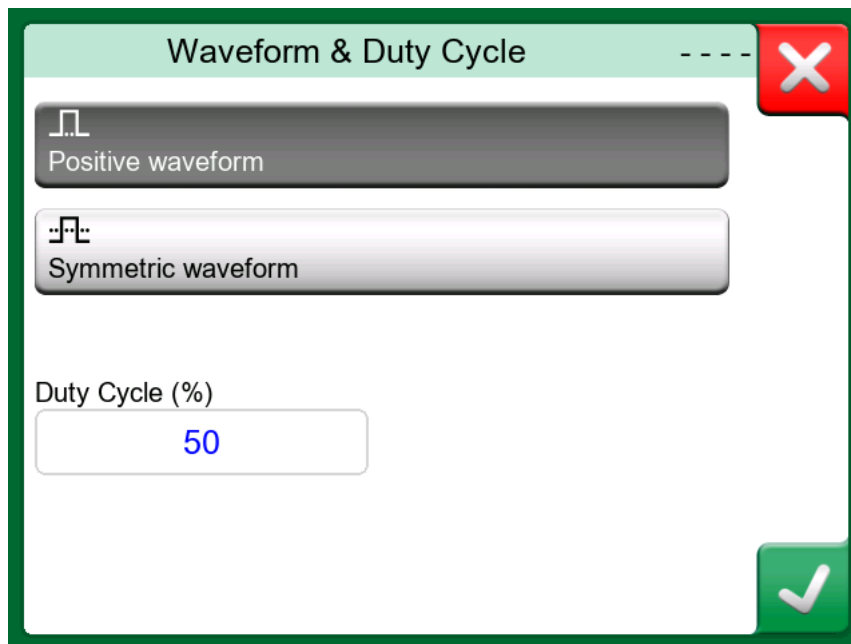


**Figure 60: Waveform & Duty Cycle window**

See also chapters:

- [Frequency Measurement](#)
- [Pulse Generation](#)

## Pulse Generation

Generation range: **0 ... 9,999,999 pulses**

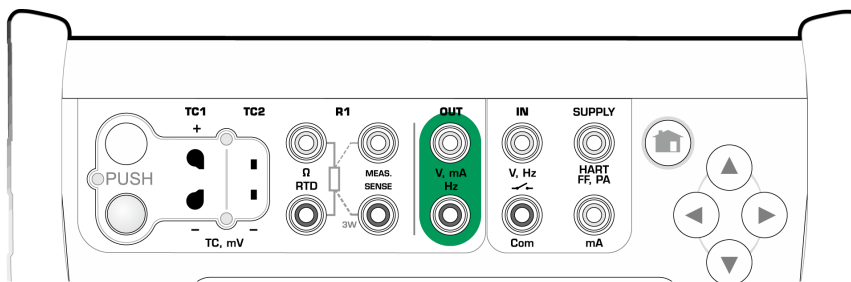

**Figure 61: Pulse generation terminals**

Before starting pulse generation, check the following settings:

- **Frequency** – specify the frequency by pressing the '**value**' Hz flat button.
- **Amplitude** — define the desired voltage using the '**value**' V flat button.
- **Waveform & Duty Cycle** — choose either a Positive or Symmetric waveform and set the Duty Cycle.



**Figure 62: Frequency, Amplitude, and Waveform & Duty Cycle buttons**

The Duty Cycle defines the proportion of high output time relative to the total cycle. At higher frequencies, technical limitations may prevent the calibrator from achieving the exact Duty Cycle you set. In such cases, an asterisk (\*) appears before the displayed Duty Cycle to indicate the difference.

See also chapters:


- [Pulse Counting](#)
- [Frequency Generation](#)

## Smart Instrument Connections

When working with smart instruments, it is important to choose the suitable power supply and ensure proper connections. Incorrect settings can lead to invalid measurement results. Choose the power supply source from the following options:

- **Internal power supply**


The MC6-Ex internal power supply can safely power a single instrument. If your HART or fieldbus segment includes multiple instruments, consider using an external power supply.

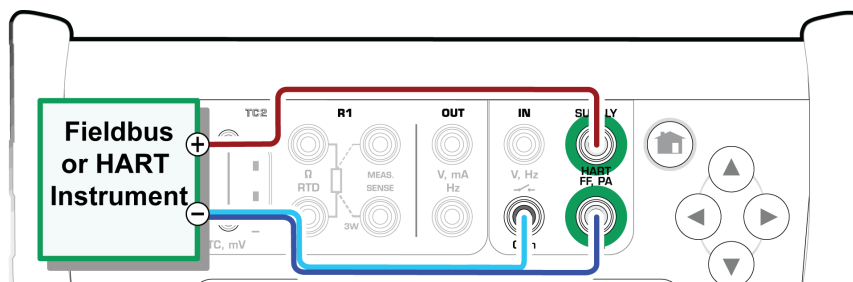

**Figure 63: Smart instrument terminals, internal supply**

- **External power supply**

To maintain communication, you might need an external resistor—250  $\Omega$  for HART or 50  $\Omega$  for fieldbus. If you use a fieldbus-compliant power supply, an external resistor is not necessary.

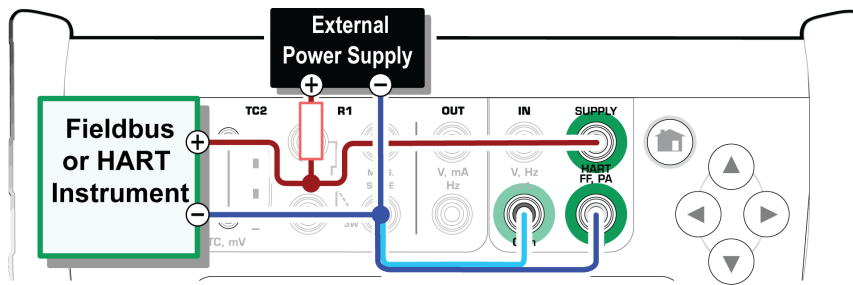

**Figure 64: Smart instrument terminals, external supply**




**Note:** You can connect MC6-Ex to the instrument or fieldbus using standard measurement cables. For longer cable runs, fieldbus terminators might be required.



**Warning:** PROFIBUS PA segment: Never connect two master devices (such as MC6-Ex, a field communicator, or a control system) simultaneously to the same segment. Doing so can cause conflicts and make the segment unstable. Always remove the instrument to be calibrated from the live segment before calibration.



**Note:** For digital communication, the negative wire can optionally be connected to the mA terminal. See chapter [Trimming a HART Instrument](#) for details on HART analog trim.

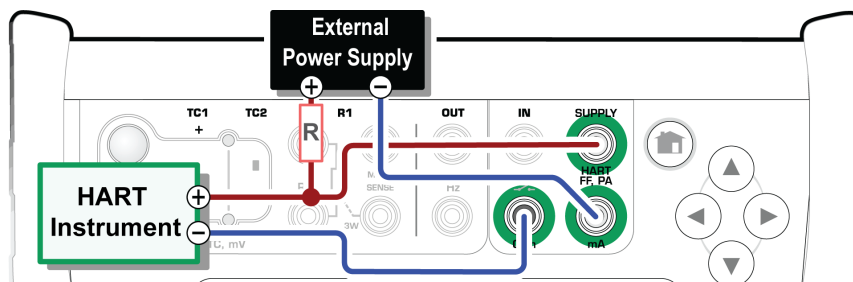

**Figure 65: Simultaneous digital communication and analog measurement with HART instrument**

See also chapter [Warnings Concerning Smart Instruments](#).


Further details about smart instruments are available in chapter [Working With Smart Instruments](#).

# Thermocouple Connections

When working with thermocouples, it is important to choose the suitable **Reference Junction** compensation method and ensure proper connections. Incorrect settings can lead to invalid measurement results. Choose the Reference Junction mode from the following options:

- **Internal**


Connect the MC6-Ex using appropriate thermocouple, extension, or compensation wires. The calibrator automatically manages the reference junction compensation. If needed, you can also use the TC2 terminal.

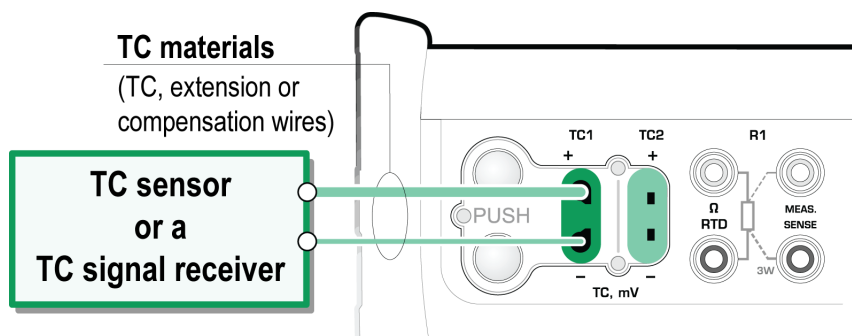

**Figure 66: Internal Reference Junction**

- **External R1 and External R2**


Connect an external RTD sensor to the selected terminal to measure the Reference Junction temperature. You may optionally also use the TC2 terminal.

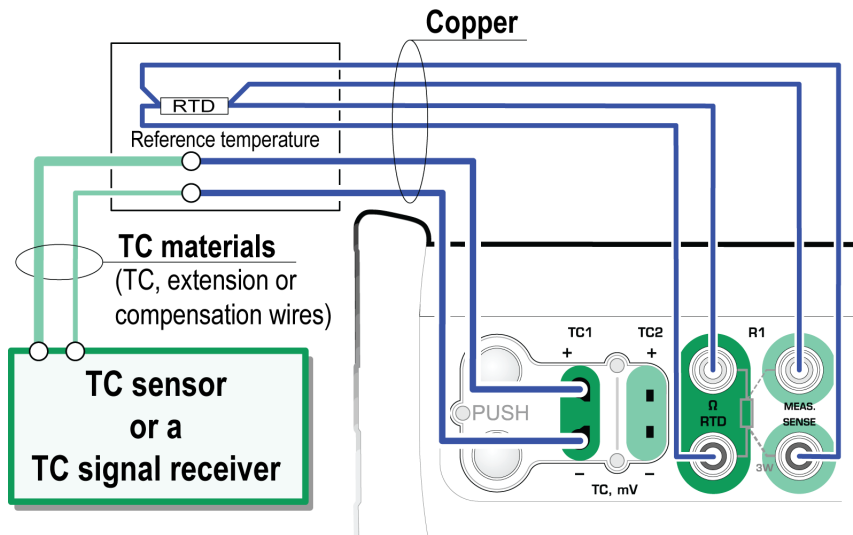


**Figure 67: RTD connected to R1 terminals measuring the Reference Junction temperature**

- **Fixed (0°C) and Manual**

Use this option when the reference junction temperature is controlled by a compensation box, temperature controller, or other similar method. **Manual** mode lets you enter any temperature, while **Fixed (0 °C)** mode provides a shortcut for setting 0 °C. You may optionally also use the TC2 terminal.

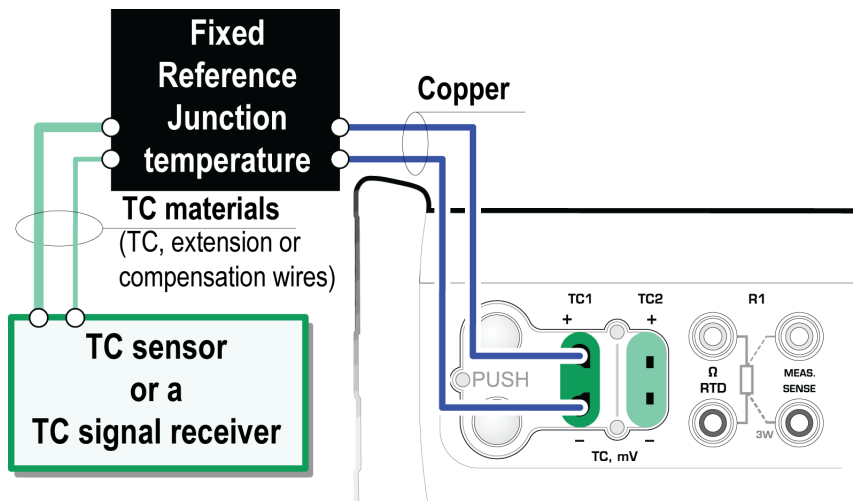


**Figure 68: Fixed/Manual Reference Junction temperature**

 **Warning:** Before starting the measurement, ensure that MC6-Ex has reached temperature stability. Differences between MC6-Ex and ambient temperature can reduce thermocouple accuracy. In extreme cases, stabilization may take up to 90 minutes.

# Meter

The **Meter** user interface mode allows you to measure any signal supported by the MC6-Ex, one signal at a time.


To start the Meter mode, tap the **Meter** button in the Home view.

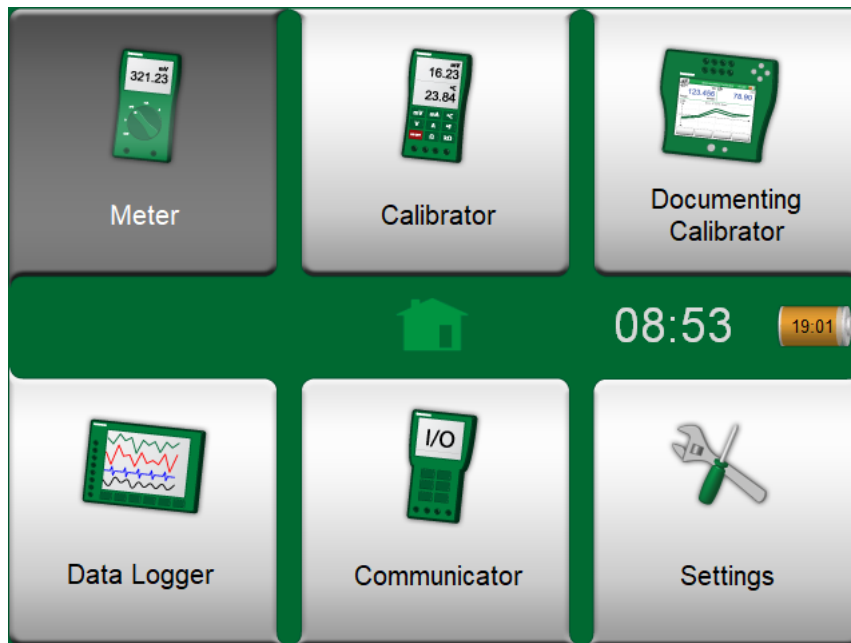

**Figure 69: Home view, Meter user interface mode**

To measure the signal:

1. Select the **Quantity** of the signal from the lower section of the Meter window.
2. Configure quantity-specific settings in the top section.

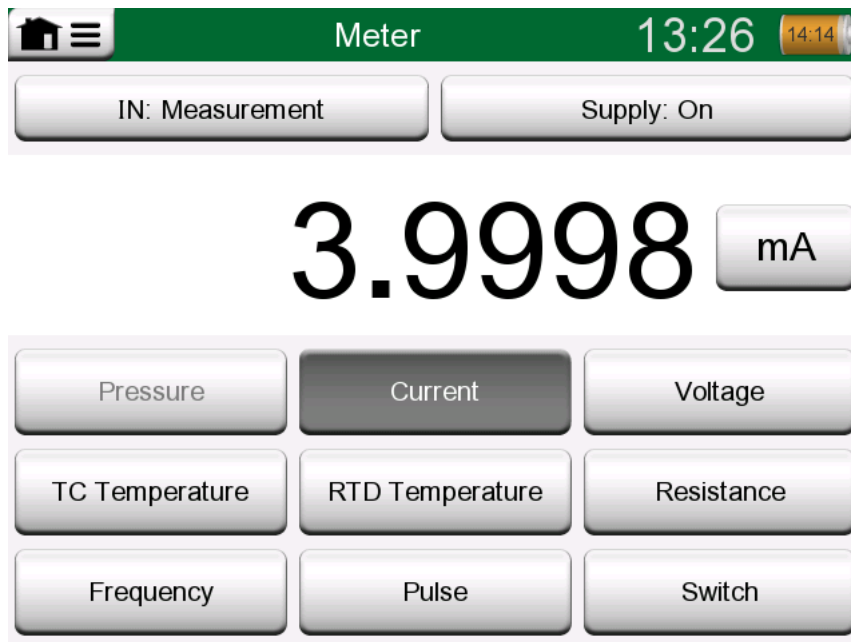

**Figure 70: Current measurement in Meter**


The button on the left opens the Port/Function selection and displays the measuring range for each port of the selected quantity. Connection diagrams help with the required connections. The purpose of the other buttons varies depending on the quantity; for example, in TC measurement you can select the sensor type. The unit button next to the measured signal lets you change the unit.

For details on connections and quantity-specific settings, see chapter [Calibration Capabilities and Connections](#).

# Calibrator

The **Calibrator** user interface mode is designed for calibrating instruments. It allows you to independently configure two signals—for example, one as the instrument's input and the other as its output—to be measured, generated, or simulated.


To start the Calibrator mode, tap the **Calibrator** button in the Home view.

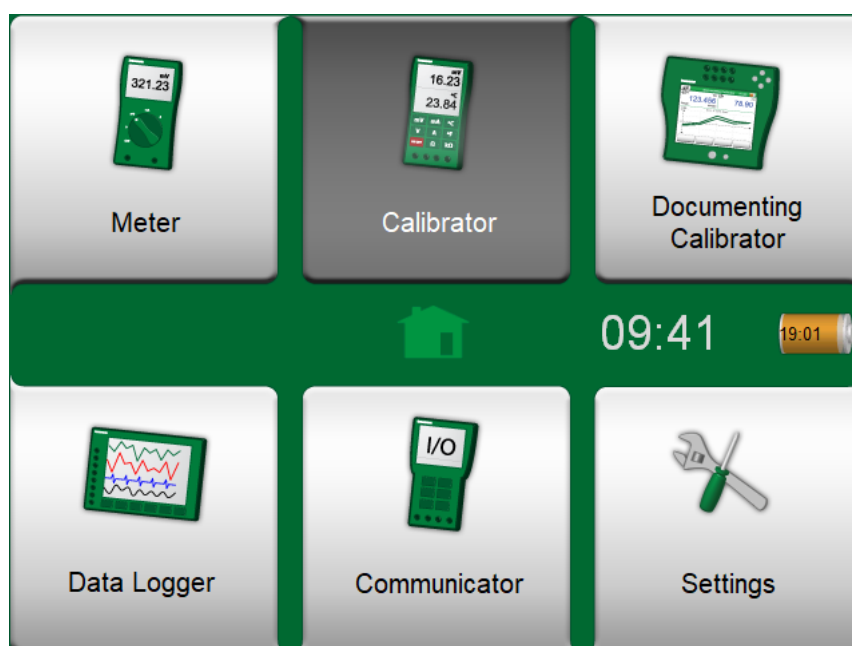

**Figure 71: Home view, Calibrator user interface mode**


To configure the signal:

1. Choose the **Quantity** of the signal for both input and output.
2. Use Port/Function to select whether to **measure**, **generate**, or **simulate** the signal, and follow the connection diagrams to make the necessary connections.
3. Configure the quantity-specific settings.

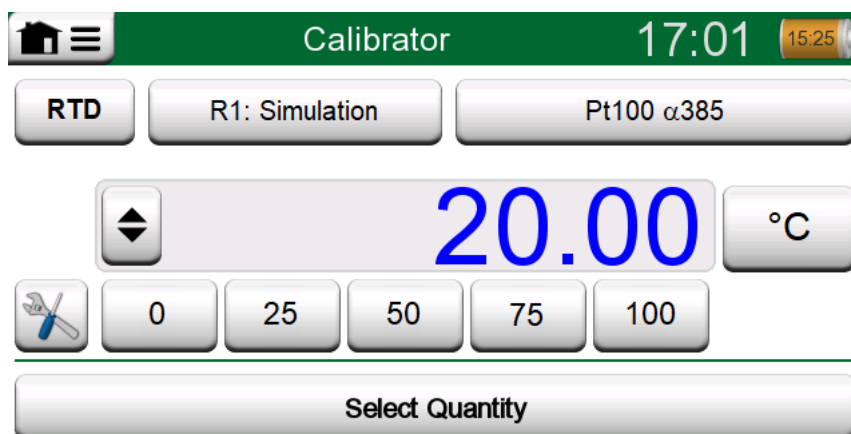

**Figure 72: Calibrator configuration window**



**Tip:** Tapping the **Tools** button () opens a menu showing the available tools. Certain tools are limited to use with measurements or generations. A complete list can be found in the [Tools](#) section.

For details on connections and quantity-specific settings, see chapter [Calibration Capabilities and Connections](#).



**Note:** If one signal is set to generate and the other to switch sensing, the switch captures the generated value when it actuates. This enables manual calibration of switches. However, for temperature switches, always use **Documenting Calibrator** mode for accurate calibration.



**Note:** To document calibration data automatically, use the Documenting Calibrator mode.



**Note:** For information about using external controllers like pressure controllers and temperature dry blocks in Calibrator mode, refer to chapter [Controller Communication](#).


# Documenting Calibrator

The **Documenting Calibrator** mode is designed for documented and automated calibration of process instruments. In this mode, the calibration process is guided, and the calibrator can automatically set the calibration points and record the results. The Documenting Calibrator mode works with Beamex Calibration Management Software.



**Note:** The calibrator automatically synchronizes its date and time with the computer during communication with the calibration management software, ensuring correct time settings.

To start the Documenting Calibrator mode, tap the **Documenting Calibrator** button in the Home view.

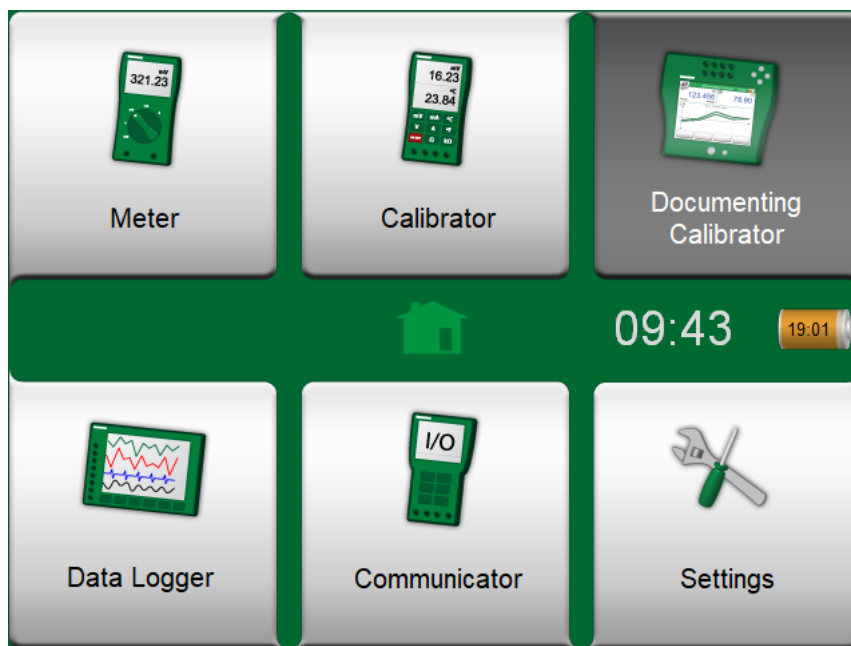

**Figure 73:** Home view, Documenting Calibrator user interface mode

---

# Calibration Process with MC6-Ex

Calibration is a documented comparison of a measurement device to be calibrated against a traceable reference.

When calibrating instruments, a calibration reference with a known value must be compared to the instrument's measurement value. The calibration process must be documented, and comparison calculations performed.

A documenting multifunction calibrator performs all these tasks and can even carry out fully automatic calibrations.

The MC6-Ex is a documenting calibrator that communicates with Beamex LOGiCAL or CMX Calibration Management Software, enabling a fully digitalized calibration process.

## Instrument Data

The **Instrument data** in MC6-Ex includes all the necessary components to define how a calibration process should be carried out. It is recommended to use calibration management software to determine what to calibrate, how, and when. When the instrument is due for calibration, its data can be transferred from the Calibration Management Software to the calibrator. You can also create and save instrument data directly in the Documenting Calibrator. With smart instruments, some data elements can also be populated directly from the instrument.

The **Identification** data describes the instrument to be calibrated. **Device** can be defined as the physical product (asset) performing the process measurement. **Position** specifies the functional location in the process the device is installed (commonly called the Tag). Defining the position is optional, but allows you to define a hierarchical Plant Structure where the position can be placed. The Plant Structure is typically maintained in the Calibration Management Software.

In calibration, **Input** (the calibration reference with a known value) is compared to the instrument's **Output**. MC6-Ex can provide the input signal and measure the output signal for pressure, temperature and various electrical signals. You can also manually enter the input or output signal into the calibrator (Keyed) if necessary.

The **Function** describes the measurement capability of the instrument to be calibrated. Function is described by its quantity, unit, range, and sensor type.



**Note:** Measurement devices like sensors and switches usually handle one quantity and range.

Industrial transmitters measure a physical quantity (such as pressure or temperature) and convert it into an electrical or digital signal using a transfer function. In these cases, the input and output quantities and ranges are different.



**Note:** Be sure to define the quantity, unit, and range for both input and output—even when the values are the same.



**Tip:** When the input signal is pressure or temperature, the Automatic Control feature can assign a supported external controller to generate the reference pressure or temperature automatically. The calibrator can also simulate temperature if needed.

Calibration is performed according to the **calibration procedure**. By default, calibration point values are distributed evenly across the instrument range. You can set the calibration direction as up, down, down-up, or up-down. If the standard configurations are not suitable, you can also define fully customized calibration points. You can enable Automatic Acceptance of calibration points if certain conditions are met (see chapter [Calibration Point Acceptance](#) for details).

The **Error Limit** defines the maximum acceptable calibration error. Error is calculated as the difference between the input and output signals—i.e., the reference value and the measured value of the instrument to be calibrated.



**Note:** For transmitters, the error is the difference between the expected (ideal) output signal—calculated using the transfer function—and the actual measured output signal.

Calibration passes only if measured error in all calibration points are within the defined limit. Otherwise the calibration fails.

## Calibration Execution and Calibration Results

After the instrument data has been created in the Documenting Calibrator or received from the Calibration Management Software, the instrument is ready for calibration.

The Documenting Calibrator walks you through the calibration process step by step, progressing through the defined calibration points. Depending on the defined procedure, points can be accepted manually or automatically.

Documenting Calibrator captures the data digitally and automatically documents the calibration. Once completed, a result preview is displayed, with both numerical and graphical views available. The calibrator calculates the

measurement error and performs a pass/fail check based on the measured input/output values and the defined error limits. The pass/fail result is the key outcome of the calibration. The first calibration repeat can be saved as the **As Found** calibration.

If the calibration fails or the error is too close to the defined limit, you can adjust the instrument.



**Tip:** MC6-Ex can perform adjustments for smart instruments. For more information, see chapter [Trimming Smart Instruments](#).

After adjustment, you can perform a new calibration repeat—called **As Left**—to document the instrument's post-adjustment condition. If the instrument cannot be adjusted to meet the calibration requirements, consider replacing it with a more accurate one.

Once the calibration is complete, it is recommended to transfer the results to Calibration Management Software to maintain a complete calibration history. The calibration data stored in the Calibration Management Software is easily available for analysis, reporting, and creating calibration certificates.



**Note:** Calibration results can be temporarily stored in the calibrator's memory, but for permanent storage, it is strongly recommended to use Calibration Management Software.


---

## Instrument List

When you start the Documenting Calibrator, the Instrument List window opens if there are instruments saved in the calibrator.



Tap an instrument to select it for calibration. This opens the Instrument Overview window, which shows general information about the selected instrument. For more details on the Instrument Overview window, refer to chapter [Instrument Overview Window](#).

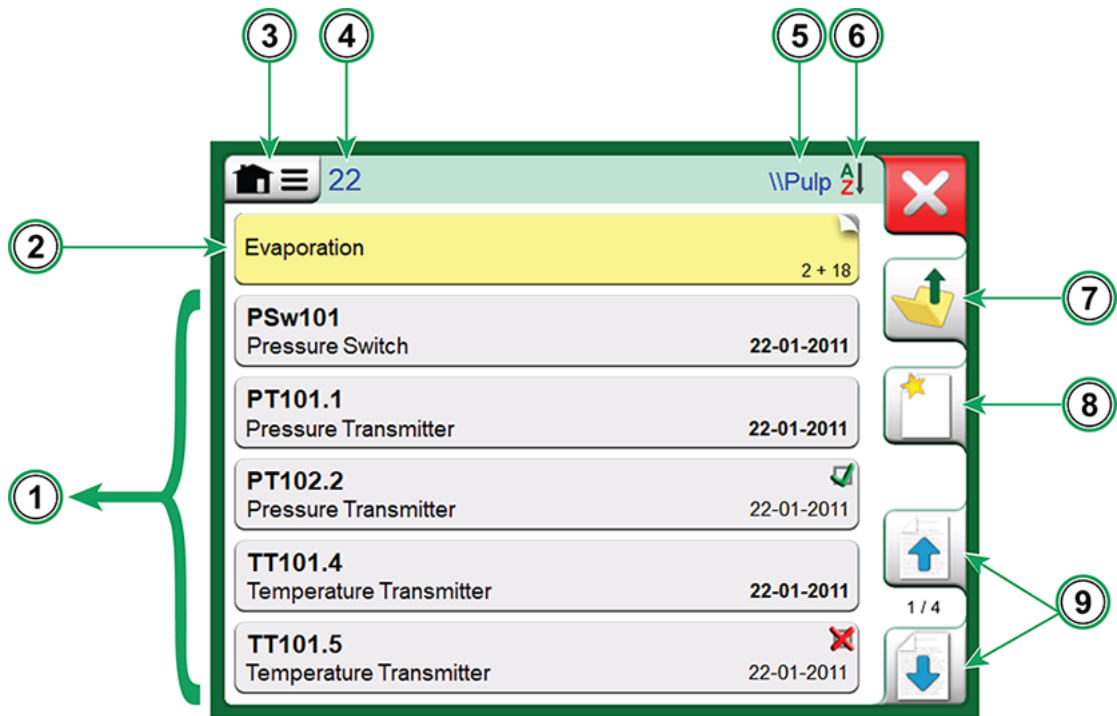
It is recommended to use calibration management software to manage instruments and transfer the data to the calibrator when the instrument is due for calibration. You can also create and save instruments directly in the Documenting Calibrator. For instructions, see chapter [Creating Instruments in MC6-Ex](#).



**Figure 74: Instrument List example**

Legend:

1. Instruments listed at the current Plant Structure Level.
2. Sublevel within the Plant Structure. A detailed description is available in chapter [Plant Structure Levels](#).
3. Menu for managing the Instrument List. More information in chapter [Instrument List Menu](#).
4. Total number of instruments at this level and all sublevels.
5. Name of the current Plant Structure Level.
6. Sorting order icon. Refer to chapter [Instrument List Menu](#).
7. **Return** button () to move one level up in the Plant Structure.
8. **Create New** instrument button (). Detailed instructions for creating instruments are provided in the chapter [Creating Instruments in MC6-Ex](#).
9. Page navigation buttons for browsing a multi-page Instrument List.

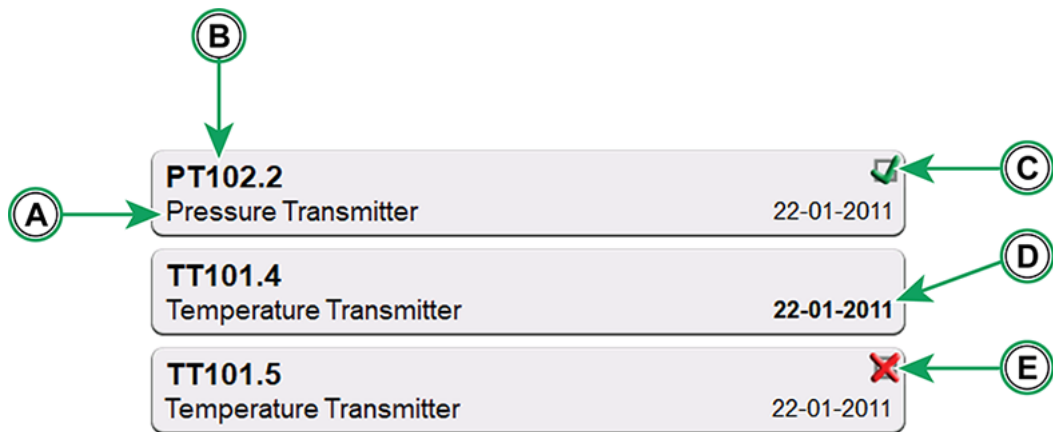

**Figure 75: Instruments in the Instrument List**

Legend:

**A.** Function Name.

**B.** Position ID.



**Note:** When Position information is not available, the Device ID is displayed instead.

**C.** Most recent calibration result: "Passed" (visible only if the instrument has been calibrated).


**D.** Calibration Due Date.


**E.** Most recent calibration result: "Failed" (visible only if the instrument has been calibrated).



**Note:** You can also view instruments in Work Order View Mode. More information in chapter [Work Order View Mode](#).

## Plant Structure Levels

Tap a Plant Structure Level to display its sublevels and the instruments it contains. To move one level up in the hierarchy, tap the **Return** button ()

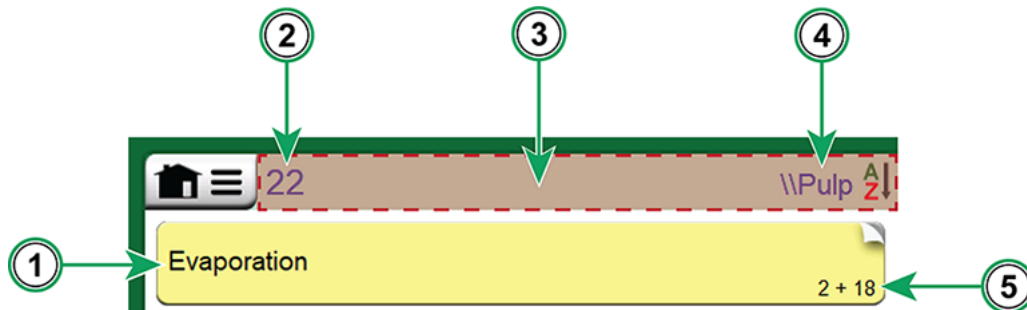

**Figure 76: Plant Structure Level in the Instrument List**

Legend:


1. Sublevel within the Plant Structure.
2. Total number of instruments at this level and all sublevels.
3. Title bar active area – tap to display the full Plant Structure path.
4. Name of the current Plant Structure Level.
5. Number of sublevels and instruments within them.



**Note:** For details on how to create and manage Plant Structure Levels, see chapter [Instrument List Menu](#).

## Instrument List Menu

Tap the Instrument List context-sensitive menu (3 in [Figure 74: Instrument List example](#)) to access additional tools for managing the Plant Structure and Instrument List.

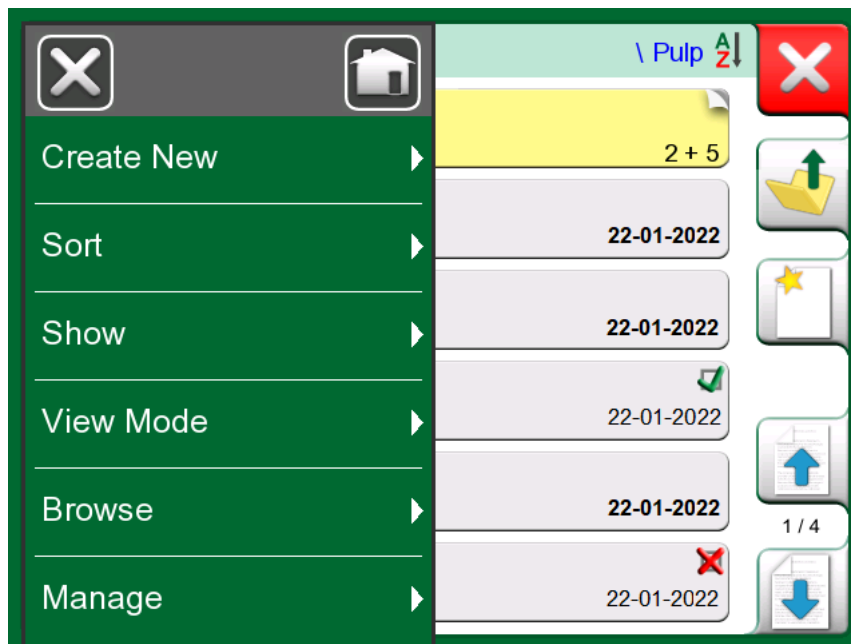

**Figure 77: Instrument List menu**

Create New – allows you to create new items:

- Instrument – creates a new instrument (see chapter [Creating Instruments in MC6-Ex](#) for instructions).
- Plant Structure Level – adds a new sublevel to the current level.
- Group – creates a new calibration group (see chapter [Group Calibration](#) for more details).

Sort – let you organize list content by:

- Instrument Identification – alphabetically, Ascending (A↓) or Descending (Z↓).
- Due Date – Ascending (8) or Descending (8).
- Creation – Ascending (123) or Descending (321).


Show – filter (🔍) the list view to show:

- All – all instruments and levels.
- Calibrated – only calibrated instruments.
- Not Calibrated – only not calibrated instruments.
- Not Calibrated and Failed – instruments that are either not calibrated or have failed calibration.

View Mode – control how the Plant Structure is displayed:

- Obey Structure
- Ignore & Hide Structure
- Show All from Here/Below
- Show Instruments from Here/Below

- Work Order (see chapter [Work Order View Mode](#))

**Browse** – allows you to search () for instruments or jump to the beginning or end of the list.

**Manage** – delete instruments or results, or manage the Plant Structure.



**Caution:** Deleting a Plant Structure Level will also delete all instruments and calibrations on that level and below. The root level cannot be deleted.



**Warning:** Deleted items cannot be recovered.

---

## Instrument Overview Window


Selecting an instrument for calibration opens the Instrument Overview window. This window presents general details of the instrument configuration data and provides connection diagrams for the selected input and output functions. The diagrams show which connectors and terminals to use for attaching the test leads, helping you make the correct connections. For further details on connections and required communication cables, see [Calibration Capabilities and Connections](#).



**Note:** If available, a Before Calibration Note will be displayed.



**Tip:** Before beginning calibration in the Documenting Calibrator, you can use Calibrator mode to verify that the test leads are connected properly and that input and output signals can be provided.

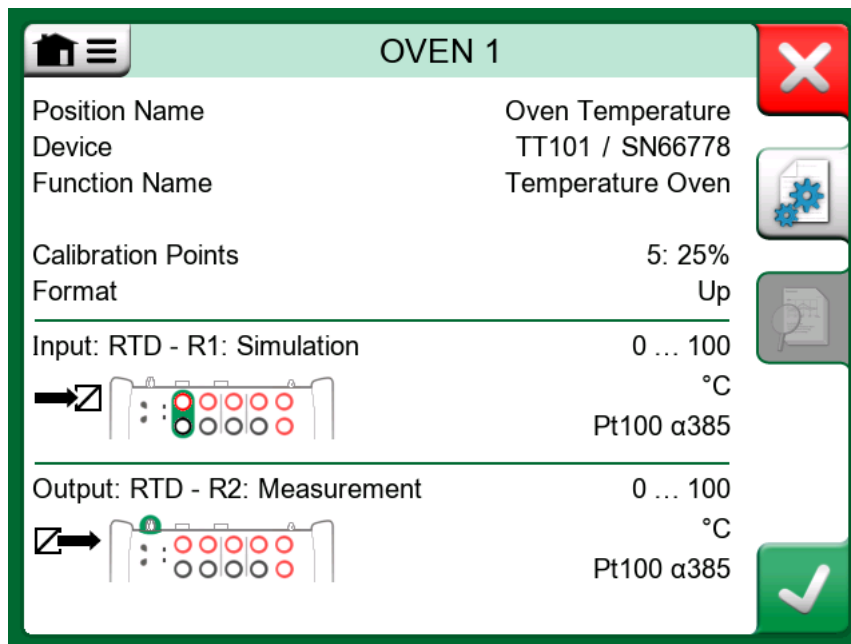

**Figure 78: Instrument Overview window**

From the Instrument Overview window, you can:

- Return to the Instrument List by tapping **Close** button (✖).
- Edit or review instrument configuration data by pressing **Configure** button (⚙). For a detailed description of all instrument data pages, see [Creating Instruments in MC6-Ex](#).
- View existing calibration results by tapping the **View Results** button (📄).
- Start calibrating the selected instrument and open the Calibration window by pressing the **Accept** button (✅).

The context-sensitive menu provides options to Copy, Move, or Delete the selected instrument, as well as view the Plant Structure.

## Calibrating an Instrument

After selecting the instrument to be calibrated, check the displayed connection diagram to see where to connect the leads.




**Note:** Use the **Info** button (📘) to view connection diagrams.

Once connected, tap the **Accept** button (✅) in the Instrument Overview window (see [Figure 78: Instrument Overview window](#)). The **Calibration** window opens, displaying the nominal input and output values for the first calibration point.



**Note:** To perform smart instrument calibration, check the instructions in chapter [Calibrating Smart Instruments](#).

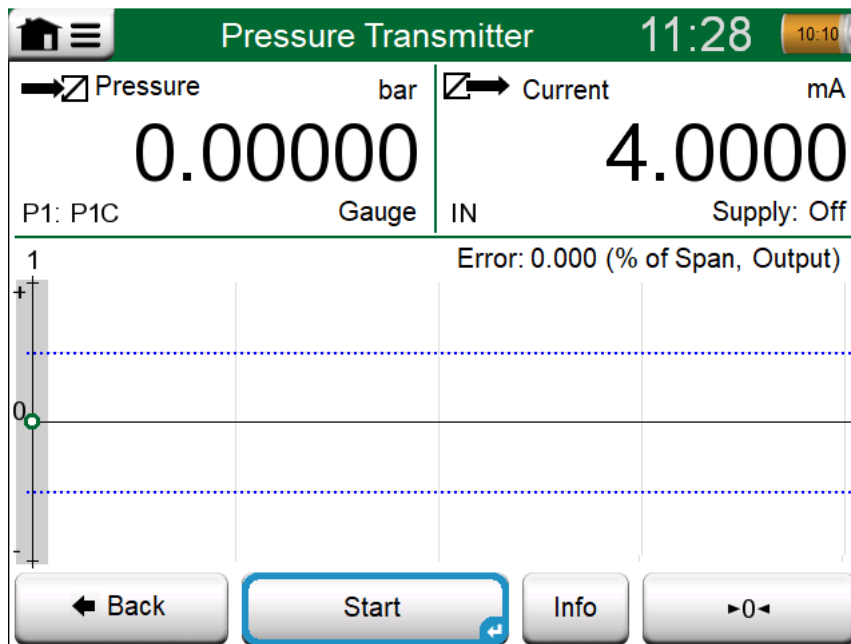

**Figure 79: Calibration window**



**Note:** If gauge pressure modules are used, zero them before beginning calibration.

Tap the **Start** button to begin the calibration.




**Note:** Generations are started in the Instrument Overview window before the **Start** button is pressed.

If **Automatic Acceptance** is enabled, calibration points will be accepted automatically. Otherwise, you must manually accept each point. See section [Calibration Point Acceptance](#) for more on accepting calibration points.



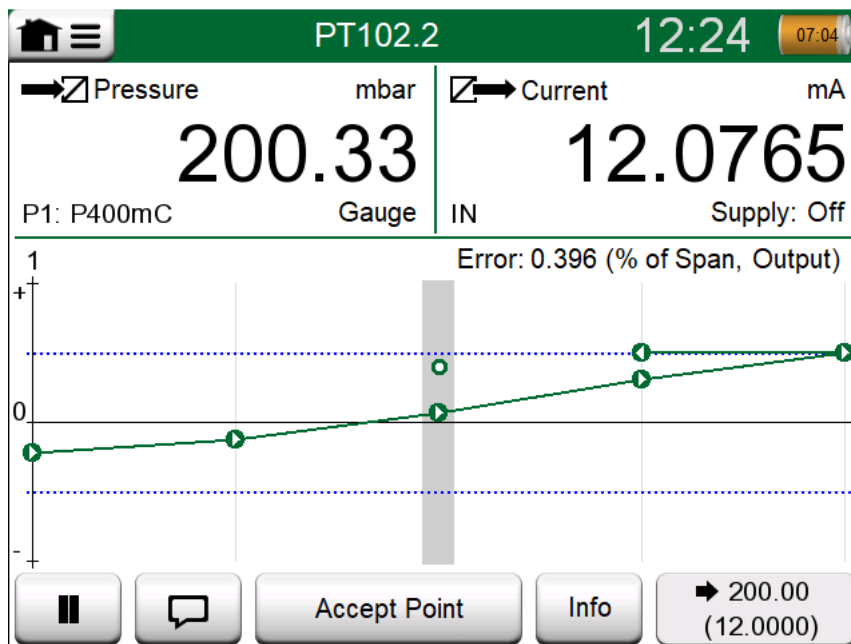


**Note:** Tap the **Back** button to return to the Instrument Overview window.



**Figure 80: Calibration with manual acceptance**

As calibration progresses, each accepted point appears on the graph—passed points in green, failed points in red. Points are linked with a thin line to indicate the point sequence. A grey column marks the next target point, and its width is determined by the **Max. Point Deviation** setting. The numeric value of the next target point is shown in the lower-right corner. If any point exceeds the defined error limits (blue dotted lines), the line turns red.

Use the **Pause** button (  ) to reject a calibration or undo a point. The **Notes** button (  ) lets you add notes to individual calibration points. Additional settings are available in the context-sensitive menu.

Various tools are available under the **Instrument Input/Instrument Output** menu items in the Calibration window. Tap the **Tools** button (  ) to view the available tools. The tool selection depends on the selected Quantity and Port. These tools are also available during instrument configuration. For details, see chapter [Tools](#).



**Note:** Certain tools are not compatible with the Calibration Management Software.

## Calibration Point Acceptance

Calibration points can be accepted either manually or using Automatic Acceptance feature. When **Automatic Acceptance** is not in use, you must manually accept each calibration point using the **Accept Point** button when signals are stable. The MC6-Ex then proceeds to the next calibration point.




**Note:** Use the **Force Accept** button to manually accept points when, e.g. the calibration does not advance because of an unstable input and/or output signal or the input point is not within the maximum deviation window.

The following instrument data should be defined when using the **Automatic Acceptance** feature:

- Max. Point Deviation (% of span) – the acceptable deviation of the input signal from the nominal value.
- Stability – of both input and output signals.
- Point Delay – the time (in seconds) the calibrator waits before accepting the values.

When **Automatic Acceptance** is enabled (checked), MC6-Ex accepts calibration points automatically, following this process:

1. MC6-Ex checks whether the input signal falls within the Max. Point Deviation value of the next calibration point.
2. When the input signal is close enough, MC6-Ex checks the signal stability to decide whether the readings can be saved.
3. When signal stability is reached, a timer (⌚) counts down the **Point Delay** amount of seconds. After that, the readings are saved only if the signal is still stable. If the signal becomes unstable, MC6-Ex returns to step two.

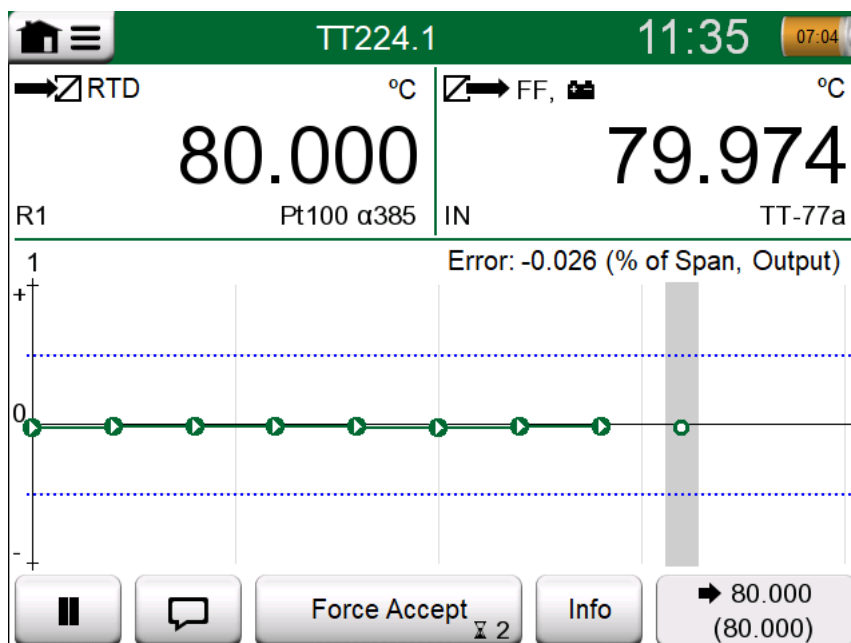

**Figure 81: Calibration with Automatic Acceptance in use**




**Note:** Opening the menu during calibration pauses the process until the menu is closed.

## Calibration Results Window


After the calibration is completed, the Calibration Results window opens and indicates whether the calibration **Passed** or **Failed**. The results are shown on multiple pages, offering different views of the calibration data, such as numerical values, graphical representation, and general information.



**Note:** The number of result pages shown in the Calibration Results window can be adjusted through the menu. To view only the basic result pages, select **Show, Basic Pages**. To include all available pages, choose **Show, All Pages**.

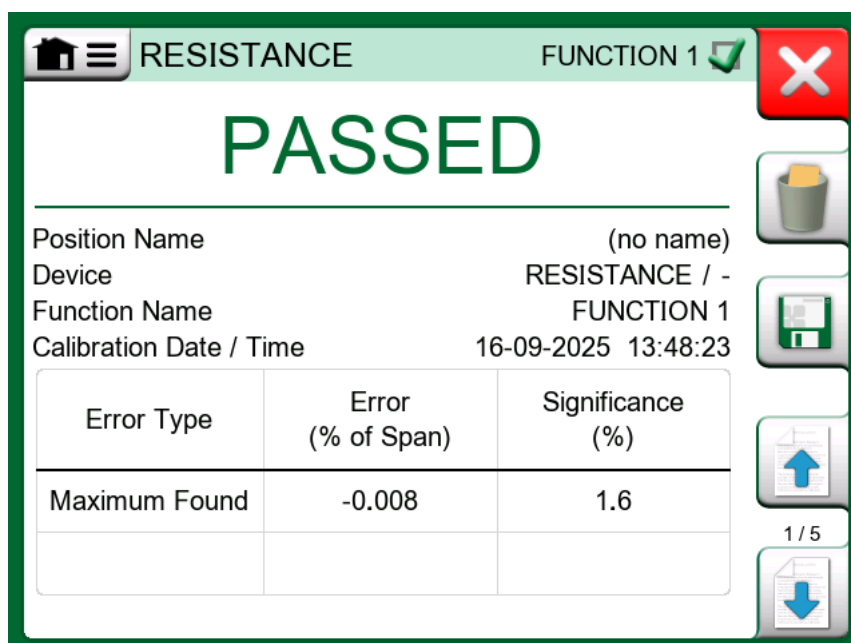

**Figure 82: Calibration Results window — first page**

On the second page of the Calibration Results window, the user (Calibrated by) must be selected. If a calibration management software is used, the user list is transferred to the calibrator and the correct user can be selected. A new user can also be created by tapping the **Calibrated by** button and then pressing Create New button ()

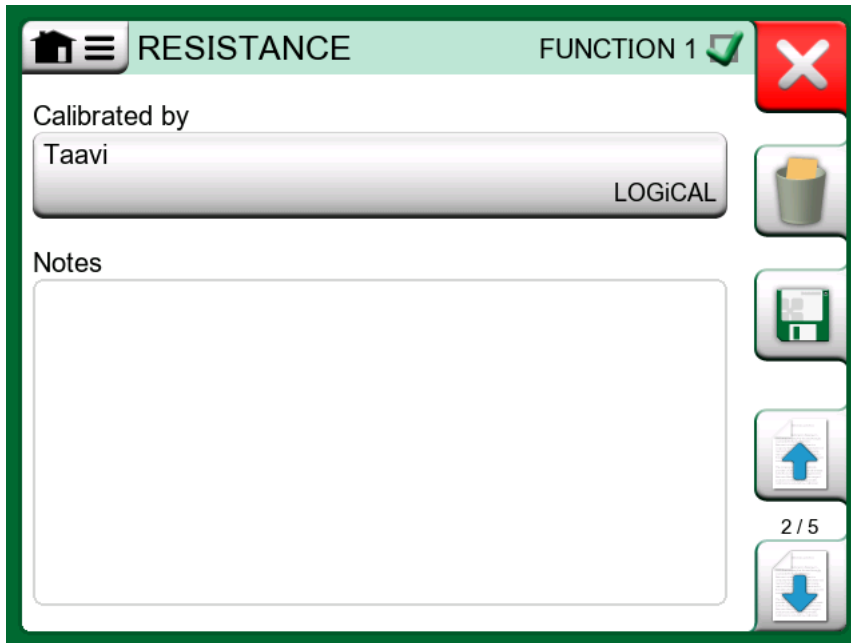


Figure 83: Calibration Results window — second page

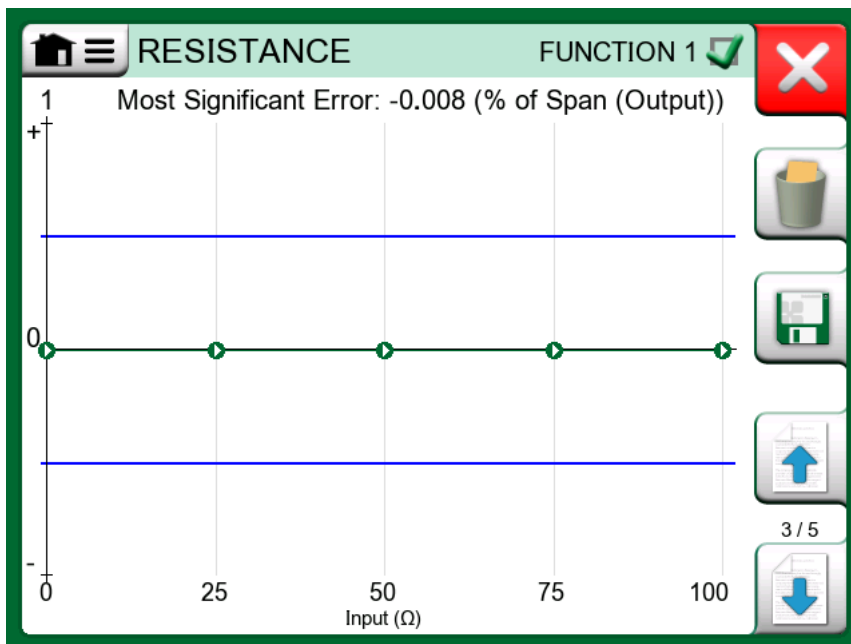


Figure 84: Calibration Results window - third page

Input (Ω)	Output (Ω)	Error (% of Span)	Significance (%)
0.046	0.039	-0.007	1.4
25.048	25.040	-0.008	1.6
50.048	50.040	-0.008	1.6
75.048	75.041	-0.007	1.4
100.049	100.042	-0.007	1.4

**Figure 85: Calibration Results window — fourth page**

**Environment Information**

kPa: --- °C: --- % RH: ---

**Temperatures (°C)**

Device: --- Input Calibrator: 30.63 Output Calibrator: 30.63

**Time Spent**

00:00:00


**Figure 86: Calibration Results window — fifth page**


You can save the results using the **Save** button (📁). Select whether the calibration is *As Found* or *As Left*. *As Left* result can be also combined with previous result by checking the **Combine with Previous Result** box. When enabled, the Calibration Management Software considers all combined results as a single calibration event with multiple repeats.

You can reject the result by pressing the **Delete** (🗑️) button if you do not want to save it.

After saving or rejecting the results, the Calibration window opens (see [Figure 79: Calibration window](#)). You can either start another calibration repeat by tapping the **Start** button or finish calibration for this instrument by tapping the **Back** button.

## Viewing Saved Calibration Results

After calibrating an instrument, you can view the saved calibration results, one instrument at a time. You can find the most recent result in the Instrument Overview window using the **View Results** button () . To browse all previously saved results, open the context-sensitive menu in the **Calibration Results** window and select **Results History**.

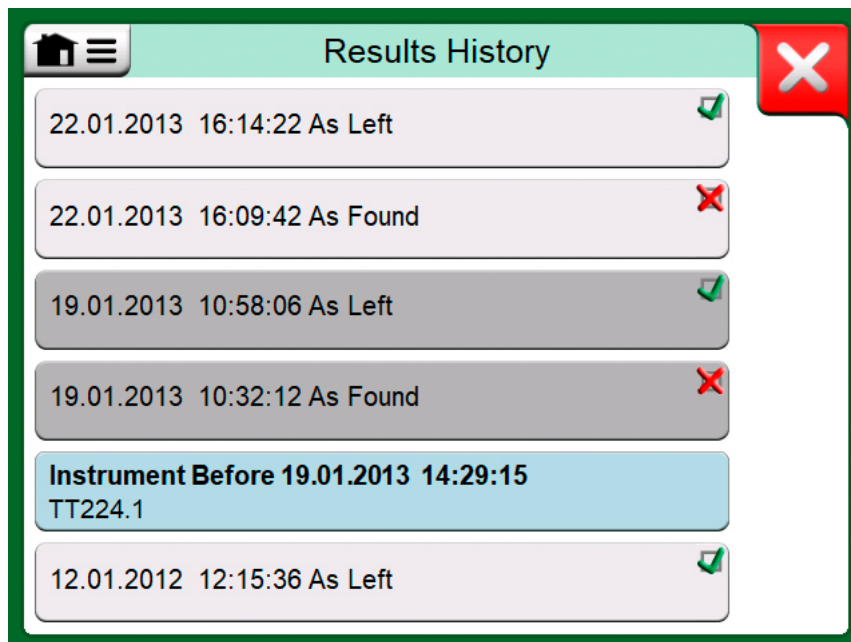

**Figure 87: Calibration Results History window**

Different shades of gray help distinguish separate calibration events. If the instrument's settings were changed, the background turns blue. Tap the entry to view the settings as they were at that date and time.



**Note:** Saved calibration results are read-only and cannot be edited.

## Deleting Calibration Results

To delete calibration results, open the context-sensitive menu and choose **Manage**. Choose **Delete This Result** to remove the currently displayed result, or select **Delete All Results** to erase all results associated with the current instrument.

Alternatively, you can delete all results for the current instrument in the **Results History** window by choosing **Delete All Results** from the menu.

After the results have been successfully transferred to CMX or LOGiCAL, you can also delete them in the Calibration Management Software or Sync Client.



**Note:** To remove all calibration results for all instruments across all Plant Structure Levels, go to the Instrument List window, open the menu, and select **Manage > Delete All Results**.




**Warning:** Deleted results cannot be recovered.

---

## Creating Instruments in MC6-Ex

You can create a new instrument in Documenting Calibrator mode in one of two ways:

- Tap **Create New** instrument button ()
- Go to the Instrument List menu and select **Create New > Instrument**.

The MC6-Ex calibrator includes these configuration pages:

- **Identification** – Defines the identification information of position and device.
- **Input, Output and Function** – Describe the instrument's measurement capability and define how input and output signals are captured.
- **Procedure** – Specifies calibration points and point acceptance method. Advanced settings allow for calibration notes and scheduling.
- **Error Limit** – Lets you select the error calculation method and define advanced error limits.

**Table 4: Data location in Beamex Calibration Management Software**

MC6-Ex configuration pages	Corresponding entity in CMX	Corresponding tab in LOGICAL
Identification	Position, Device	Position tab, Device tab
Input	Function	Function tab, partly in Calibration Methods related to instrument type
Output		
Function		
Procedure	Calibration Procedure	Procedure tab
Error Limit		Error Limit tab



**Note:** Although several devices can be linked to one position in the Calibration Management Software, the calibrator only shows the data of the measurement device currently being calibrated.

By default, only the basic configuration pages are shown. To view all pages, select **Show > All Pages** from the context-sensitive menu when creating or editing an instrument. Note that page numbering will change accordingly.

Start creating an instrument and fill in the instrument data in all the fields.



**Tip:** You can automatically populate some of the smart instrument data when creating a new instrument in MC6-Ex with the Get Mapped Values feature. For more information, see chapter [Get Mapped Values feature](#).



**Note:** MC6-Ex allows instruments with identical identification, but this may cause issues when transferring the results to calibration management software, where instrument identifications must be unique (with exception of multi-function instruments).

## Identification Related Data

The **Identification** configuration page allows you to define the Position ID, Position Name, Device ID, and Device Serial Number.



**Note:** The Device ID field is mandatory.

**Figure 88: Identification configuration page**

## Instrument Function Related Data

The **Input** configuration page defines the input Quantity and related parameters.

**Figure 89: Input configuration page**

**Port/Function** (excluding Keyed) and **Unit** settings are available for all input quantities. Additional configuration fields may appear depending on the selected Quantity and Port/Function (see table below).


**Table 5: Input parameters depending on the selected Quantity**


Quantity	Additional settings available
RTD Temperature	Sensor Type
TC Temperature	Sensor Type, RJ Mode
Pressure	Pressure Type
Current	Loop Supply
Frequency	Amplitude, Waveform & Duty Cycle, Trigger Level
Pulse	Amplitude, Waveform & Duty Cycle, Frequency, Trigger Level, Trigger Edge
Keyed	Keyed Quantity, Resolution, Resolution from Entry



**Note:** When using MC6-Ex calibrator with an external controller, select the controller on the Input page. For a pressure controller, select *Pressure* as the quantity and the controller in Port/Function.

By default, all generations begin when the calibration starts. If necessary, you can start the generation earlier by selecting **Initial Values** from the context-sensitive menu on any instrument configuration page.

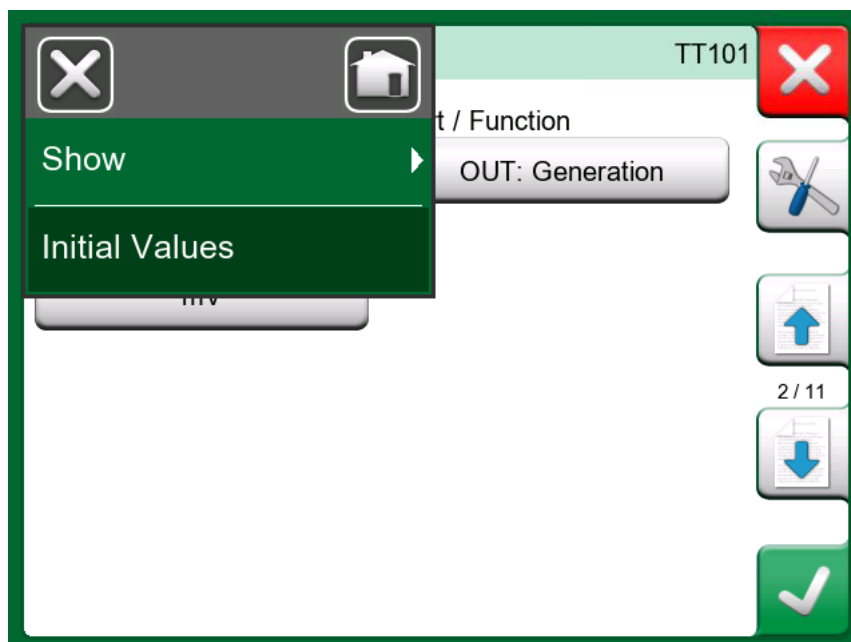
**Figure 90: Initial Values functionality**

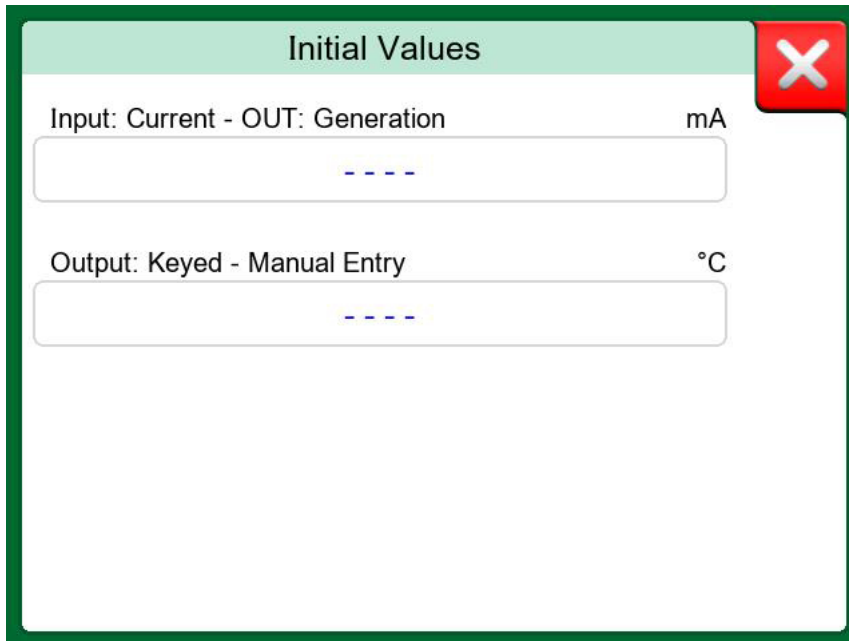

The 'Initial Values' window has a title bar with a home icon, a menu icon, the text 'Initial Values', and a red close button with a white 'X'. The main area contains two input fields. The first is labeled 'Input: Current - OUT: Generation' with 'mA' on the right, and contains a dashed line '----'. The second is labeled 'Output: Keyed - Manual Entry' with '°C' on the right, and also contains a dashed line '----'.

**Figure 91: Initial Values window**


The **Additional Supplies** (advanced configuration) page lets you choose an additional supply source (for Loop and/or Sensor).

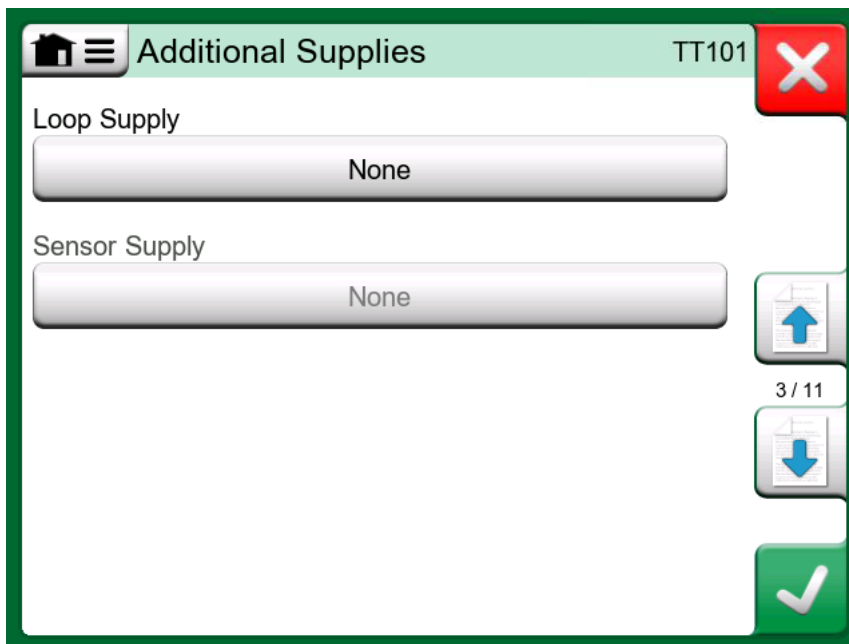

The 'Additional Supplies' page has a title bar with a home icon, a menu icon, the text 'Additional Supplies', the identifier 'TT101', and a red close button with a white 'X'. The main area has two sections: 'Loop Supply' and 'Sensor Supply', each with a button labeled 'None'. On the right side, there are three buttons: an up arrow, a down arrow, and a green checkmark. Between the up and down arrows is the text '3 / 11'.

**Figure 92: Additional Supplies advanced configuration page**

Use the **Output** configuration page to define the output signal Quantity and its parameters.

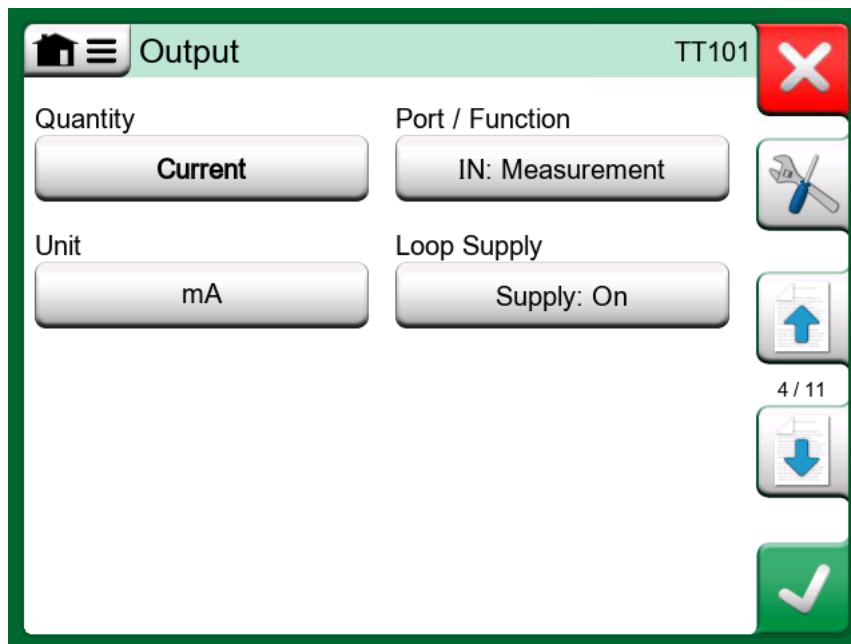

**Figure 93: Output configuration page**

For most Quantities, the same parameters as for Input are available, with a few additional settings (see table below).

**Table 6: Additional Output parameters**

Quantity	Additional available settings
Pulse	Zero
Switch	Switch Type, Switch Sound, Trigger Level
Keyed	Display Type

The **Function** configuration page allows you to configure the following:

- Input Range - lower and upper limits for the calibration reference signal.
- Transfer Function - defines the relationship between instrument's input and output (e.g. Linear, Square Root, etc.).
- Output Range - the lower and upper limits for the output signal.



**Note:** For measurement devices, the output range is the same as the input range.

- Function name.

**Figure 94: Function configuration page**

## Calibration Procedure Related Data

**Procedure** configuration page allows you to define the following parameters:

- Calibration Points (Predefined) – specifies calibration points (number of steps, step size, and percentage) or select one of the predefined sets.
- Repeat Format – defines the way the calibration points are advanced.



**Tip:** The combination of Calibration Points and Repeat Format determines how many points are used and the order in which they are executed.

- Points are Input / Output – by default, calibration points are based on input. Tick this box to calculate them from output instead.
- Max Point Deviation (% of span) – allows deviation from the nominal calibration point value and works together with automatic point acceptance. If the input value stays within the defined tolerance, the point is accepted automatically and calibration continues. Otherwise, it requires manual acceptance.
- Stability Check – calibrator checks input signal stability before saving the reading. Tick this box to also check output stability.
- Point Delay (s) – sets the delay before a point is accepted, provided Automatic Acceptance is enabled.
- Automatic Acceptance – automatically accepts points after considering settings such as point delay, stability, etc.

Procedure TT101

Calibration Points (Predefined)  
5: 25%

Repeat Format: Up

Points are Input / Output:  From Output

Max Point Deviation (%): 4

Stability Check:  Also for Output

Point Delay (s): 5

Automatic Acceptance:  Use

6 / 11

**Figure 95: Procedure configuration page**

The **Notes** (advanced configuration) page can be used to enter calibration and adjustment notes.

Notes TT101

Before Calibration Note

Adjustment Note

After Calibration Note

9 / 11

**Figure 96: Notes advanced configuration page**

The **Scheduling** (advanced configuration) page includes options to set the calibration due date and configure the calibration interval. You can also define the interval unit and calibration repeat count.


**Figure 97: Scheduling advanced configuration page**

## Error Limit Related Data

The **Error Limit** configuration page lets you choose the **Error Calculation Method** (unit and reference), and set measurement error limits. It also provides a place to set up multiple error limits for the instrument (the instrument range can be divided up to 10 subranges, each having their own constant and relative error values).

**Figure 98: Error Limit configuration page**


The **Other Error Limits** (advanced configuration) page helps you define additional error limits and possible instrument adjustment settings.

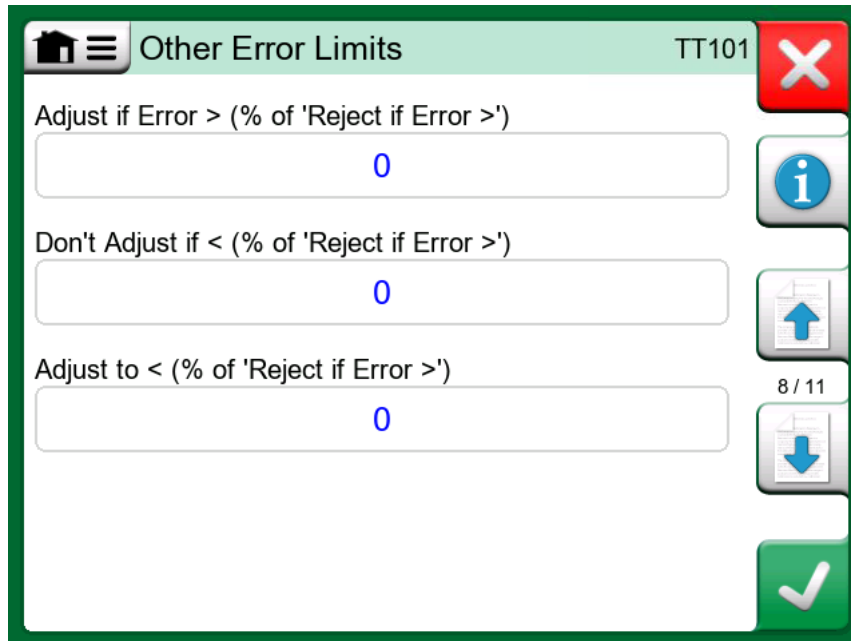

**Figure 99: Other Error Limits advanced configuration page**

## Device Related Data

The **Device** configuration page lets you specify the Location, Sensor Serial Number, Manufacturer, and Model.

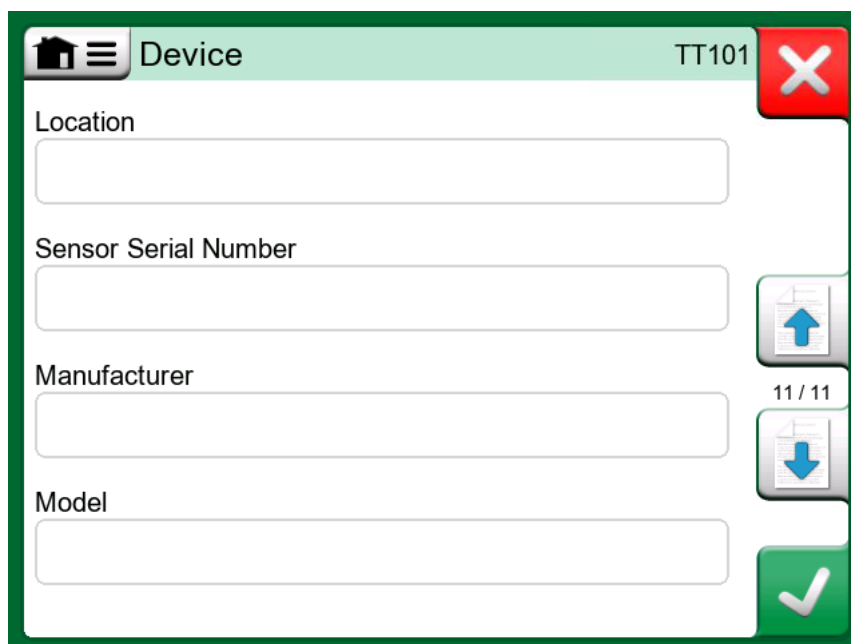

**Figure 100: Device advanced configuration page**

---

# Group Calibration

The **Group Calibration** feature in the Documenting Calibrator lets you calibrate several instruments or functions individually, in sequence. This is especially useful when calibrating instruments or functions that are part of a loop or when input generation takes time (e.g., with temperature), and several devices need to be calibrated in one session.



**Note:** Grouped instruments may be created directly in MC6-Ex or received from CMX or LOGiCAL. However, groups can only be created in the calibrator itself, not in the calibration management software.



**Tip:** Examples of instruments and functions that are suitable for Group Calibration include:

- A measurement loop consisting of a temperature transmitter, a local temperature indicator, and a temperature indicator in the control room.
- A set of temperature sensors calibrated simultaneously using, for example, a dry block.




**Note:** The Group Calibration feature does not support switches.


## Creating and Editing a Group


### Collecting Instruments or Functions for Group Calibration

You can create a group in the Instrument List window. Open the Instrument List menu and select **Create New > Group**.

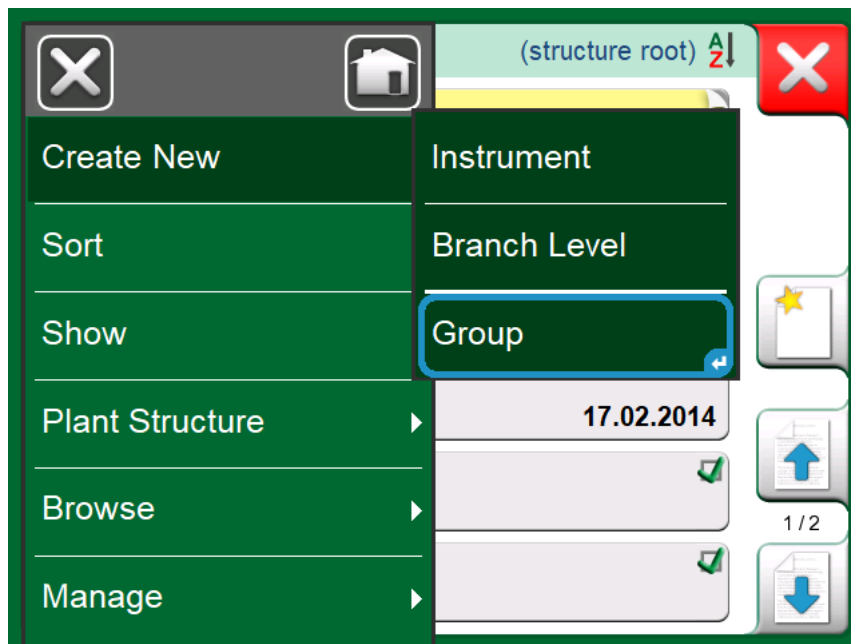

**Figure 101: Creating a group**

To add an instrument or function to the group, select it in the Instrument List view to open the Instrument Overview window and then press the **Add to Group** button (  ).

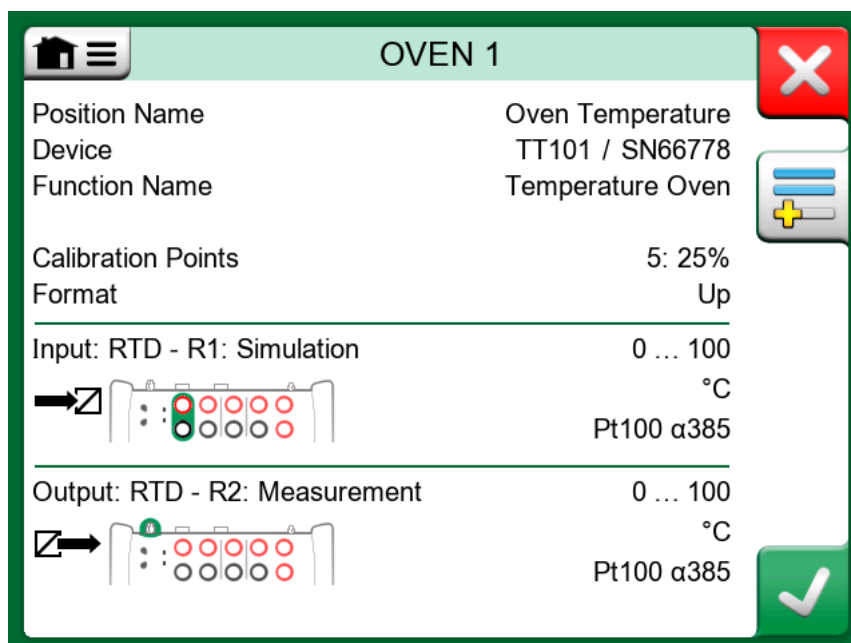

**Figure 102: Instrument Overview window – Add to Group button**


Instruments included in the group will have a blue background in the Instrument List.



**Figure 103: Grouped instruments**

Once an instrument is added to the group, MC6-Ex goes back to the Instrument List to allow selection of additional instruments. By default, calibration proceeds in the order the instruments or functions were added to the group.


Tap the **Group Info** button (☰) to view all grouped instruments in the Group Overview window.

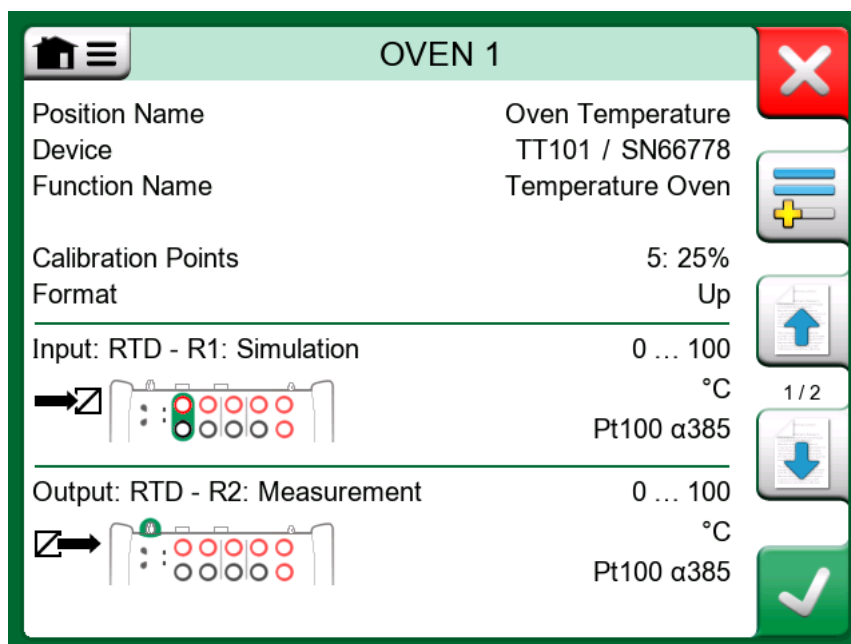

**Figure 104: Group Overview window**

### Editing a Group

You can rearrange the order using the context-sensitive menu in the Group Overview window.

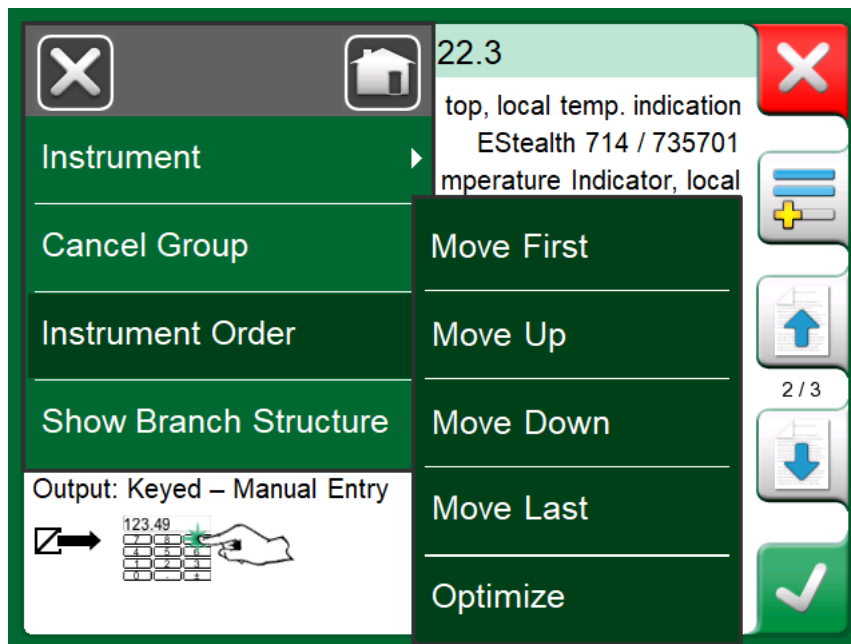

**Figure 105: Group calibration – calibration order for the grouped instruments**



**Note:** Selecting **Instrument Order > Optimize** will automatically sort the group so calibration starts with the instrument having the lowest calibration point.

To modify instrument configuration data for individual instruments, open the context-sensitive menu in the Group Overview window and select **Instrument > Settings**. The same menu also allows you to **Cancel Group** or remove the selected instrument or function from the group using the **Instrument > Remove from Group** option.




**Note:** When Group Calibration is active, the **Configure** (⚙️) and **View Results** (📄) buttons become options in the Group Overview window's context-sensitive menu.

## Calibrating a Group


After you define a group, start the calibration process by tapping the **Accept** button (✅) in the Group Overview window. The **Calibration** window opens and displays the first instrument or function in the group.


Tap the **Start** button to begin the calibration.

 **Note:** The **Info** button in the Calibration window now indicates which instrument or function is currently shown (see [Figure 107: Calibration window – Settings and Group Settings](#)). Press the button to view the instrument configuration data and connection diagrams.




**Figure 106: Group calibration – instrument selection button**

 **Note:** To change the calibration order, tap the **Info** button and select a different instrument or function in the Group Overview window.

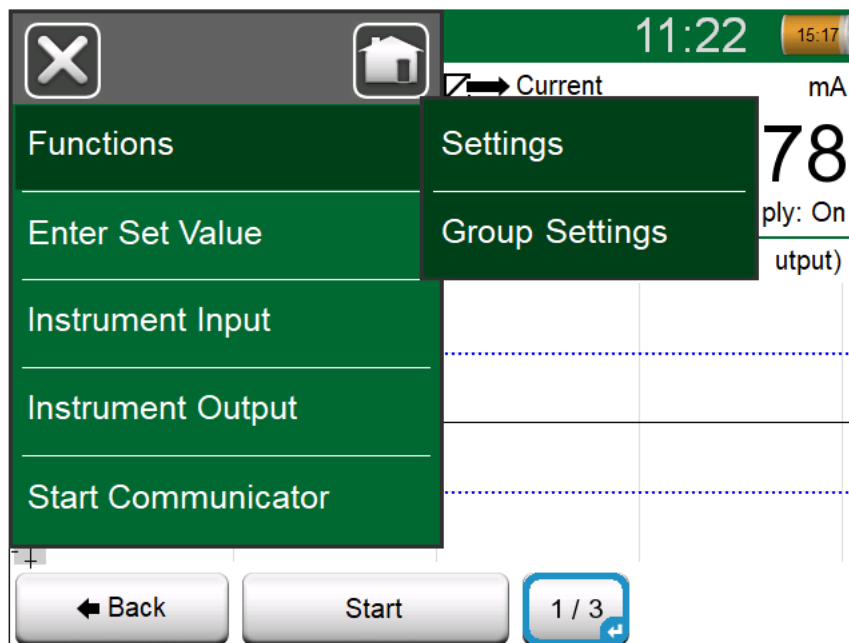

**Figure 107: Calibration window – Settings and Group Settings**

Before starting the group calibration, make sure to review the settings. Select **Functions** > **Settings** to access advanced options, such as such as displaying the **Function Name** in the Title bar. Descriptive function names can help identify instruments and functions more easily when calibrating items in a loop. More details about group settings are available in section [Group Settings](#).

 **Note:** Remember to change the connections if needed when the instrument or function changes during the group calibration.

After all instruments or functions have been calibrated, the Calibration Results window opens and indicates whether the calibration **Passed** or **Failed** for each instrument or function individually. The results are shown on multiple

pages, offering different views of the calibration data, such as numerical values, graphical representation, and general information.


You can save the results using the **Save** button (📄). Select whether the calibration is *As Found* or *As Left*. *As Left* result can be also combined with previous result by checking the **Combine with Previous Result** box. When enabled, the Calibration Management Software considers all combined results as a single calibration event with multiple repeats.

You can reject the result by pressing the **Delete** (🗑️) button if you do not want to save it.

After saving or rejecting the results, the Group Overview window opens (see [Figure 104: Group Overview window](#)). You can either start another calibration repeat by tapping the **Accept** button or return to the Instrument List to, for example, add or remove instruments or functions from the group.

## Group Settings

To open the **Group Settings** window, select **Functions > Group Settings** from the context-sensitive menu in the Calibration window (see [Figure 107: Calibration window – Settings and Group Settings](#)).

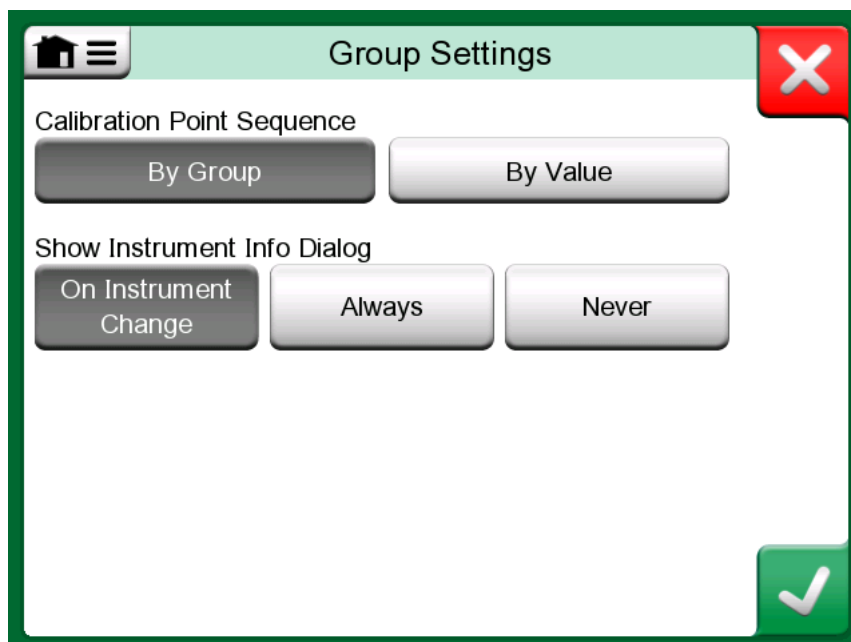

**Figure 108: Group Settings window**

Group Settings allow you to define the **Calibration Point Sequence**, which defines how calibration points are progressed through. Two options are available:

- **By Group**: Suitable when all instruments in the group have the same input range. The number of calibration points can vary, as long as the range is the same.
- **By Value**: Suitable for instruments with different spans. **The first instrument must have the lowest calibration point in the group.** If needed, use the sorting tool described in section [Editing a Group](#).

The **Show Instrument Info Dialog** setting determines when the Instrument Overview window is displayed during Group Calibration.

---

## Special Use Cases

The Documenting Calibrator offers versatile functionality and supports a wide range of use cases.


In some situations, the calibration range exceeds the measurement range of a pressure module or the control range of an external controller. In these cases, the pressure module or controller must be changed during the calibration process.

If instruments have been sent from CMX Calibration Management Software, you can use the Work Order View as an alternative way to access the instrument list. These special scenarios are described in the following subchapters.

## Changing a Pressure Module During Calibration

If a calibration involves using multiple pressure modules, you will need to change them "on the fly".

To change a pressure module during calibration:

1. Open the context-sensitive menu and choose either Instrument Input or Instrument Output, depending on where the module is connected.
2. Tap the **Port/Function** button and select the new pressure module from the list. If switching from one external pressure module to another, tap the **Change external pressure module** button () and follow the instructions shown on the display.

## Using External Controllers in Calibration

Using an MC6-Ex together with a pressure controller or a temperature dry block enables fully automated calibration of various pressure and temperature instruments. To use the external controller in Documenting Calibrator, first pair it with the calibrator and define the required presets. For instructions, see chapter [Enabling Communication with the Controller](#).

### Pressure Controller

When using a pressure controller, select Pressure as the Input Quantity. To run the controller in full Controller mode, select it in Port/Function. In this mode, the controller sets the pressure setpoints and measures the reference pressure.

To use MC6-Ex internal pressure modules as the reference, choose the appropriate internal or external module in Port/Function. The Input page will display a prompt asking whether the controller should set the calibration points – activate the tickbox to confirm.

### Temperature Dry Block

When working with a temperature dry block, the quantity selection depends on how the reference temperature is measured:

- Full Controller mode – the dry block controls setpoints and measures reference temperature. Select Temperature as Input Quantity and the dry block in Port/Function.
- MC6-Ex as a reference – MC6-Ex measures the reference temperature. Select RTD Temperature or TC Temperature as Input Quantity.


The Input page will display a prompt asking whether the controller should set the calibration points – activate the tickbox to confirm.

Details on the methods can be found in chapter [Calibration Methods with External Controllers](#).

## Changing a Controller During Calibration


Sometimes, calibration requires changing a controller during the process (for example, when the dry block's temperature range doesn't cover the instrument's full measurement range).

To change the controller during calibration:

1. Open the context-sensitive menu and choose **Instrument Input**.
2. Then tap the **Change Controller** button () in the Instrument Input window and follow the instructions shown on the display.


## Work Order View Mode

Work Order View Mode offers an alternative way to view the instrument list when instruments are sent from CMX Calibration Management Software along with Work Orders in their Calibration Procedure. To activate Work Order View Mode, open the context-sensitive menu in the Documenting Calibrator Home view and select **Work Order** from the View Mode options.

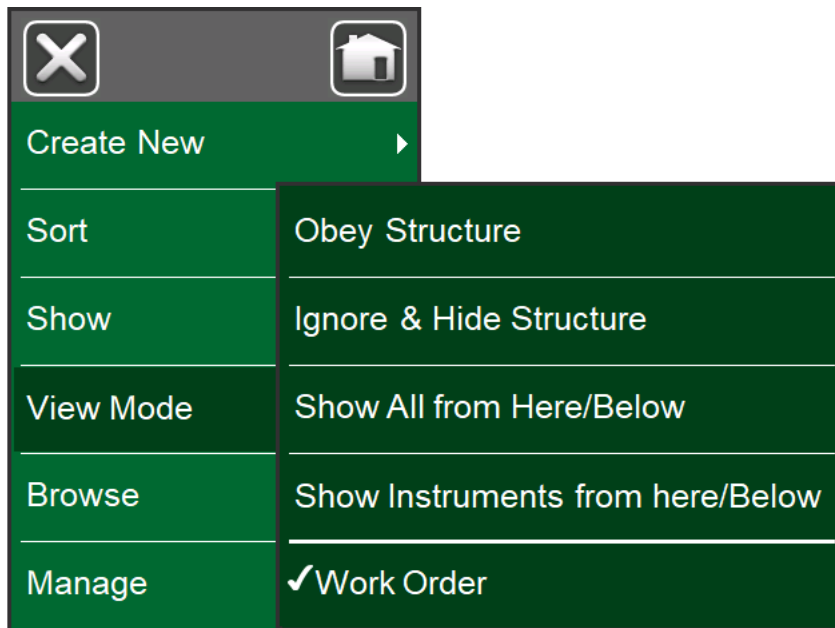

**Figure 109: Activating Work Order View Mode**

When Work Order View Mode is enabled, a list of Work Orders is shown.

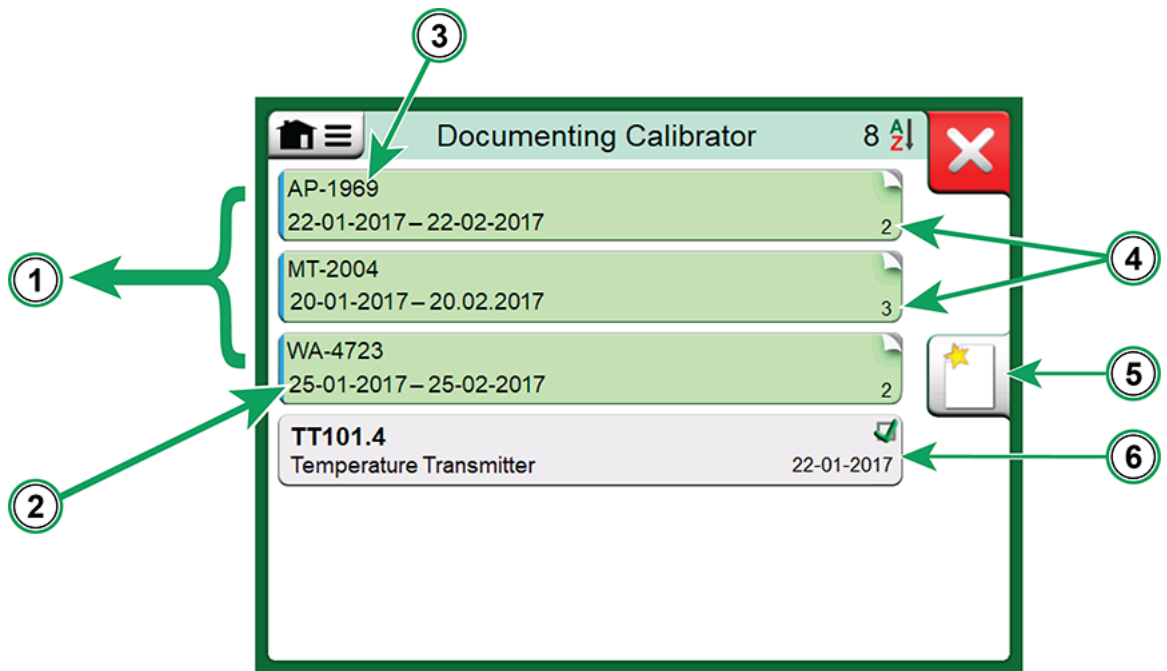

**Figure 110: List of Work Orders**


Legend:

1. Work Orders list (green background with light blue stripes indicating Work Order View Mode).
2. Start and End Dates.
3. Work Order Number.
4. Number of Instruments included in each Work Order.
5. **Create New** instrument button (🌟).
6. Instrument without a Work order number.



**Tip:** Instruments without a Work Order number are displayed below the list of Work Orders.

Tapping a Work Order opens its list of instruments.

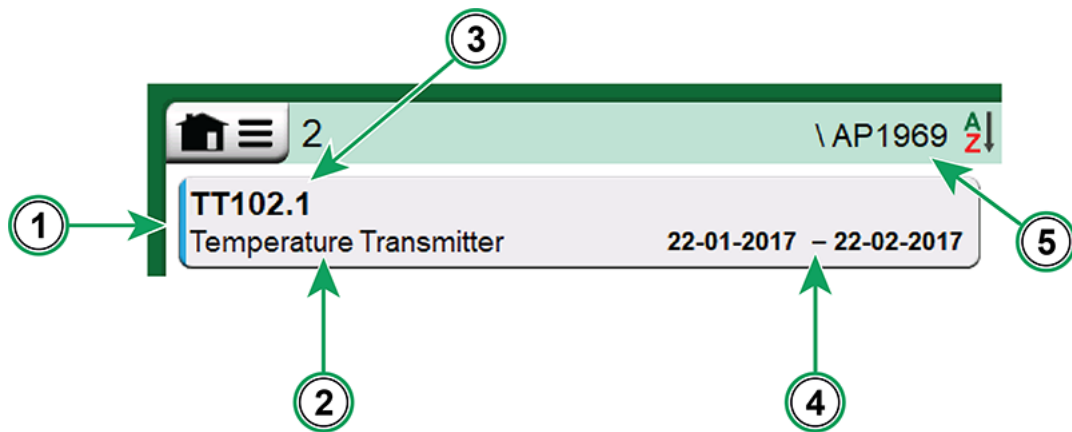

**Figure 111: Instrument belonging to Work Order**

Legend:

1. Instruments in a Work Order (highlighted with light blue stripes for Work Order View Mode).
2. Function Name.
3. Position ID.
4. Work Order Start and End Dates.
5. Work Order number.

Selecting a Work Order gives options in the context-sensitive menu to delete results of the current Work Order or remove the entire Work Order.

Calibrating an instrument within a Work Order follows the same procedure as with any other instrument.



**Note:** The Instrument Overview window displays the associated Work Order details within the instrument's general information and on a dedicated page. Work Order data such as number and dates are read-only in MC6-Ex.



**Note:** When Work Order View Mode is active, the Plant Structure is hidden, and you cannot move or copy instruments in the structure.

## Mobile Security Plus Option


Beamex Mobile Security Plus technology helps maintain the integrity of calibration data even when calibrations are performed offline. Authentication is done with the CMX user ID and the mobile device password set by the user in CMX, ensuring protection against unauthorized data changes.

The Mobile Security Plus feature requires CMX Calibration Management Software version 2.11 or later, with Mobile Security Plus option installed in both CMX and the calibrator. For more information about Mobile Security Plus functionality, please refer to the *CMX User Manual*.

### Applied Restrictions

Depending on the CMX configuration, the following Documenting Calibrator functions are either restricted by admin credentials or completely disabled:

- **Skipping** or **undoing** calibration points.
- **Rejecting** (exiting) incomplete calibrations without saving the results.
- **Changing** the date and time on the calibrator
- **Modifying** the calibration date and time of a keyed calibration.
- **Deleting** calibration results.
- **Deleting** an instrument that has saved calibration results.

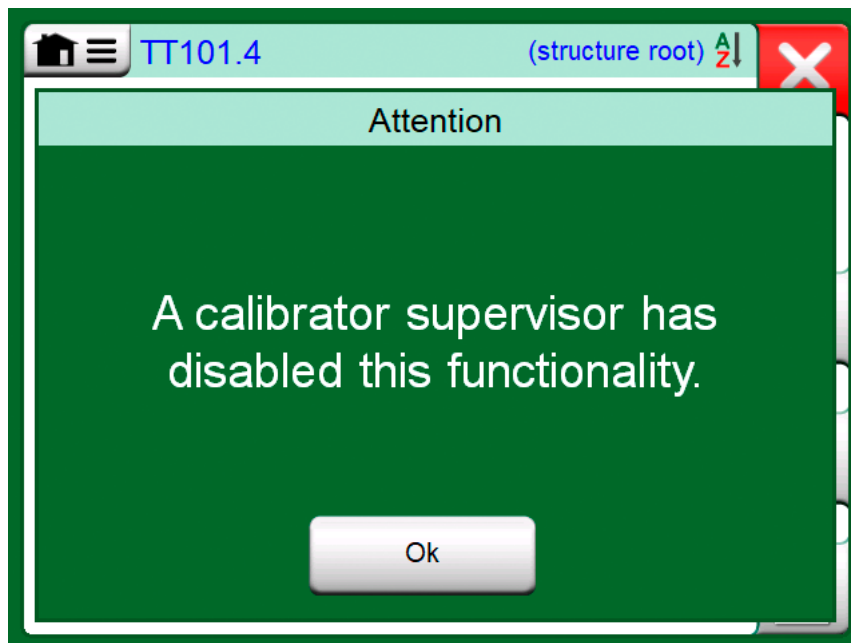

**Figure 112:** Message shown by the calibrator when functionality is blocked



**Note:** Changing Regional Settings and Date & Time also requires admin credentials.

# Data Logger

The **Data Logger** is an optional user interface mode that allows you to collect data with MC6-Ex. The **Data Logger** supports logging up to nine channels simultaneously, including measurements, generations, or simulations.


You can view the data log results in numerical or graphical format and transfer them to a PC for further analysis using the **Beamex MC6 Data Log Viewer** (for details, see subchapter [Data Log Viewer](#)).



**Note:** In many industrial settings, signals need to be measured over a period of time and the results stored for later analysis, such as for troubleshooting, monitoring, or calibration.

If the Data Logger option is not installed on your MC6-Ex, the icon in the Home View will appear disabled. To upgrade your calibrator, please contact Beamex.

To start the Data Logger mode, tap the **Data Logger** button in the Home view.

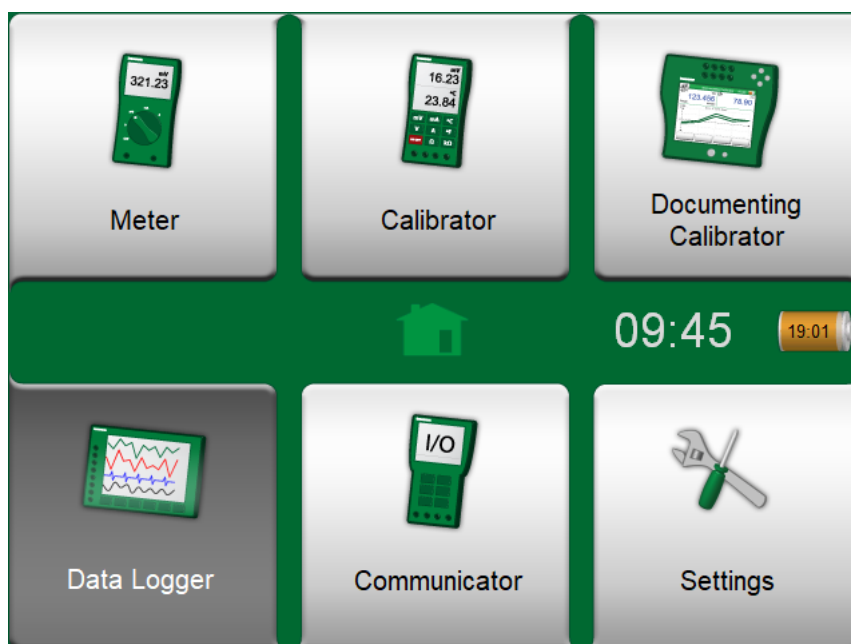

*Figure 113: Home view, Data Logger user interface mode*

## Configuring a Data Log

Make sure to define the general settings before starting your data log. Tap the grey area in the bottom-left corner of the main configuration window to open the **General Configuration** window. There, you can set how data is logged, what

values are saved, and how long the logging will run, among other configurable parameters.

Instant	1 s
Periodic	301 Pcs
⌘ 0:00:10	0:05:00

**Figure 114: Data Logger – General Configuration window button**

The start of data logging depends on the general settings:


- **Delayed Start** – You may configure a delay before logging begins, either as a countdown (e.g., 5 minutes) or a scheduled start time (e.g., 5:15 PM). During the delay, an hourglass icon with a countdown will be shown.




**Note:** After the delay, any channel-specific triggers may further delay the start. Logging begins as soon as one of the triggers is activated.

- **Logging Method** – Choose how data is logged. The **Periodic** method allows automatic logging based on additional settings. The **Key Press** method enables manual logging.



**Note:** If **Key Press** is selected, data is logged each time you tap the **Manual Trigger** button (). In this case, any channel-specific triggers will be ignored.


To configure a channel, tap one of the numbered areas in the **Data Logger's** main configuration window.

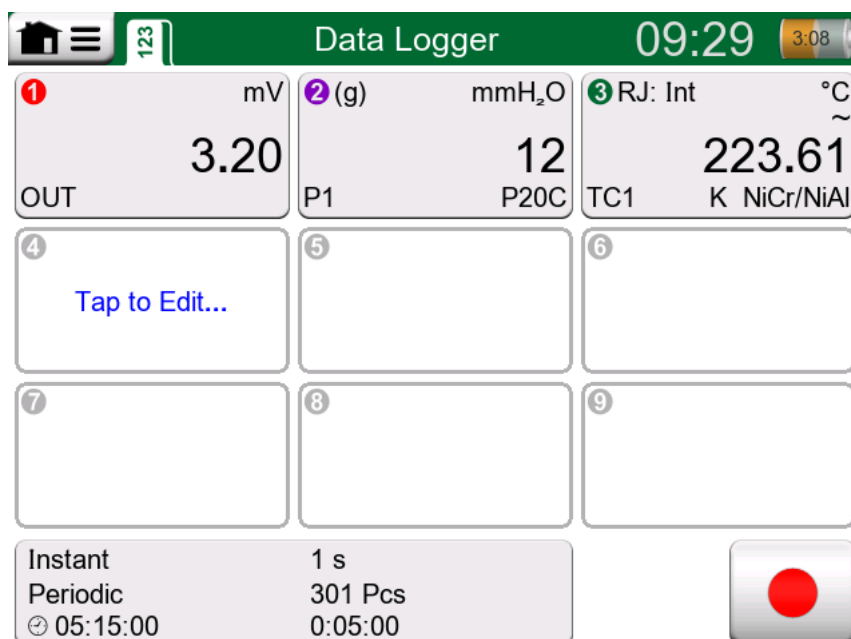

**Figure 115: Three configured channels in the main configuration window**


Each channel can be set up independently. Measurement channels include three configuration pages, while generation and simulation channels have two:


- Measurements/generations/simulations: A page used to define the quantity being measured, generated, or simulated, along with its additional settings.

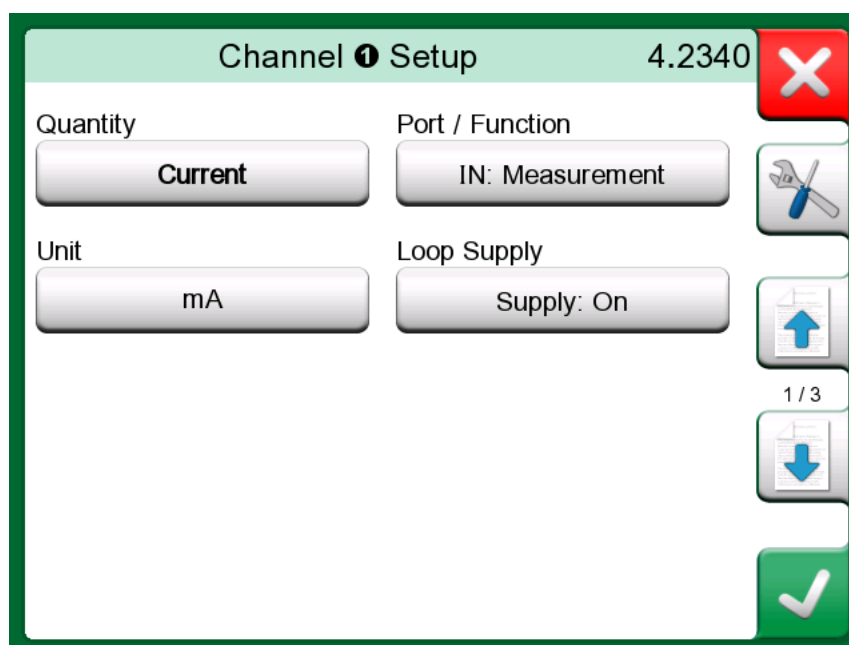

**Figure 116: Data log Channel Setup window – 1st page**

- Measurements/generations/simulations: A page that lets you configure the graph range, enter an optional function name, and select the color of the plot.

- **Measurements:** A page for defining a trigger that starts data logging. When a trigger is configured, a trigger symbol () appears in the channel area.

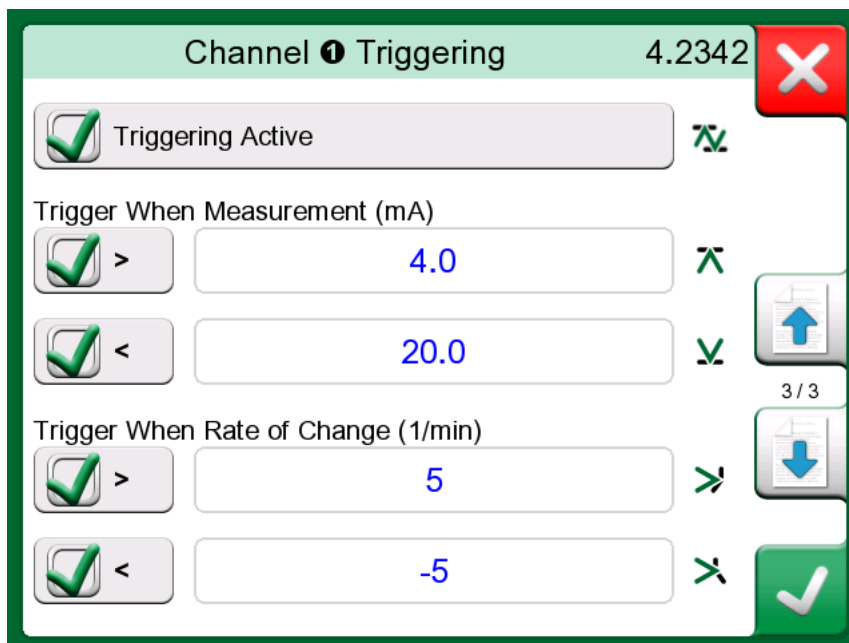

**Figure 117: Data log Channel Setup window – 3rd page**

In this example, all four trigger methods are active. You can use just one or combine several. If multiple methods are enabled, they are combined using a **logical OR**, and data logging begins as soon as one of the following is TRUE:

- The measured value is larger than 4.0
- The measured value is smaller than 20.0
- The rate of change exceeds 5
- The rate of change drops below -5





**Note:** When using pressure modules, you can zero the gauge module either through the context-sensitive menu in the main configuration window or directly in the Channel Setup window, if available.

### Saving and Opening Configurations


MC6-Ex remembers your latest data log settings, and you can also save custom configurations. To save or open a previously saved configuration, open the context-sensitive menu in the main configuration window and select **Configuration > Open Configuration/Save as**.

## Logging Data

To start the data log, tap the **Record** button () in the main configuration window. The button will change to a **Stop** button (), allowing you to stop the log at any time.



**Note:** The actual start of data logging depends on the general settings. See [Configuring a Data Log](#).

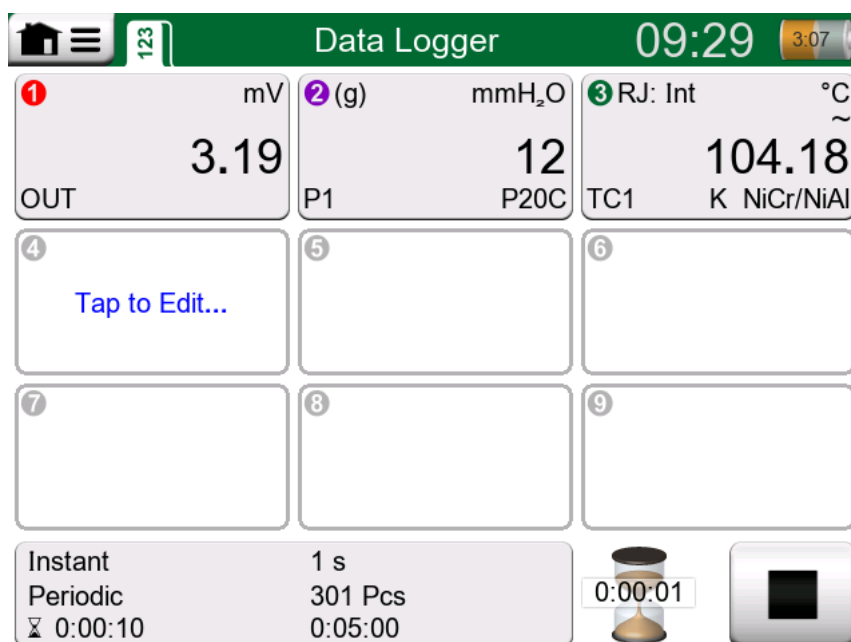

**Figure 118: Counting down the delay**


To change a generation or simulation value during data logging, tap the channel and enter a new **Set Value**.



**Tip:** You can switch between the main configuration window and the graph view by tapping the toggle area in the title bar.



**Figure 119: Toggle area in the title bar (highlighted in yellow)**

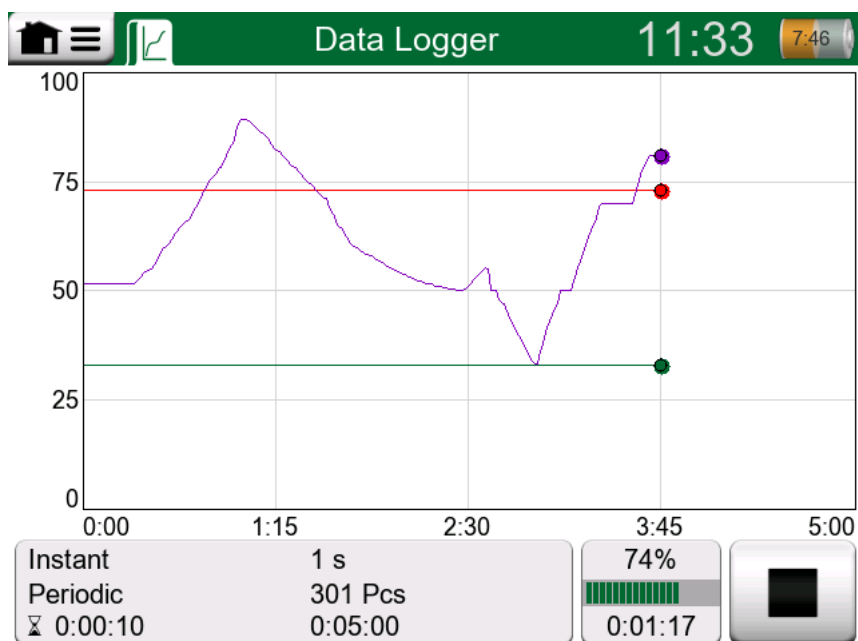

**Figure 120: Graph view during a data log**

## Data Log Results

After data logging has been finished or stopped, the Result Preview window shows the data log results across three pages: general information, a graph, and a numeric table.



**Tip:** For large numeric tables, use scroll buttons or the scroll bar to access any hidden rows and columns.

Results Preview			
Time	OUT (mV)	P1 (mmH <sub>2</sub> O)	TC1 (°C)
30-12-2024 09:30:09	Instant	Instant	Instant
09:30:09	3.20	12	96.89
09:30:10	3.20	13	96.71
09:30:11	3.20	13	96.59
09:30:12	3.20	13	96.45
09:30:13	3.20	13	96.32
09:30:14	3.20	12	96.19
09:30:15	3.21	13	96.05
09:30:16	3.21	13	95.95
09:30:17	3.20	13	95.77

**Figure 121: Data log Results Preview window**



**Note:** MC6-Ex automatically adds a timestamp (date and time) to each data log result.


On each page, you can either **Save** (📁) or **Delete** (🗑️) the data log results.



**Tip:** When saving, you can give the data log results a descriptive name.

## Viewing Saved Data Log Results

To view previously saved data logs, go to the main configuration window in the Data Logger and select **View Data Log Results** from the context-sensitive menu.

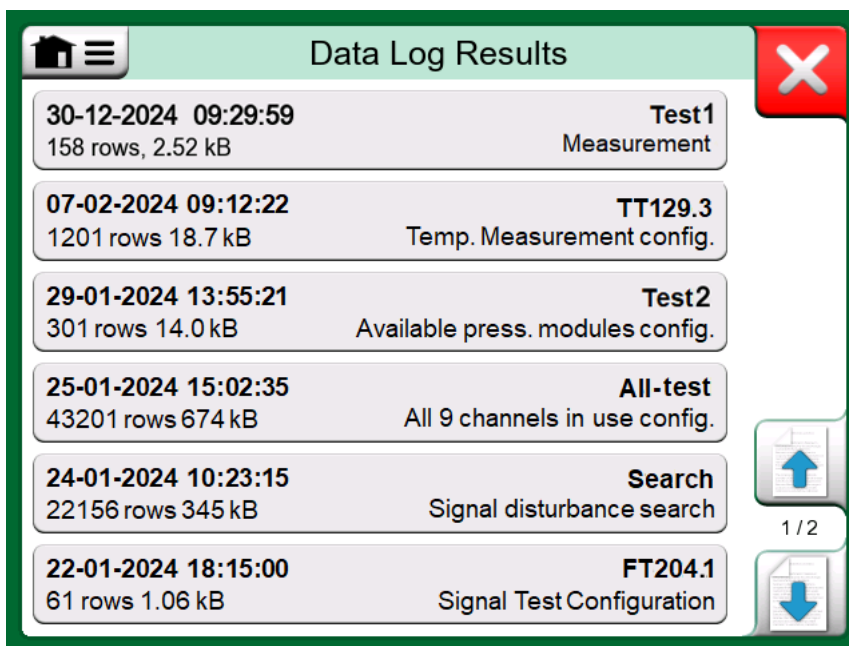

**Figure 122: Data log Results list**

Each saved log displays its time, date, and result name in the top row. The bottom row shows the file size and, if available, the name of the configuration used.




**Tip:** You can use the context-sensitive menu in the Data Log Results window to **Delete All** saved data log results.

When viewing a specific result, the menu also offers options to **rename** or **delete** the selected log.

## Data Log Viewer

**Beamex MC6 Data Log Viewer** is a free PC tool used to transfer data log results from MC6-Ex to a PC. You can download the MC6 Data Log Viewer under the Resources tab on the [MC6-Ex product page](#) on the Beamex website.

After installing the MC6 Data Log Viewer on your PC, open the program and connect the calibrator using a USB cable. The tool will automatically detect the calibrator, provided it is powered on. You can then download and view the results from the MC6-Ex calibrator. Data can be saved in the tool's native format (.LG6) or exported as .CSV files, which can be easily imported into spreadsheet programs.

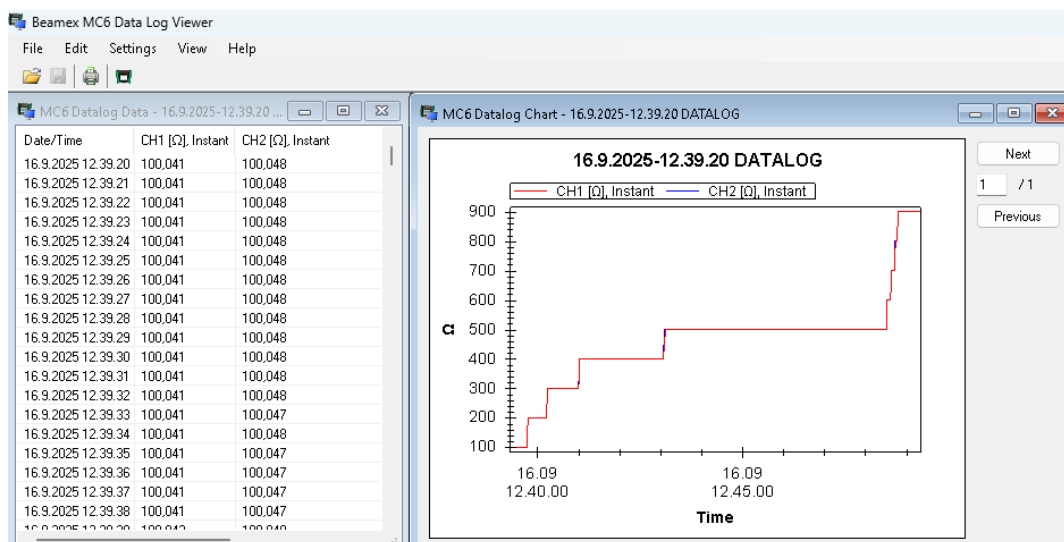

**Figure 123: Beamex MC6 Data Log Viewer**

# Communicator

The MC6-Ex calibrator can be used as a fieldbus communicator to calibrate, configure, and trim your smart instruments. The **Communicator** is an optional user interface mode that allows you to connect with smart instruments, using one of the following communication protocols:

- **HART** (MC6-Ex supports HART instruments using HART Protocols 5 and 7);  
(<https://www.fieldcommgroup.org/>)

MC6-Ex can be used as a primary or secondary master of a segment.


- **FOUNDATION Fieldbus H1**;  
(<https://www.fieldcommgroup.org/technologies/foundation-fieldbus/>)

MC6-Ex is seen as a guest device (visitor) and, when necessary, as a secondary master of a segment using Link Active Scheduler (LAS).

- **PROFIBUS PA**;  
(<https://www.profibus.com/>)


MC6-Ex takes the role of PROFIBUS master when connected to a PROFIBUS segment.

To start the Communicator mode and see the communication protocols installed in your calibrator, tap the **Communicator** button in the Home view. If your MC6-Ex does not have communicator options installed, the Communicator icon in the Home View will be disabled. Contact Beamex for an upgrade.

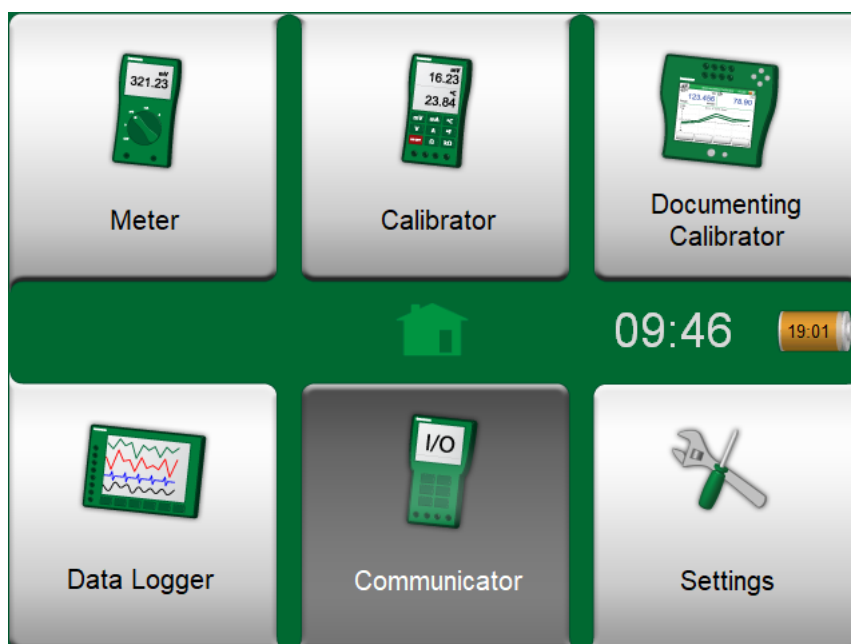

**Figure 124: Home view, Communicator user interface mode**

All three communication protocols can be installed simultaneously, and the Communicator user interface mode is activated if any of the three protocols is installed. The Communicator mode is primarily meant for viewing and editing the configuration of smart instruments. The three supported communication protocols are available as a quantity in Calibrator, Documenting Calibrator and Data Logger user interface modes. For more information on smart instruments see chapter [Working With Smart Instruments](#).

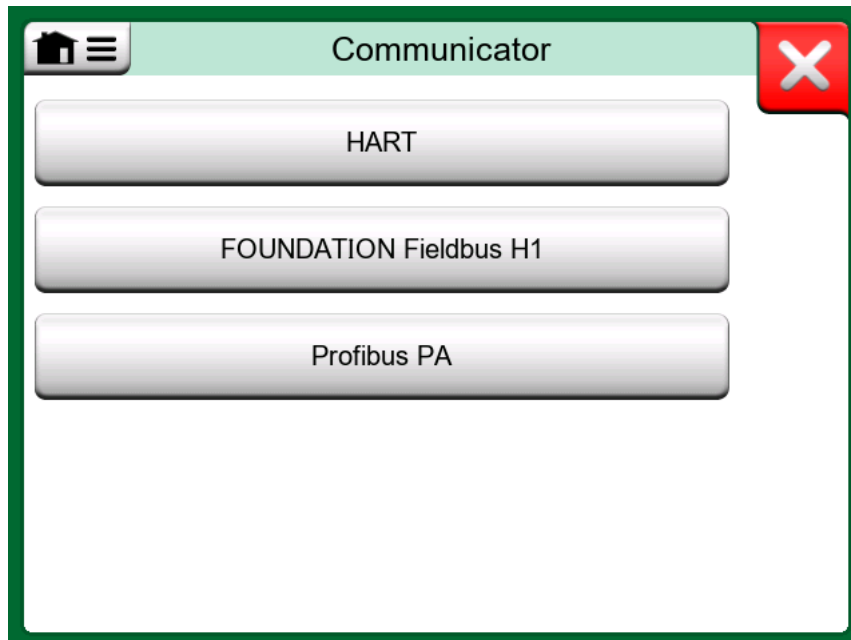

**Figure 125: Communication protocols**



**Note:** Each fieldbus communication protocol is a separate option, therefore not all protocols are necessarily enabled in your MC6-Ex calibrator.

This manual is not intended as an introduction to HART and fieldbus instruments. For basic knowledge and terminology, refer to books specifically dedicated to HART and fieldbus technology.

The Communicator user interface may display text in a language different from the language set up in the MC6-Ex settings. The language of the instrument's fields etc. may differ from MC6-Ex calibrator's language.


---

## Device Description Files

Device Description (DD) files describe the smart instrument functionality and are required for communication. The MC6-Ex calibrator supports hundreds of HART and fieldbus devices from dozens of manufacturers, depending on the Communicator options installed. If a specific device is not supported, MC6-Ex uses the generic DD file that only supports basic functionalities.

To view DD files currently installed in the calibrator:

1. Open **Settings** and select the protocol (HART / FOUNDATION Fieldbus H1 / Profibus PA).
2. In the context-sensitive menu, choose **Available Device Descriptions**. The calibrator will show a list of DDs by manufacturer, with the option to view each file individually.

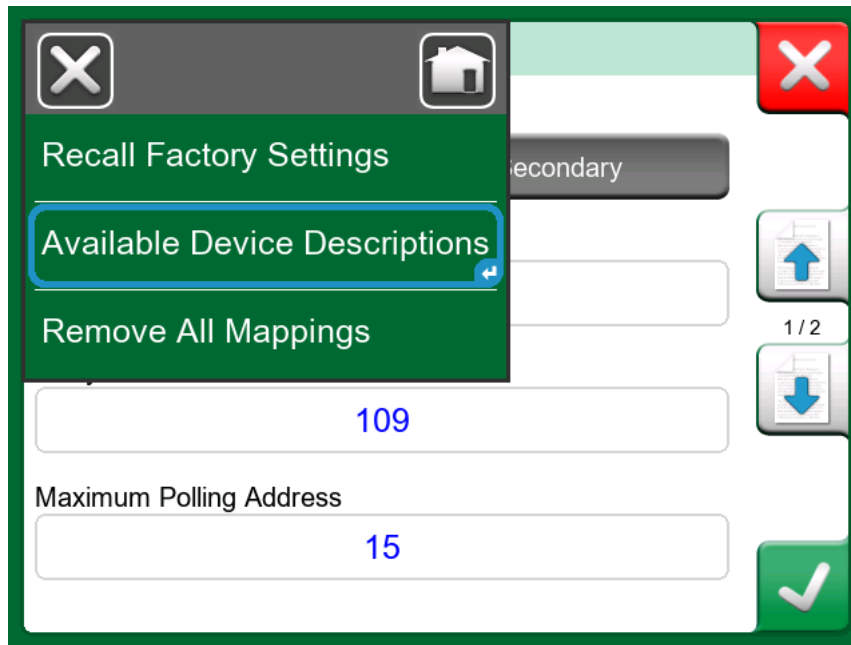

**Figure 126: Context-sensitive menu – Available Device Descriptions**


New DD files for the MC6-Ex are released regularly. When available, they can be downloaded from the Beamex website and installed in your calibrator using the **MC6 Device Description Installer** tool. Each DD package includes a release note listing all supported devices and the DDs added in the latest package. Downloads are available under the Resources tab on the [MC6-Ex page](#) on the Beamex website.



**Note:** It is not possible to download DD files from the smart instrument manufacturer's website and install them directly onto the calibrator. The DD files must be downloaded from the Beamex website.

### Device Descriptions settings

Using device-specific DD files is the recommended method. However, for HART or Profibus PA it is also possible to define that a Generic or Standard Profile DD file should be used, even though a device-specific DD file would be available. For FOUNDATION Fieldbus H1, only the Device Specific DD files can be used. A simplified method for using HART instruments, called Basic View, is also available. The default setting of Active Device Descriptions can be defined in MC6-Ex Settings.

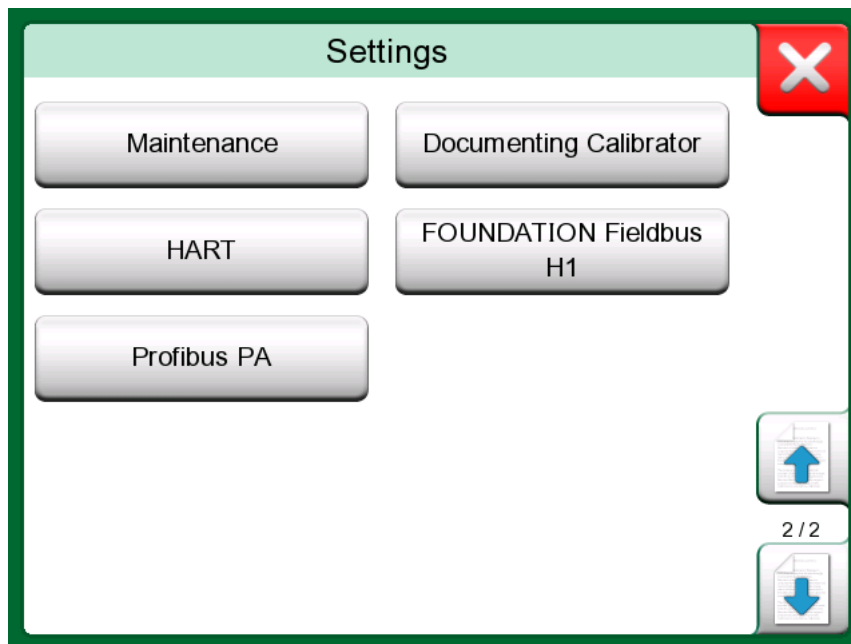

**Figure 127: Communication protocol settings in MC6-Ex Settings mode**


MC6-Ex supports three kinds of Active Device Descriptions for smart instruments:

- **Device Specific**, i.e. custom DD file for smart instrument, stored in MC6-Ex memory. Full instrument data is available.
- **Generic**, i.e. a library of Common DD files applying to most HART instruments. Only a standard set of instrument data is available.






**Note:** Profibus PA: this option is called Standard Profile.

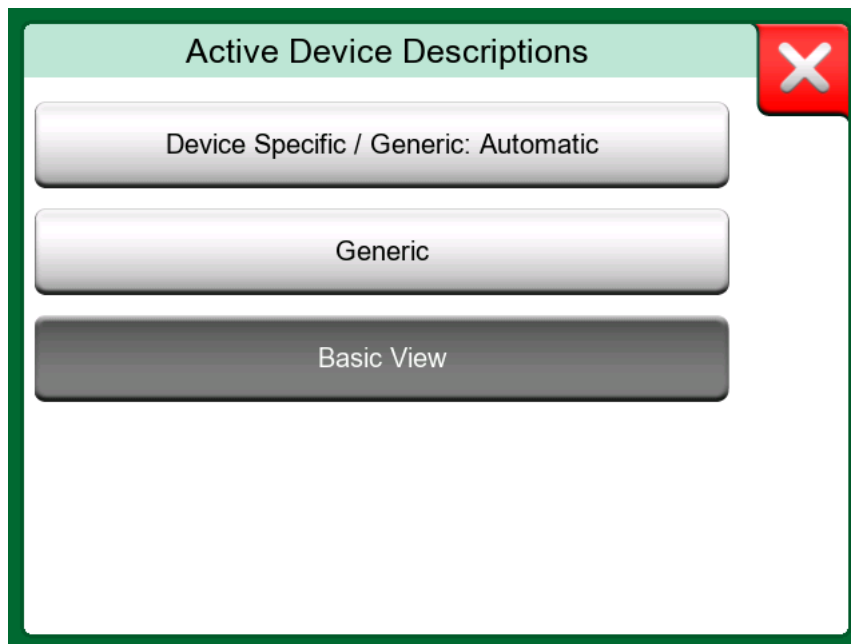- **Basic View**, a simplified HART DD file available in MC6-Ex.



**Figure 128: Active Device Descriptions window**


 **Note:** You can also define the Active Device Descriptions method in other user interface modes by pressing **Tools** button () in the Supply view for selecting output Quantity. This option is available in **Calibrator**, **Documenting Calibrator**, **Data Logger** and **Communicator** user interface modes.

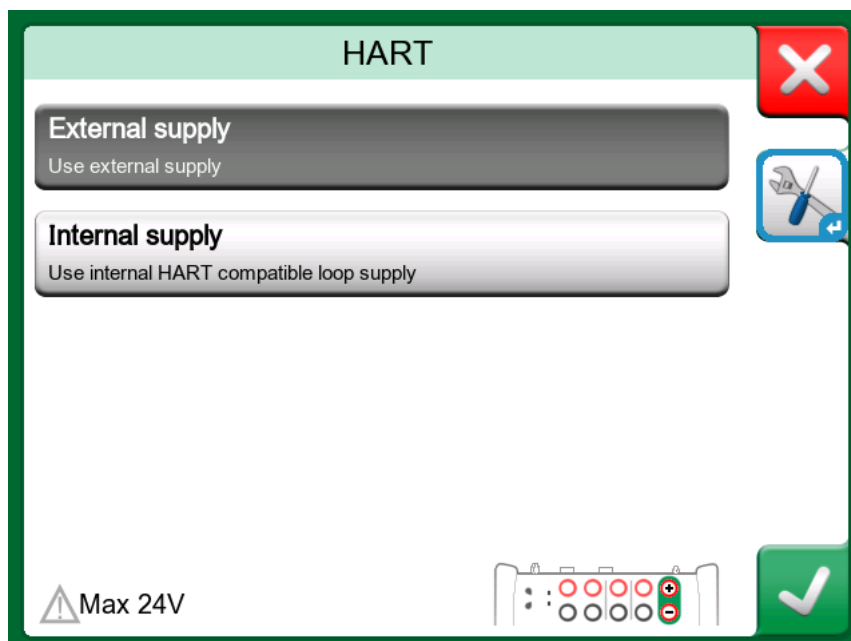

**Figure 129: Tools button in Supply view for selecting output quantity**


## Basic View

The Basic View window presents the instrument's Value Parameters, basic Device Setup settings, and Process Variable settings. You can select any available value parameter for calibration, data logging etc.

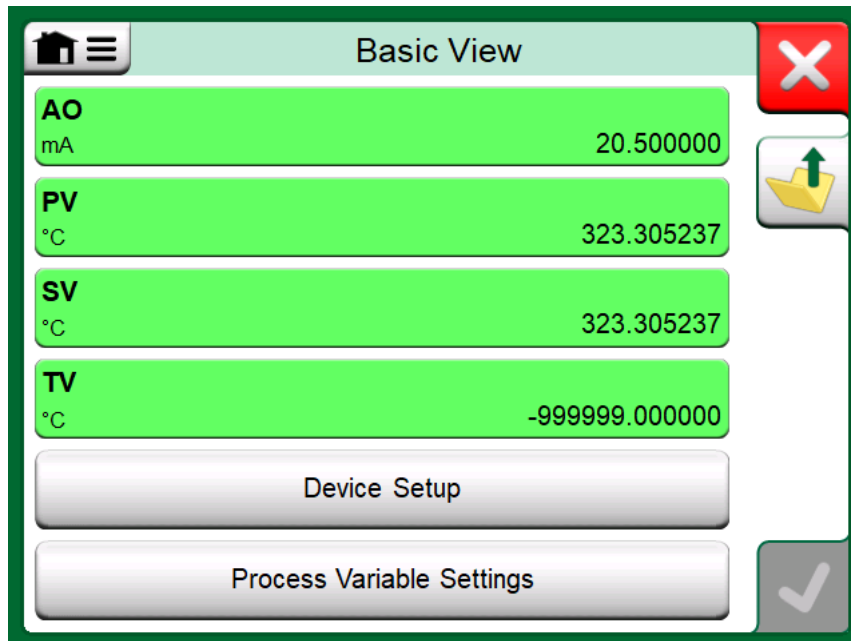

**Figure 130: HART Basic View window example**

Editable fields are presented in the following examples of Device Setup window and Process Variable Settings window.

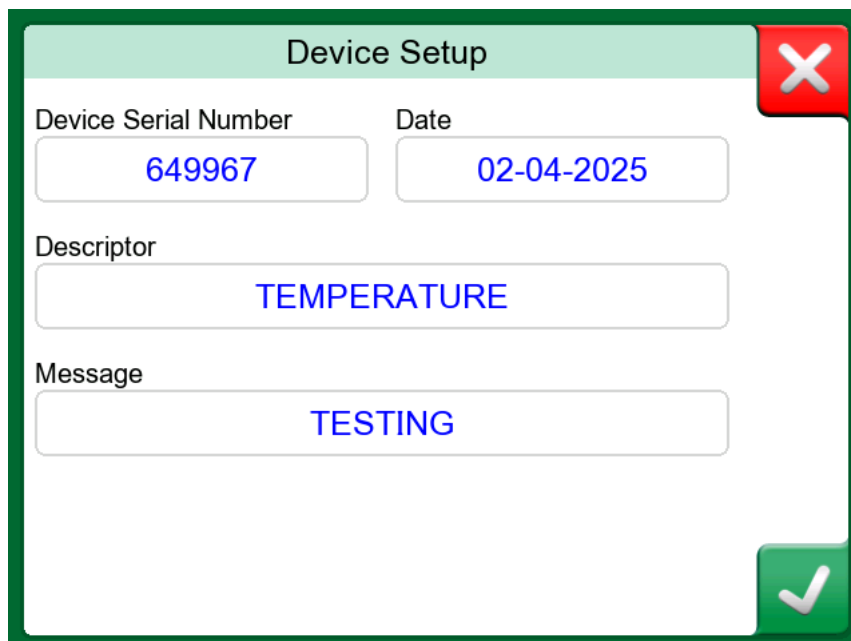

**Figure 131: HART Device Setup window example**

Process Variable Settings

Transfer Function  
Linear

Unit: °C      Damping (s): 0.4

Sensor Serial Number: 823097

Range: 0 (0%) ... 150 (100%) kPa

Range Limits: -200 ... 850 / 10


**Figure 132: HART Process Variable Settings window example**



**Note:** HART trimming is not supported using Basic View DD file. Use another Device Description method when trimming a HART instrument.

## Managing Smart Instrument Configurations in MC6-Ex

You can manage smart instrument configuration data using MC6-Ex and a free PC tool - **Beamex MC6 Fieldbus Configuration Viewer**. You can download the MC6 Fieldbus Configuration Viewer under the Resources tab on the [MC6-Ex](#) page on the Beamex website.

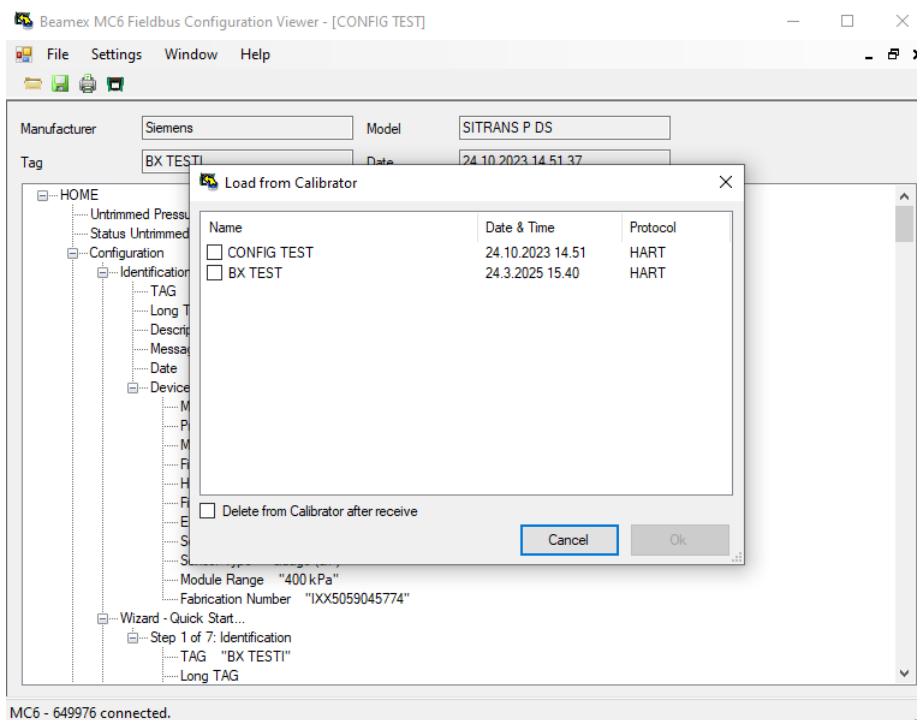

**Figure 133: Beamex MC6 Fieldbus Configuration Viewer**




**Note:** With **Fieldbus Configuration Viewer**, you can:

- Load the configuration files from MC6-Ex calibrator
- View the configuration files
- Save the configuration files in PC (e.g. proprietary \*.fc file).
- Print the configuration files

## Saving Configurations

You can save the instrument's configuration data when connected to a smart instrument. Open the context-sensitive menu and select **Configuration > Save As** to download all configuration data. After configuration download is completed, MC6-Ex will prompt you to give the configuration file a name. The default file name is the smart instrument's Tag name.

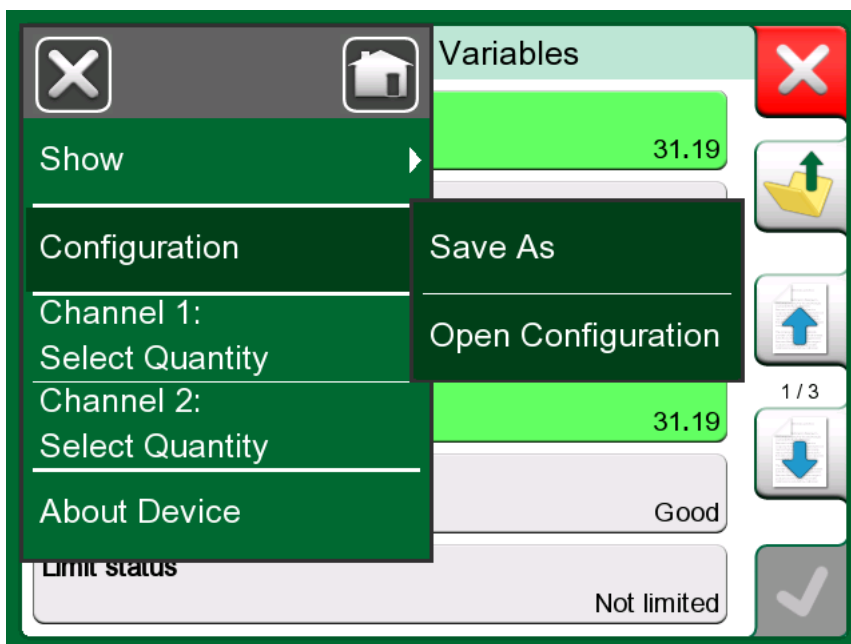

**Figure 134: Smart instruments – saving the configuration**

This feature is handy especially when you have an analog DCS (Distributed Control System) and HART smart instruments in the field. You can use this functionality to create a database of all the configuration files of your smart instruments. If a transmitter breaks, all settings are stored in MC6-Ex (alternatively on a PC), for an easy configuration of the new transmitter replacing the broken one.




**Note:** It is not possible to upload the saved configuration file from MC6-Ex back to the transmitter.

## Viewing or Opening Configurations

You can open the list of saved configurations anywhere in **Communicator** mode. Open the context-sensitive menu and select **Configuration > Open Configuration** to display the list of saved configurations.



**Note:** Saved configurations can also be opened in the communication protocol selection window, where no protocol has been selected yet.

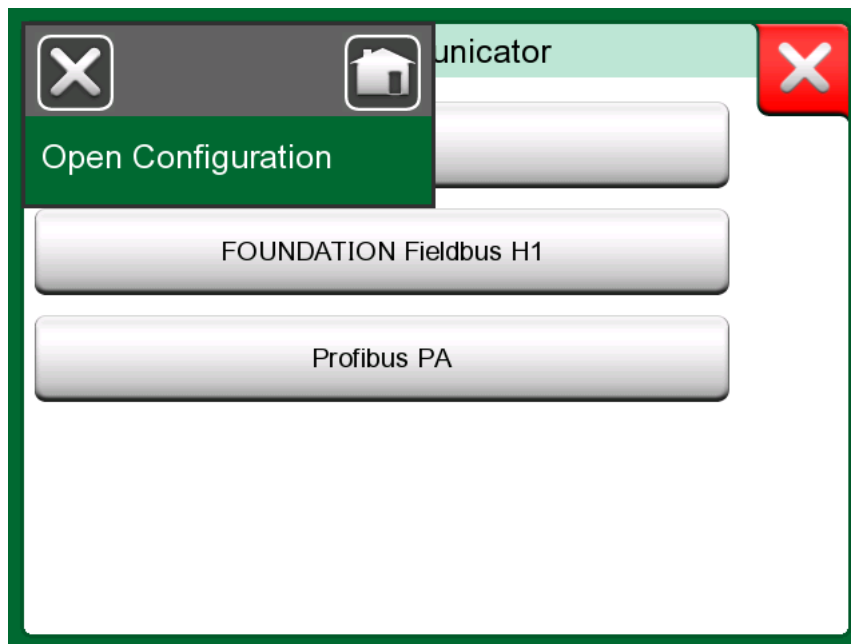

**Figure 135: Open Configuration option in protocol selection window**

The list shows the following information about each saved configuration file:

- Name of the file
- Manufacturer/Model
- Date/Time when saved
- Protocol name

You can sort the list of configurations with the help of the sorting tools available in the context-sensitive menu. Tap on a configuration to view the saved configuration data.



**Note:** The configuration file data cannot be edited.

## Linking Configurations to CMX

If applicable, the configurations can also be sent to **CMX Calibration Management Software**, as linked documents in a Position/Device field. Use this feature to link the \*.fc files to CMX. Double click the link to open the configuration file in the Fieldbus Configuration Viewer.


# Working With Smart Instruments

Smart instruments are advanced devices equipped with digital communication capabilities and microprocessors. To work with smart instruments, you need to establish a connection. This enables communication, access to data, and the ability to perform tasks such as configuration, calibration, and diagnostics.

In MC6-Ex you can start communication with a smart instrument from the following user interface modes:

- **Communicator,**
- **Calibrator,**
- **Documenting Calibrator,**
- **Data Logger.**

When creating a new instrument in Documenting Calibrator using fieldbus or HART instruments' digital output, select HART, FOUNDATION Fieldbus H1, or Profibus PA as the Output quantity. In other user interface modes where communication may be started, the communication protocols are available in the Quantity selection window. See the picture below.

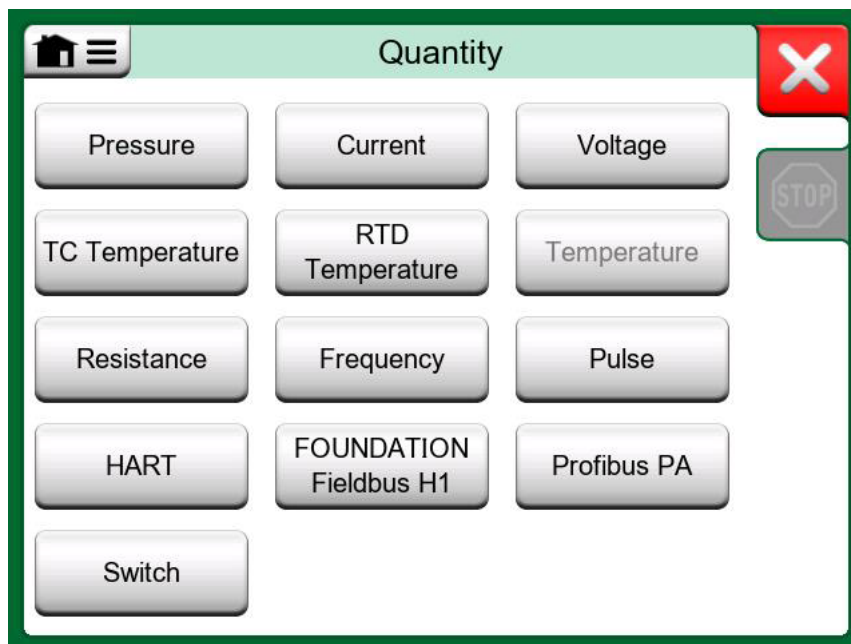

**Figure 136: Quantity selection window in Documenting Calibrator mode**




**Note:** For the analog output of a HART instrument, select **Current** as the Output quantity.

See also chapter [Get Mapped Values feature](#).

## Additional Options During Calibration

The context-sensitive menu in the Calibration window offers additional options available. For both HART and fieldbus instruments, you can start the Communicator mode to edit instrument data and, if needed, start a HART trim method. Additionally, for fieldbus instruments, there is a specific option for trimming the instrument.

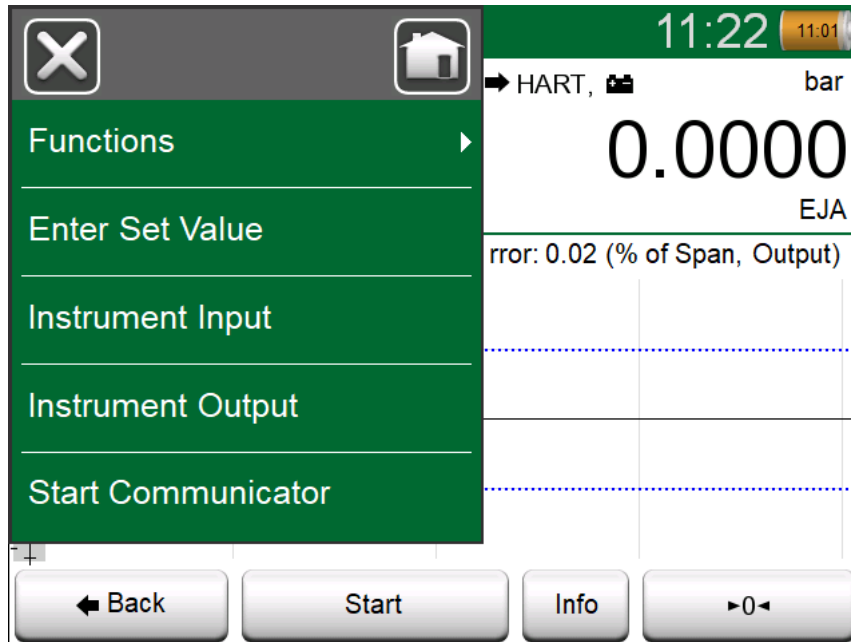


**Figure 137: Context-sensitive menu options in HART instrument Calibration window**

---

## About Smart Instrument Parameters

This chapter briefly describes how to view, configure and access the smart instrument data in MC6-Ex.

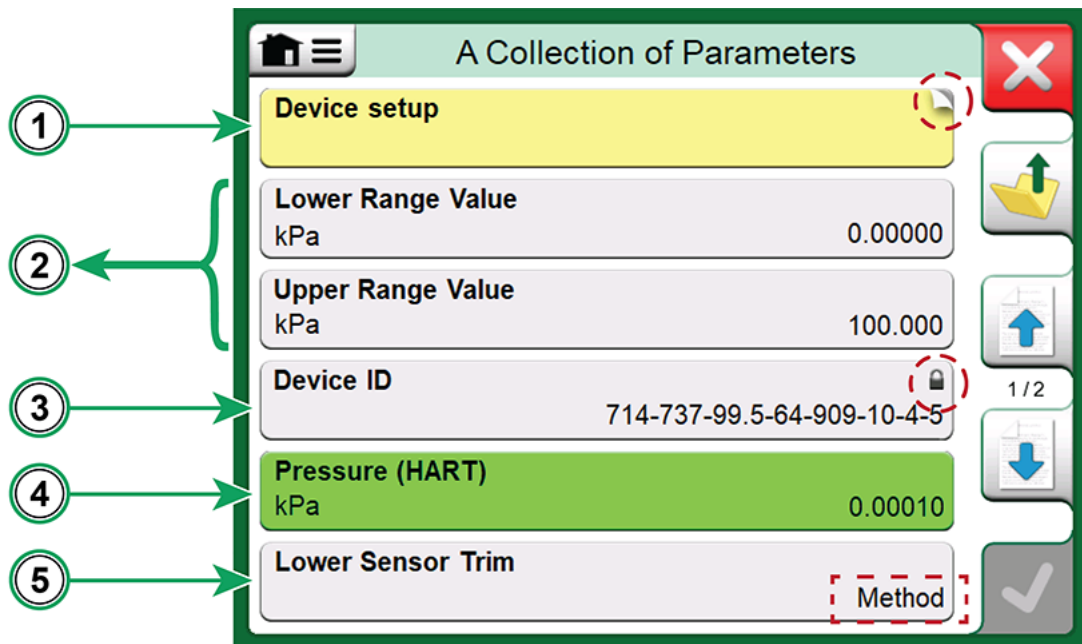

**Figure 138: Blocks and Parameters view example in MC6-Ex**

Legend:

1. **Blocks and Records**- may contain sub-blocks, sub-records, editable parameters and read-only parameters. Tap on the Block/Record to see its contents.
2. **Editable parameters** - fields that can be numeric, text, single select, multi select or date type. Tap to edit the field data.
3. **Read-only parameters** - data that you may view/read but cannot edit. The "lock" icon indicates that the parameter cannot be edited.
4. **Value parameter** - a special case of the read-only parameter. The Value parameter is a live measurement and cannot be edited, but it can be opened for viewing and selected for use in **Calibrator**, **Documenting Calibrator** or **Data Logger** modes.
5. **Methods** - automated procedures for e.g. calibration of HART instruments. Note that the word "Method" helps to distinguish a method from a parameter.



**Note:** Select **Show > Measurable Variables** from the context-sensitive menu to display only the Value parameters.



**Note:** If you select a Value parameter and you started the communication from **Communicator** mode, the value is taken into use in **Calibrator**. If you started the communication from any other supported user interface mode, e.g. **Data Logger**, the selected Value parameter is taken into use only in that particular user interface mode.

## Editing Parameters


Editing parameters means changing any editable parameter in the instrument's memory, such as selecting the type of process connection fitted to the instrument.

Tap on a parameter to start editing it in a new window. The type of window depends on the type of parameter selected for editing, e.g. a selection list, a text or a numeric field.

When you edit a parameter that is not a part of a record containing several parameters, the edited value is sent to the instrument as soon as you press the

**Accept** button (✓).

HART instruments: If a parameter is part of a record (i.e. several parameters together), each parameter can be edited separately. However, the edited values are not sent to the instrument until the **Accept** button (✓) of the record window is pressed. Prior to sending, edited parameters have a blue background.

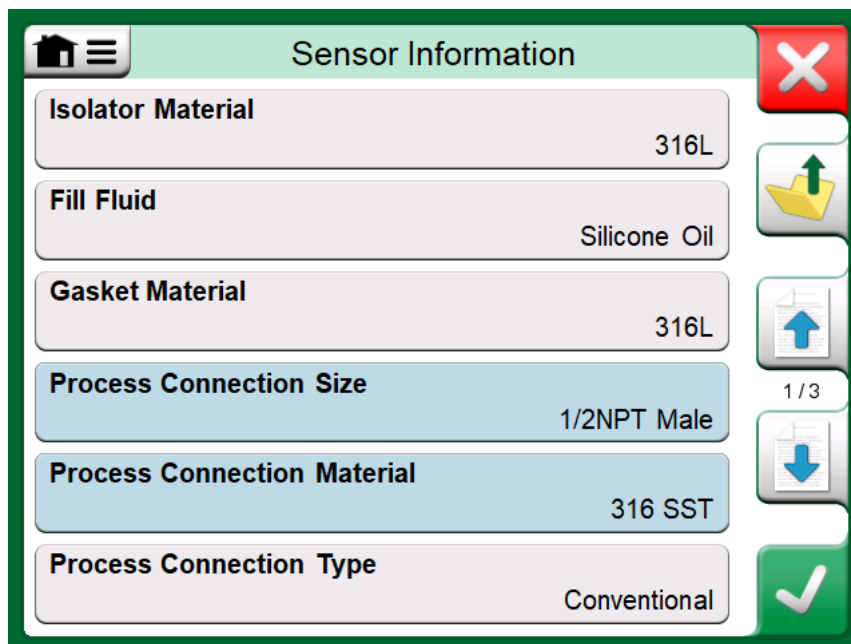

**Figure 139: Sensor Information record example**




**Note:** This manual explains how the parameters can be accessed and viewed using MC6-Ex calibrator. For detailed information on smart instrument data, refer to the manual of the instrument itself.

Beamex cannot be held responsible for any damages caused by changing parameters of smart instruments.

## Selecting Instruments

When a communication protocol is selected, a window opens to choose whether to use the MC6-Ex internal 19 V supply or an external supply. Additionally, with the FOUNDATION Fieldbus H1 protocol, you need to specify whether you are connecting to an offline device or a device that is part of a live segment.

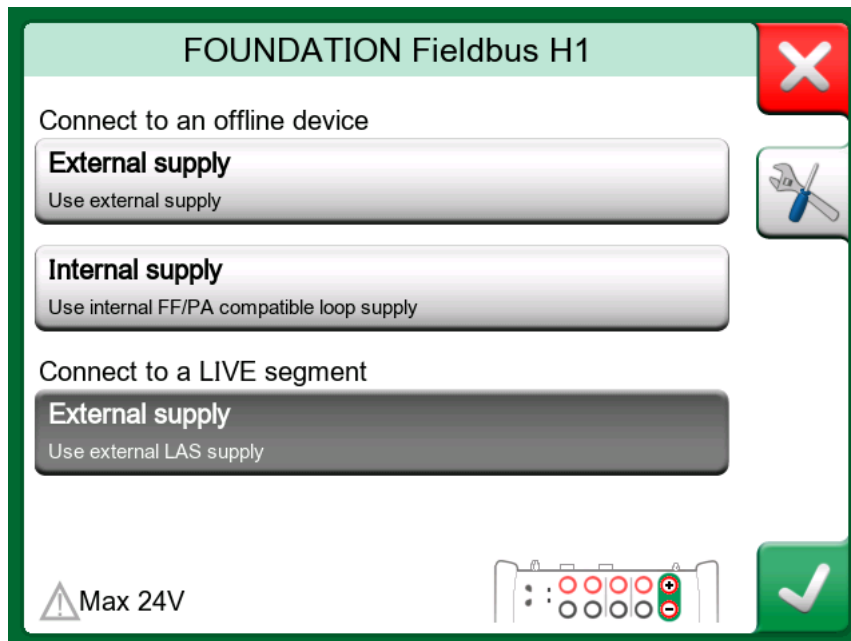

**Figure 140: External supply voltage for FOUNDATION Fieldbus H1 for LIVE segment use**



**Caution:** Due to its intrinsic safety features, the MC6-Ex has more limited capability to supply operating voltage for demanding HART transmitters.


These intrinsic safety features may cause operating voltage to drop during the connection phase if the Internal Supply mode is used in the HART Communicator, potentially leading to communication issues.

For more power-demanding HART transmitters, such as multivariable transmitters and valve positioners, it is recommended to use a suitable external power supply unit and operate the MC6-Ex HART Communicator in **External Supply** mode.

In External Supply mode, an additional 250-ohm HART resistor is required.

When using an external supply, ensure communication by using either a HART or fieldbus compliant power supply or by adding a suitable resistor between the


power supply and the bus. Check the chapter [Smart Instrument Connections](#) and consult your power supply's manual for detailed instructions.

Additionally, there is a **Tools** button () for editing or checking the **Protocol Settings**. You can also access the protocol settings through the Settings user interface mode.



**Note:** If HART instrument is not found, it might be because of low loop impedance. Increasing the signal sensitivity might help improve communication.

Normal Sensitivity setting follows HART specifications, while High Sensitivity option allows the calibrator to send stronger signals and detect weaker ones. To change the Sensitivity, go to **Settings > HART** and set it to **High**.

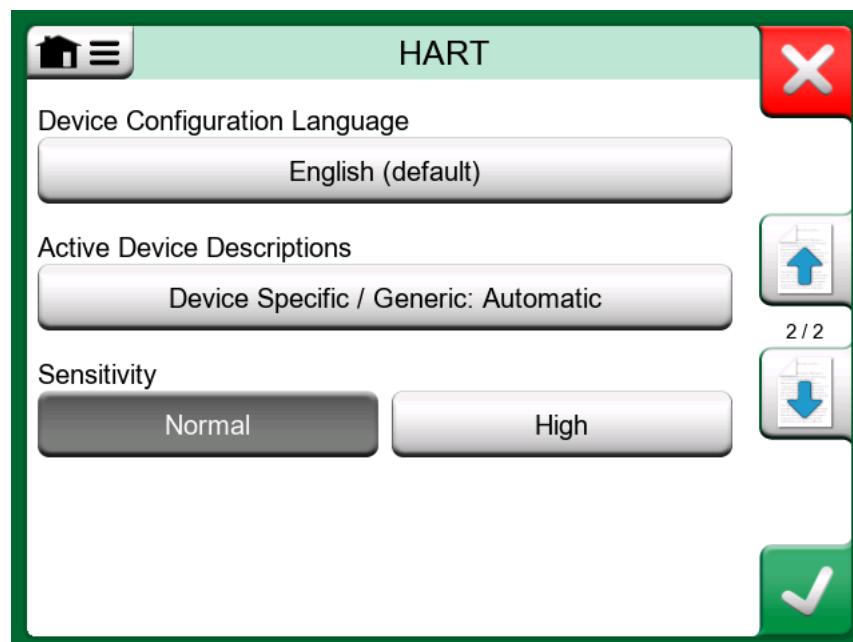



**Figure 141: HART Sensitivity settings**


The default settings should apply, so avoid making changes unless you are certain. In case of communication issues, refer to the HART or fieldbus instrument's manual.

See also chapter [Device Description Files](#).

## List of Found Devices

After selecting the supply voltage, MC6-Ex searches (monitors) for connected instruments and opens a window displaying a list of found devices. The window includes a **Refresh** button () to restart the search for connected instruments.

The **Configure** button () allows you to quickly edit the tag and address for the listed instruments. When edit mode is activated, the instrument's background changes to blue.

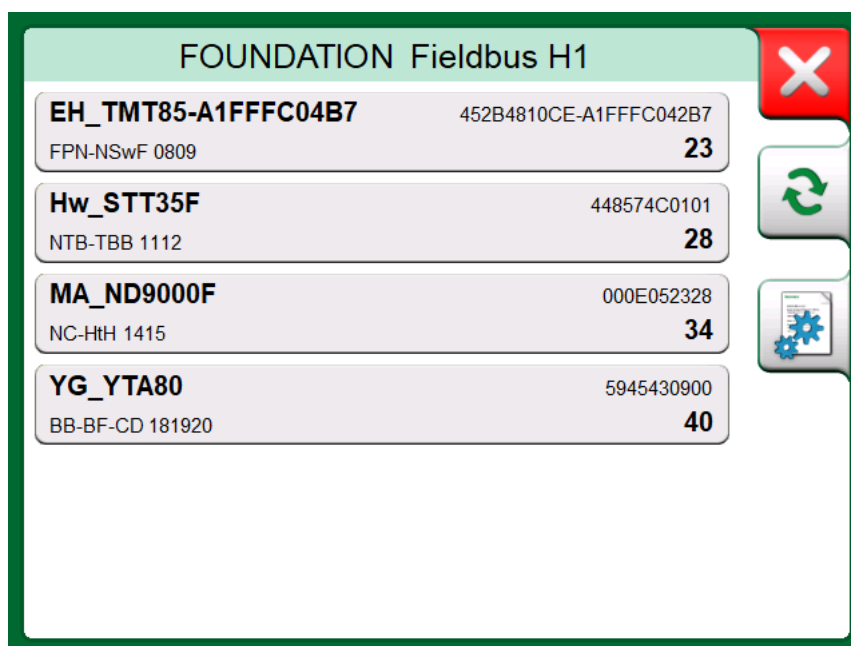

**Figure 142: List of found devices**

To connect to the instrument, simply tap on its name in the displayed list. The MC6-Ex calibrator will then retrieve the instrument's data, save it in its memory, and display the information when it is ready.



**Note:** If the MC6-Ex calibrator does not have the Device Description file for the selected instrument, a **Device Description Missing** window will appear to notify you of the situation. Further information on downloading new DD files is available in chapter [Device Description Files](#).



**Warning:** When the calibrator is searching for connected fieldbus or HART instruments in the segment, DO NOT disconnect or reconnect the calibrator to or from the segment. Doing so may cause the segment to become unstable.

## Get Mapped Values feature

The Get Mapped Values feature allows you to automatically populate some of the instrument data when creating a new instrument in MC6-Ex. This is particularly useful for long data fields, as they don't need to be manually entered into the MC6-Ex.

The MC6-Ex includes default mappings for smart instrument fields, but you can customize the mapping configuration for each instrument model you use.



**Note:** To use this feature, make sure that your MC6-Ex has the necessary communication protocol installed. It should correspond to the type of the connected smart instrument.

To populate the CMX or LOGiCAL Instrument database, simply map the instrument data to MC6-Ex first, and then transfer the instruments to CMX or LOGiCAL.



**Note:** To transfer instruments, the user must have the permission to create instruments in CMX or LOGiCAL.

## Preparations

You can map data to either a new instrument or an existing instrument in MC6-Ex. The instrument's Output should be one of the following:

- Current (measurement),
- HART,
- FOUNDATION Fieldbus H1,
- Profibus PA.



**Note:** When the instrument's Output is set to Current Measurement, communication is possible only with the HART instrument at poll address 0.


## Mapping the Instrument Data

To map the instrument's data when creating a **new instrument**, follow these steps:

1. Open the Documenting Calibrator mode and connect the smart instrument leads.

2. Select a communication protocol as the Output.
3. Specify the supply voltage.
4. Choose the instrument from the list of found devices.
5. Select the correct Value Parameter for calibration. The MC6-Ex will automatically return to the Output configuration page for creating instrument.
6. Open the context-sensitive menu and tap **Get Mapped Values**.

To map the instrument's data for an **existing instrument**, follow these steps:

1. Open the Documenting Calibrator mode and connect the smart instrument leads.
2. Select the instrument from the Instrument List.
3. Select supply voltage and wait for the instrument to connect.
4. Tap **Configure** button ()
5. Open the context-sensitive menu and select **Get Mapped Values**.



**Note:** Always review the mapped instrument data.


The default mapping settings can be customized. For more information check chapter [Customizing the Mappings](#).



**Note:** For HART instruments, the input setting is automatically read from the transmitter. For other instruments, you need to manually add the instrument's input data.


## Customizing the Mappings

You can customize the mappings on two different levels: protocol level (Protocol Defaults) for **HART**, **FOUNDATION Fieldbus H1** or **Profibus PA**, and device model level (Device Model Defaults). Customizable settings for both levels can be found under context-sensitive menu option **Mapping**.

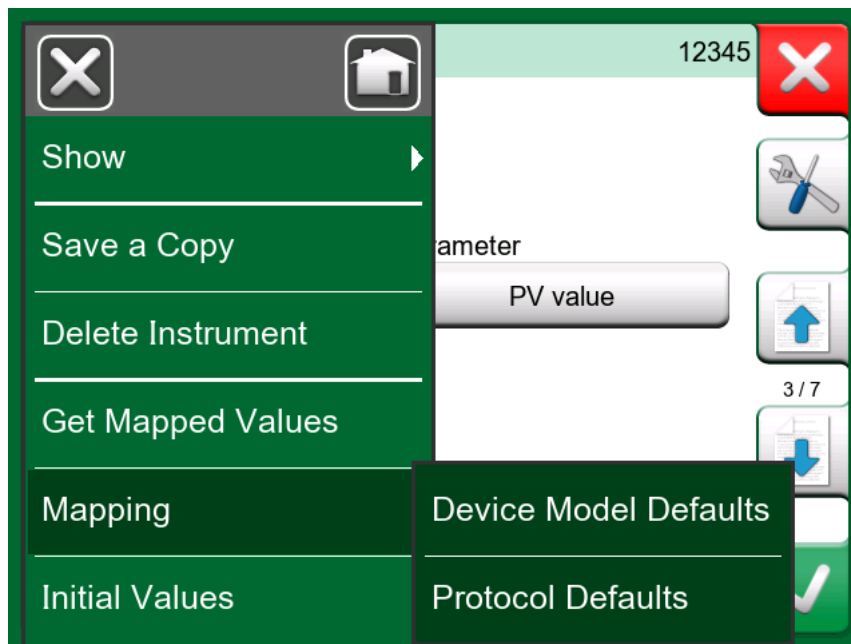

**Figure 143: Customizing mappings**

MC6-Ex uses the **Protocol Defaults** if no device model mappings are defined for the connected device model. However, if **Device Model Defaults** are defined for the connected device model, they are used instead of the **Protocol Defaults**. For both levels, you can either edit an existing mapping or add a new one.

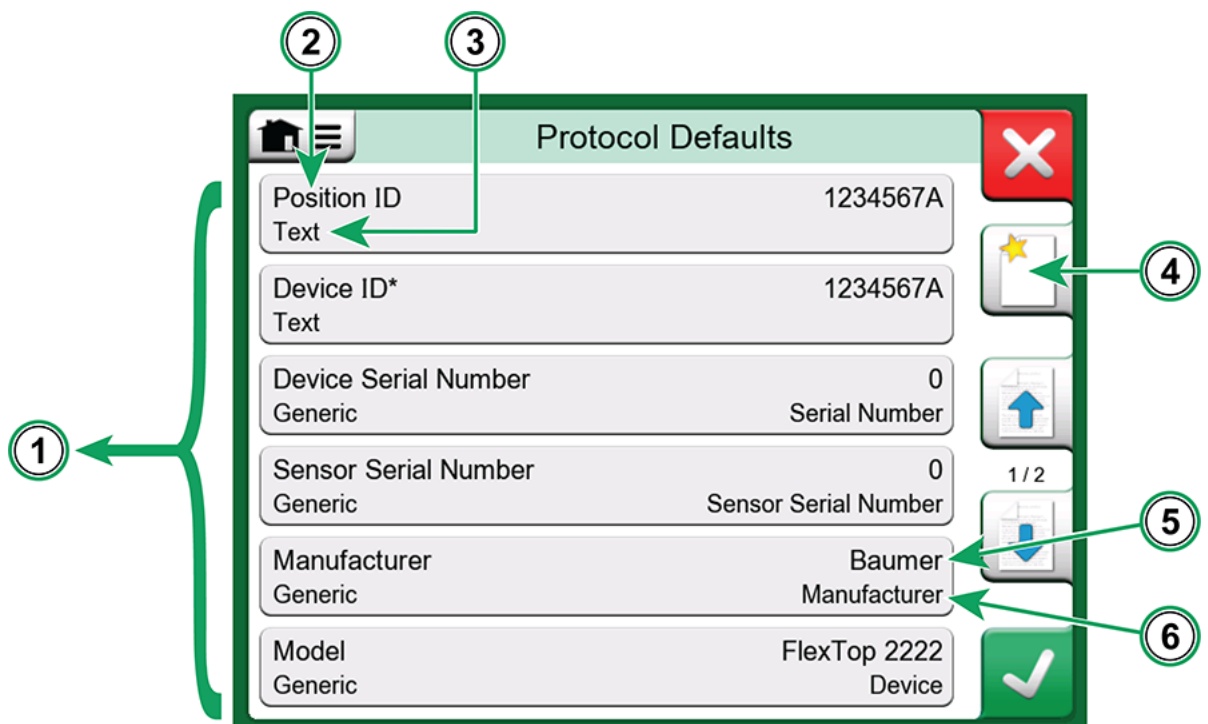

**Figure 144: Protocol Default mappings example for HART instrument**

Legend:

1. Protocol Defaults mappings.
2. Target field in MC6-Ex.
3. Mapping mode.
4. **Create new** button (📄).
5. Value of the connected instrument's field.
6. Name of the connected instrument's field.

To edit a mapping, simply tap on it. To create a new mapping, tap the **Create New** button (📄). Both actions will open the Field Mapping window, where you can either edit the existing mapping or create a new one.


**Figure 145: Field Mapping window**

In the Field Mapping window, you can configure the following settings:

- **Target Field** is the field in MC6-Ex to which data will be mapped.
- **Value** is the field and its value in the connected device that will be mapped.
- **Mapping Mode** is the method used for mapping.

There are three available Mapping Modes:

- **Generic:** Displays a list of common fields from the protocol.

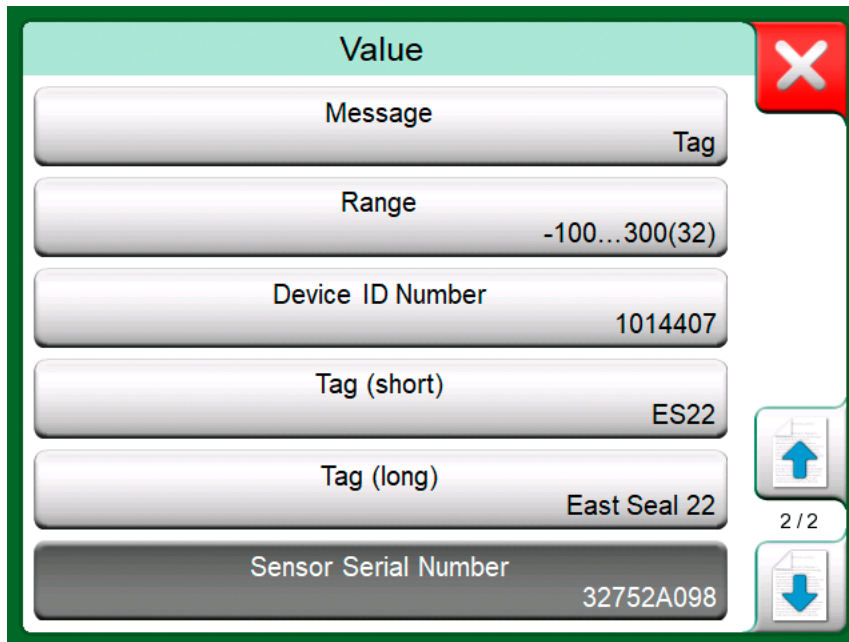

**Figure 146: Available Value list in Mapping mode Generic**

- **Text:** Assigns a fixed text value to the selected MC6-Ex field.



**Figure 147: Text editing in Mapping Mode Text**

- **DD Field:** Provides a list of all fields available in the device model's Device Description file.




**Note:** This mapping mode can be used only with Device Model Defaults and is not supported for Protocol Defaults.



**Tip:** You can map the same transmitter field into several MC6-Ex fields. For example, a device's Tag can be mapped both to Position ID and Device ID in the MC6-Ex instrument data.

When adding or editing a mapping, target fields that are already in use are disabled (grayed out). Once you change the mapping, it will be saved as the default for future use. After modifying the mapping, you need to read the data again using the **Get Mapped Values** menu command.



**Note:** To delete a single mapping line, open it and press the **Delete** button (.

---

## Calibrating Smart Instruments

### Calibrating or Data Logging HART Instruments


#### Calibrating HART Instruments


To create a **new HART instrument** for calibration, follow these steps:

1. Select the **HART** communication protocol as the Output.
2. Browse the list of blocks, records, and parameters to locate the Value Parameter you want to select.



**Note:** Use the context-sensitive menu to select **Show > Measurable Variables**, which will display only the Value Parameters. Remember that Value Parameters have a green background.

3. Tap the **Accept** button () to confirm your selection.
4. The MC6-Ex will return to the instrument configuration pages. Continue to configure the instrument data.
5. Follow the calibration process described in chapter [Calibrating an Instrument](#).

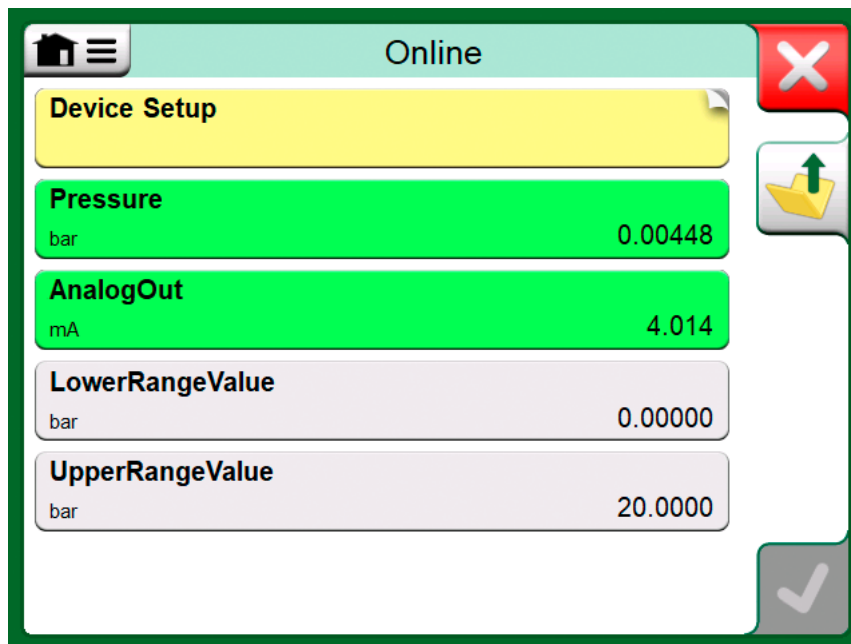

**Figure 148: Variable list example in HART transmitter**

For the **existing instruments**, select the instrument from the Instrument List.

### Data Logging for HART Instruments

To configure a channel for HART instrument data logging, follow these steps:

1. Tap the channel you want to configure.
2. Set **HART** communication protocol as the Quantity.
3. Select the supply voltage.
4. Choose the instrument from the Instrument list.
5. Browse the list of blocks, records, and parameters to locate the Value Parameter you want to select.



**Note:** Use the context-sensitive menu to select **Show > Measurable Variables**, which will display only the Value Parameters. Remember that Value Parameters have a green background.

6. Tap the **Accept** button (✓) to confirm your selection.
7. Start logging the data.



**Note:** Unfortunately, the structure of data and naming conventions in HART instruments vary between different makes and models.



**Tip:** Refer to your instrument's manual to find the blocks where the parameters are located.

## Calibrating or Data Logging Fieldbus Instruments

This is a quick guide for selecting a **FOUNDATION Fieldbus H1** or **Profibus PA** instrument's Value Parameter for calibration or data logging. If you want to make more extensive configurations, refer to the chapter [About Smart Instrument Parameters](#) and the manual of your instrument at hand.

### Calibrating Fieldbus Instruments

To create a **new fieldbus instrument** for calibration, follow these steps:


1. Select either **FOUNDATION Fieldbus H1** or **Profibus PA** communication protocol as the Output.
2. Browse the list of blocks, records, and parameters to locate the Value Parameter you want to select.




**Tip:** The typical name of the Block (folder) where measurement parameters are located is **Transducer**. However, the Block name can vary depending on the instrument. If you are uncertain, refer to your instrument's user manual for guidance.



**Note:** Use the context-sensitive menu to select **Show > Measurable Variables**, which will display only the Value Parameters. Remember that Value Parameters have a green background.

3. Tap the **Accept** button () to confirm your selection.
4. The MC6-Ex will return to the instrument configuration pages. Continue to configure the instrument data.
5. Follow the calibration process described in chapter [Calibrating an Instrument](#).

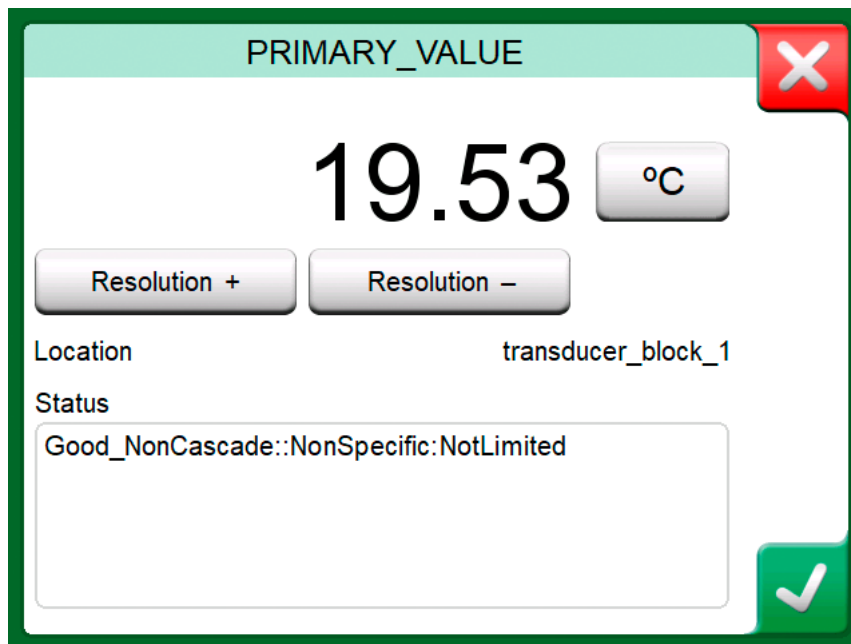

**Figure 149: Accepting a parameter**

For the **existing instruments**, select the instrument from the Instrument list.

### Data Logging for Fieldbus Instruments

To configure a channel for fieldbus instrument data logging, follow these steps:

1. Tap the channel you want to configure.
2. Set **FOUNDATION Fieldbus H1** or **Profibus PA** communication protocol as the Quantity.
3. Select the supply voltage.
4. Choose the instrument from the Instrument list.
5. Browse the list of blocks, records, and parameters to locate the Value Parameter you want to select.



**Note:** Use the context-sensitive menu to select **Show > Measurable Variables**, which will display only the Value Parameters. Remember that Value Parameters have a green background.

6. Tap the **Accept** button (✓) to confirm your selection.
7. Start logging the data.



**Tip:** Refer to your instrument's manual to find the blocks where the parameters are located.

# Trimming Smart Instruments

One of the most valuable benefits of calibrating smart instruments with MC6-Ex is that it can also be used for trimming the instrument.



**Tip:** Remember to perform As Left calibration after trimming.


## Trimming a HART Instrument

Trimming a HART instrument can only be started from the Communicator user interface mode. However, you can access the Communicator mode from other user interface modes by selecting **Start Communicator** in the context-sensitive menu (see [Figure 137: Context-sensitive menu options in HART instrument Calibration window](#)).

To locate and start a trimming method for both analog and digital signals or sensors, refer to the instrument's user manual. Once you have found the method, follow the provided instructions.




**Note:** Typically, the correct order for trimming is to start with the digital output first, followed by the analog output.

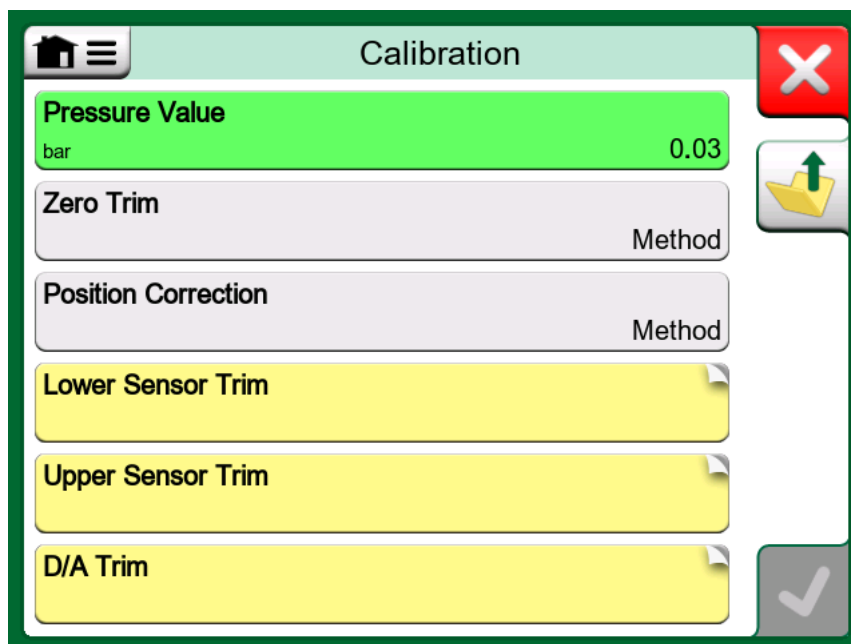

**Figure 150: Sensor trim method**

At some point during the trimming process, you will need to apply an applicable input signal.

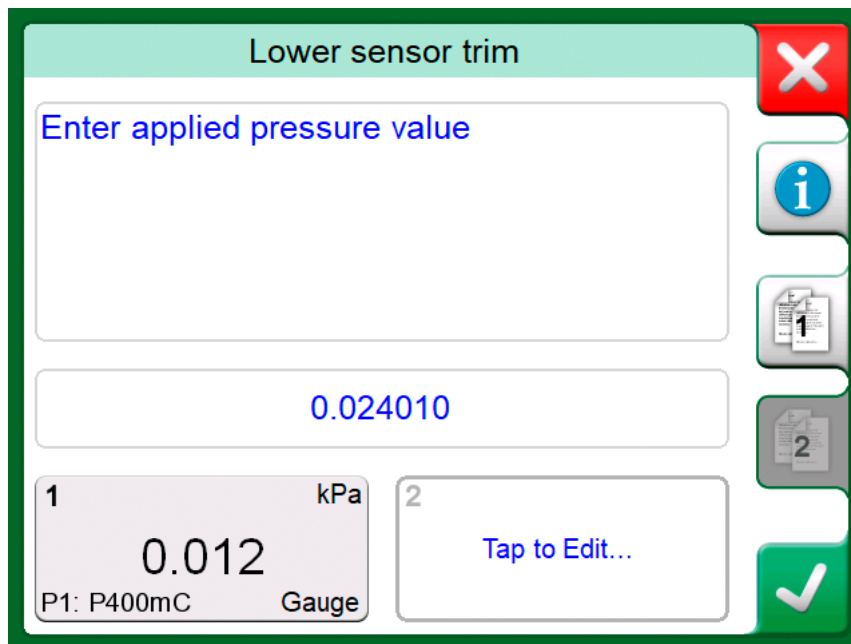

**Figure 151: Trim method in progress – channels (1) and (2)**

Trimming procedure started in the Documenting Calibrator mode:

- The lower part of the window will display channels showing the instrument's input (1) and possibly also the output (2) readings. Use the input signal channel to verify the correct reading.

Trimming procedure started in another MC6-Ex user interface mode, such as Communicator:

- Tap on one of the channels reserved for the calibrator readings and select a suitable Quantity for measurement.

When the input signal meets the requirements, use one of the **Copy** buttons (📄) to transfer the correct value to the numeric field. Alternatively, you can manually enter the value into the numeric field.

To finalize the trim, continue following the instructions displayed on the MC6-Ex screen.




**Note:** Some HART instrument manuals and user interfaces incorrectly use the term *calibration* when they actually refer to a trim procedure.

Be cautious during the trimming procedure and closely follow the instructions in the instrument's user manual. Skipping any step may result in an unsuccessful trim.


## Trimming a Fieldbus Instrument

Trimming a **FOUNDATION Fieldbus H1** or **Profibus PA** instrument can be started from the **Documenting Calibrator**, provided the relevant communicator option is installed and the parameter is trimmable.

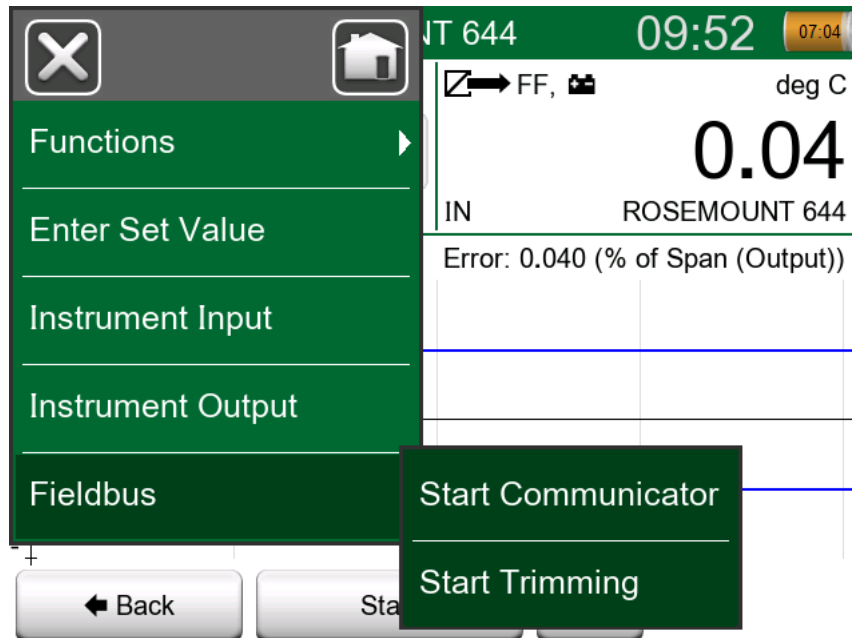

**Figure 152: Context-sensitive menu in Documenting Calibrator – calibrating a fieldbus instrument**

The **Start Trimming** menu option opens a window similar to the [Figure 153: Fieldbus instrument Trim window example](#). The list of Blocks and Parameters displayed depends on instrument's Device Description file. The lower part of the window will display channels showing the instrument's input (1) and output (2) readings.

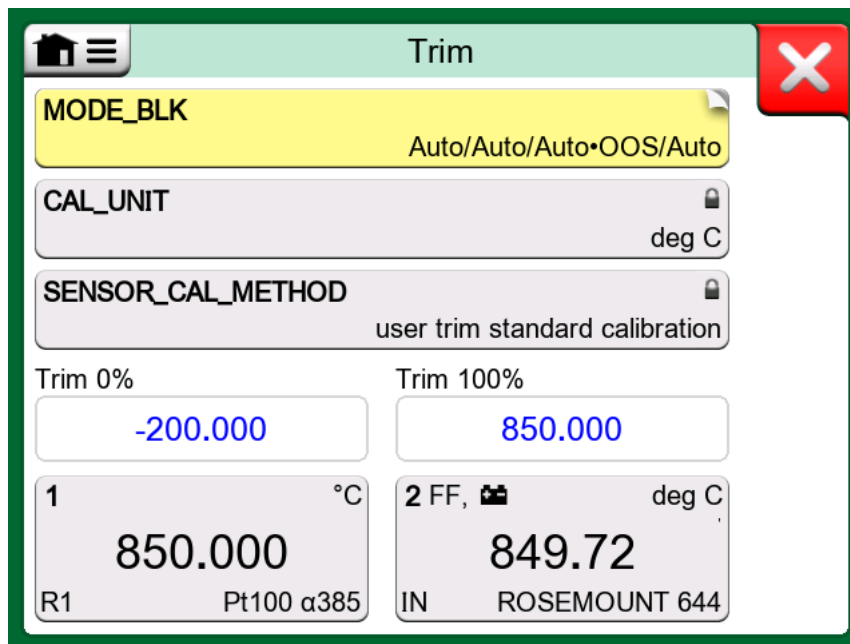

**Figure 153: Fieldbus instrument Trim window example**

Refer to the instrument's user manual for detailed information on how the trim procedure progresses. Typically, you first set the **Mode Block's** Target to OOS (Out Of Service) and then proceed to edit the other data.

The actual trim is performed by tapping the **Trim 0 %** or **Trim 100 %** values after a valid input signal is generated, simulated or measured. When the input signal meets the requirements, use one of the **Copy** buttons (📄) to transfer the correct value to the numeric field. Alternatively, you can manually enter the value into the numeric field.

To finalize the trim, continue following the instructions provided in the instrument's user manual.




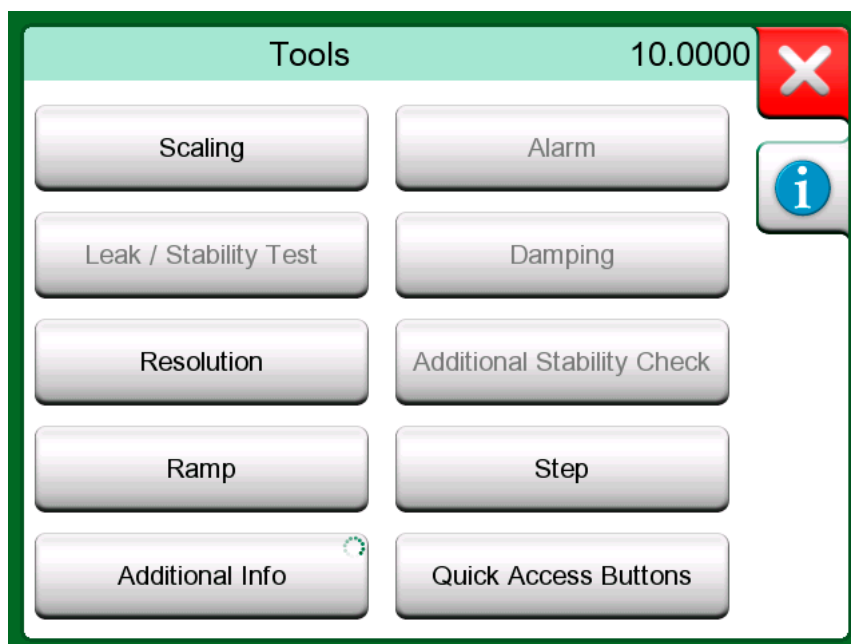
**Note:** Some fieldbus instrument manuals and user interfaces incorrectly use the term *calibration* when they actually refer to a trim procedure.

Be cautious during the trimming procedure and closely follow the instructions in the instrument's user manual. Skipping any step may result in an unsuccessful trim.

# Advanced Features

## Tools

Certain subwindows include a **Tools** button () . Some tools are intended for measurements only, while others are designed for generations and simulations only.




**Figure 154: Tools (Calibrator user interface mode view)**



**Note:** The available tools also depend on the selected Quantity and Function. For example, switches offer only a limited number of tools.





**Note:** Several tools include a **Stop** button () in the pop-up window where the tool is configured. To stop a function, such as Damping, open its configuration window and tap the **Stop** button. This action restores the function's default settings.






**Note:** Changing the Quantity of a subwindow resets all tools to their default configurations, except for the Additional Info settings, which remain unchanged.





**Tip:** Calibrator user interface mode: Additional Info fields with black text can be zeroed "on the fly". Zeroing options are available in the context-sensitive menu of the Additional Info window.




Tool	Description	Available in
<b>Scaling</b> 	<p>Any signal can be scaled provided the conversion is known. When <b>Scaling</b> is active, it is indicated by a triangle next to the unit. The true measurement value is displayed in the additional info row at the bottom of the subwindow.</p>	<ul style="list-style-type: none"> <li>✓ Measurements</li> <li>✓ Generations/Simulations</li> </ul> <hr/> <p><b>User Interface Modes</b></p> <ul style="list-style-type: none"> <li>✗ Meter</li> <li>✓ Calibrator</li> <li>✓ Documenting Calibrator<sup>1</sup></li> <li>✓ Data Logger</li> </ul>
<b>Alarm</b> 	<p>Four <b>Alarm</b> limits can be assigned to main measurements: high, low, high change rate and low change rate. Active alarms are displayed above the main measurement. When an alarm limit is exceeded, a warning signal is heard. A button for acknowledging the alarm appears when necessary.</p>	<ul style="list-style-type: none"> <li>✓ Measurements</li> <li>✗ Generations/Simulations</li> </ul> <hr/> <p><b>User Interface Modes</b></p> <ul style="list-style-type: none"> <li>✗ Meter</li> <li>✓ Calibrator</li> <li>✗ Documenting Calibrator</li> <li>✗ Data Logger</li> </ul>

<sup>1</sup> Scaled units are not supported in CMX or LOGiCAL.

Tool	Description	Available in
<b>Leak / Stability Test</b>	<p>A <b>Leak / Stability Test</b> can be assigned to main measurements. This test evaluates the leak or stability of, for example, a pressure measurement system.</p> <p>In the Leak / Stability Test configuration window, enter the Test time and start recording. If needed use the "<b>+30 sec</b>" button to extend the test time.</p>	<ul style="list-style-type: none"> <li>✓ Measurements</li> <li>✗ Generations/ Simulations</li> </ul> <hr/> <p><b>User Interface Modes</b></p> <ul style="list-style-type: none"> <li>✗ Meter</li> <li>✓ Calibrator</li> <li>✓ Documenting Calibrator</li> <li>✓ Data Logger</li> </ul>
<b>Damping</b> 	<p><b>Damping</b> can be activated when a measurement signal contains unwanted noise. Select one of the available options.</p> <p>When damping is used, a funnel icon appears to the left of the main measurement. When damping is active, the following symbol is shown above the unit button:</p> 	<ul style="list-style-type: none"> <li>✓ Measurements</li> <li>✗ Generations/ Simulations</li> </ul> <hr/> <p><b>User Interface Modes</b></p> <ul style="list-style-type: none"> <li>✗ Meter</li> <li>✓ Calibrator</li> <li>✓ Documenting Calibrator</li> <li>✓ Data Logger</li> </ul>
<b>Resolution</b> 	<p>The <b>Resolution</b> of any signal can be increased or decreased. Changes in resolution are shown in the subwindow. For example, ".-2" means two fewer decimal places.</p>	<ul style="list-style-type: none"> <li>✓ Measurements</li> <li>✓ Generations/ Simulations</li> </ul> <hr/> <p><b>User Interface Modes</b></p> <ul style="list-style-type: none"> <li>✗ Meter</li> <li>✓ Calibrator</li> <li>✓ Documenting Calibrator</li> <li>✓ Data Logger</li> </ul>

Tool	Description	Available in
<b>Ramp</b> 	<p>The <b>Ramp</b> tool opens a window that allows you to define a ramp function for the generated or simulated signal.</p>	<p><b>X</b> Measurements  <b>✓</b> Generations/  Simulations</p> <hr/> <p><b>User Interface Modes</b></p> <p><b>X</b> Meter  <b>✓</b> Calibrator  <b>X</b> Documenting Calibrator  <b>✓</b> Data Logger</p>
<b>Step</b> 	<p>The Step tool allows you to define a step function for generated or simulated signals. It enables the signal to increase or decrease in a predefined manner and provide the signal for a fixed duration. This feature is particularly useful when documenting data manually. The step time option specifies the delay time, which begins after the stability criteria have been met. For more information see chapter <a href="#">User-Defined Steps/Calibration Points</a>.<sup>2</sup></p>	<p><b>X</b> Measurements  <b>✓</b> Generations/  Simulations</p> <hr/> <p><b>User Interface Modes</b></p> <p><b>X</b> Meter  <b>✓</b> Calibrator  <b>X</b> Documenting Calibrator  <b>✓</b> Data Logger</p>
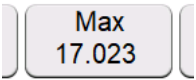
<sup>2</sup> When using the Step tool I for temperature generation, it is recommended to activate the tool's stability check to ensure that the temperature has stabilized before moving to the next step.

Tool	Description	Available in
<b>Additional Info</b> 	<p>With <b>Additional Info</b> tool you can add additional information fields at the bottom of a subwindow. The available fields depend on the quantity and settings. Up to four fields can be added to each subwindow. The settings for the additional information rows are saved for future use.</p>	<ul style="list-style-type: none"> <li>✓ Measurements</li> <li>✓ Generations/Simulations</li> </ul> <hr/> <b>User Interface Modes</b> <ul style="list-style-type: none"> <li>✗ Meter</li> <li>✓ Calibrator</li> <li>✗ Documenting Calibrator</li> <li>✗ Data Logger</li> </ul>
<b>Quick Access Buttons</b> 	<p><b>Quick Access Buttons</b> tool opens a window where you can define five shortcuts for user-defined generation or simulation values. These Quick Access shortcuts appear at the bottom of the subwindow, using the space reserved for possible Additional Info data.</p>	<ul style="list-style-type: none"> <li>✗ Measurements</li> <li>✓ Generations/Simulations</li> </ul> <hr/> <b>User Interface Modes</b> <ul style="list-style-type: none"> <li>✗ Meter</li> <li>✓ Calibrator</li> <li>✗ Documenting Calibrator</li> <li>✗ Data Logger</li> </ul>
<b>Function Info</b> 	<ul style="list-style-type: none"> <li>✓ Measurements</li> <li>✓ Generations/Simulations</li> </ul> <p>Function Info button opens a pop-up window with information about the current function, including measurement range, calibration date and other relevant details.</p>	<ul style="list-style-type: none"> <li>✓ Measurements</li> <li>✓ Generations/Simulations</li> </ul> <hr/> <b>User Interface Modes</b> <ul style="list-style-type: none"> <li>✗ Meter</li> <li>✓ Calibrator</li> <li>✓ Documenting Calibrator</li> <li>✓ Data Logger</li> </ul>

## User-Defined Transfer Functions

**Transfer Functions** are available in the **Scaling** Tool found in the Calibrator, Data Logger and in the **Instrument Function Related Data** configuration page in the Documenting Calibrator mode.

When creating or selecting a user-defined transfer function, tap on the **Transfer Function** button and navigate to the **User Transfer Function** page.

The configuration consists of two (or more) pages, as shown in the figures below. The first page is for general definitions, and the second page is for

entering known transfer function points. If you enter more points than can be displayed on one page, an additional page is automatically added.

The screenshot shows the 'Transfer Function' configuration page. It features a title bar with a home icon, a menu icon, the title 'Transfer Function', and a close button (red X). Below the title bar, there are several input fields: 'Transfer Function Name' (empty), 'Input Data Entry Range (Pa)' with values '80000' (0%) and '120000' (100%), and 'Output Data Entry Range ( )' with values '0' (0%) and '1' (100%). There are also 'Notes' and a 'Save' button (green checkmark). On the right side, there are navigation buttons (up and down arrows) and a page indicator '1 / 2'.

**Figure 155: Transfer Function configuration page – general definitions**

The screenshot shows the 'Transfer Function' configuration page with a table of transfer function points. The table has two columns: 'Input (bar)' and 'Output (μA)'. The first point is pre-entered with values 0.8 and 0. The second point has values 1 and 0.4999999. The third point has values 2 and 3. The fourth point has values 3 and 5.5. The fifth point has values 4 and 8. The sixth point has 'Tap to Edit...' in both columns. There are also 'Save' and 'Close' buttons, and a page indicator '2 / 2'.

	Input (bar)	Output (μA)
1.	0.8	0
2.	1	0.4999999
3.	2	3
4.	3	5.5
5.	4	8
6.	Tap to Edit...	Tap to Edit...

**Figure 156: Transfer Function configuration page – transfer function points**

When entering transfer function points, please follow these rules:

- The first point is always pre-entered and cannot be edited. It represents the 0 % values of the range.
- Points must be entered in increasing order.
- The last point must be equal to or greater than the 100 % value of the range.

Additionally:

- The row number acts as a button. Click it to open a window where you can delete the current point or add a new row either before or after the current point.
- Added points are assigned default values, which are the averages of the points before and after them.

## User-Defined Steps/Calibration Points

User-defined steps can be accessed through the **Step** tool in the Calibrator and Data Logger user interface modes. The **Step** tool opens a window to define a step function for the generated or simulated signal. User-defined calibration points are available in the [Calibration Procedure Related Data](#) configuration page in the **Documenting Calibrator** mode.

When creating or selecting user-defined steps, use the **Step Definition** button.

**Figure 157: User-defined steps – Step definition button**

For user-defined calibration points, use the **Calibration Points** button. In the opened window, navigate to **User Test Points** page. The configuration consists of two (or more) pages, as shown in the figures below. The first page is for general definitions, and the second page is for entering test points. If you enter more points than can be displayed on one page, an additional page is automatically added.

**User Test Points**

Set Name

Point Data Entry Range (°C)

-200 0% ... 850 100%

Notes

1 / 2

**Figure 158: User Test Points – general definitions**

**User Test Points**

#	Point Data (°C)	≈%
1.	-200	0%
2.	0	19%
3.	200	38%
4.	400	57%
5.	Tap to Edit...	

2 / 2

**Figure 159: User Test Points – steps/calibration points**

There are no specific rules regarding the values you are allowed to enter. They may be outside the predefined point data entry range and can be input in any order.

Additionally:

- The row number acts as a button. Click it to open a window where you can delete the current point or add a new row either before or after the current point.
- Added points are assigned default values, which are the averages of the points before and after them.

---

# User Sensors

MC6-Ex includes a wide selection of pre-configured standard Platinum Resistance Temperature (PRT) type RTD sensors. These are available whenever **RTD Temperature** is selected as the Quantity. If correction coefficients are required for a specific sensor, you can create a User Sensor. Further instructions are provided in chapter [Creating a New User Sensor](#).

## Creating a New User Sensor




**Note:** Although custom sensors can be created and maintained in the MC6-Ex, it is strongly recommended to define and manage user sensors (including correction coefficients) in CMX or LOGICAL. This ensures centralized maintenance and availability for all compatible calibrators supporting the sensors.



You can create a new User Sensor whenever **RTD Temperature** is selected as the Quantity. To create a new User Sensor:

1. Press the button with sensor name.
2. Go to the second page of the User Sensor window.
3. Tap **Create New** button (). The icon is a document with a yellow star in the top right corner.
4. Use the sensor's data sheet and calibration certificate to fill in the required details:
  - Sensor name
  - Serial number
  - Calculation formula and correction coefficients
  - Temperature range
  - Manufacturer and model
  - Calibration date


Make sure to select the correct Sensor Calculation Formula. It defines which settings and fields are available on the configuration pages. The calculation formula and correction coefficients can be found on the sensor's calibration certificate. For more details about the available calculation formulas and their use, see chapters [Callendar-Van Dusen Formula](#), [ITS-90](#), and [Factor](#).

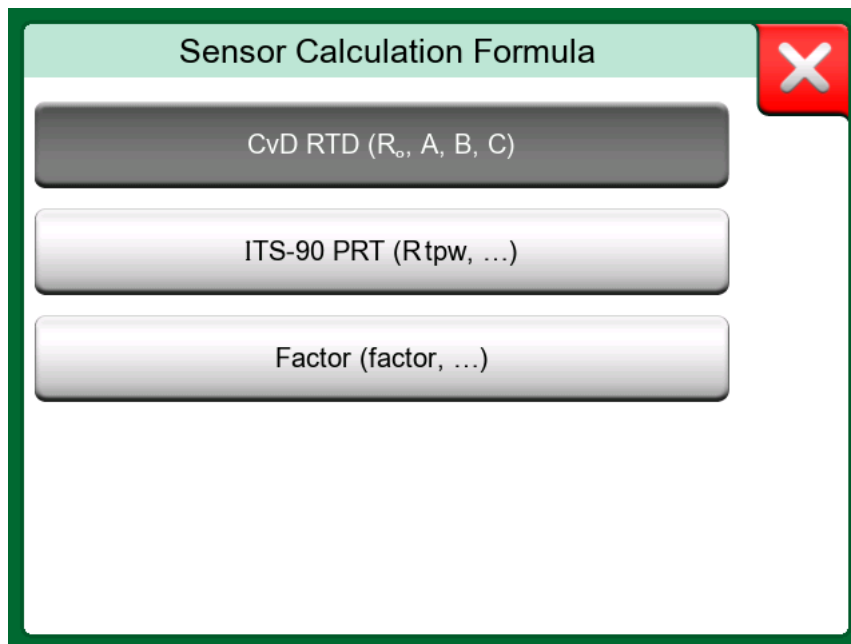

**Figure 160: Sensor Calculation Formula options**

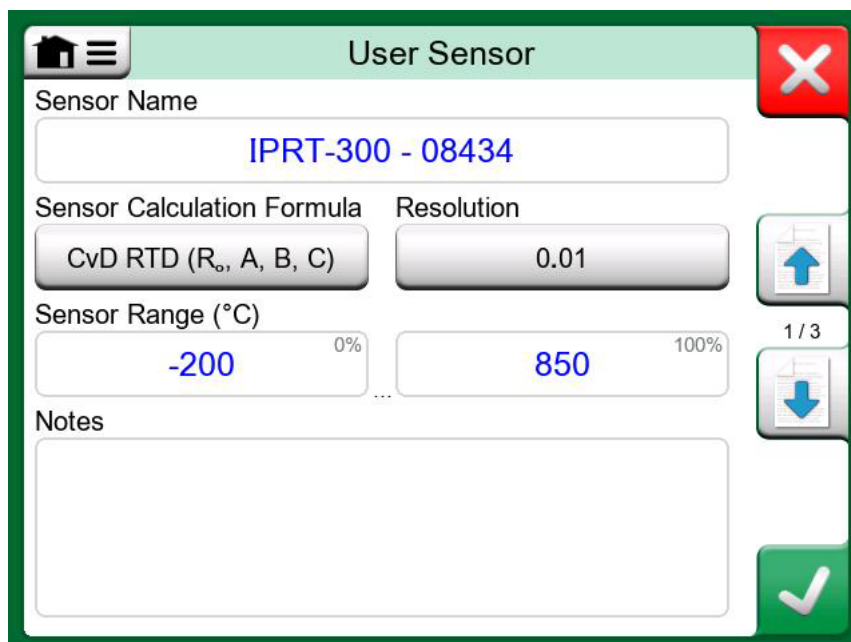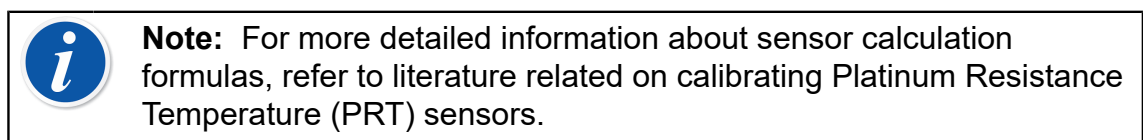

**Figure 161: User Sensor configuration window, first page example**

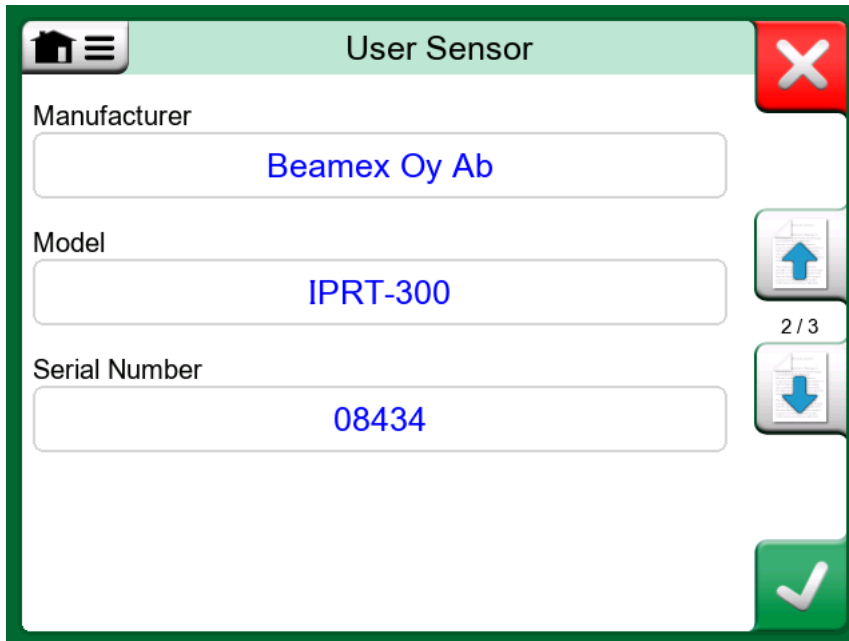


The image shows a configuration window titled "User Sensor" with a green header and a red close button (X) in the top right. The window contains three input fields: "Manufacturer" with the value "Beamex Oy Ab", "Model" with the value "IPRT-300", and "Serial Number" with the value "08434". To the right of the input fields are two buttons: an "up" arrow button and a "down" arrow button, with "2 / 3" displayed between them. A green checkmark button is located in the bottom right corner.

Figure 162: User Sensor configuration window, second page example

## Using User Sensor

User Sensors are available for RTD Temperature input or output in any user interface mode. When a user sensor is in use, the sensor button shows a warning symbol ( $\Delta$ ) together with the name of the user sensor.

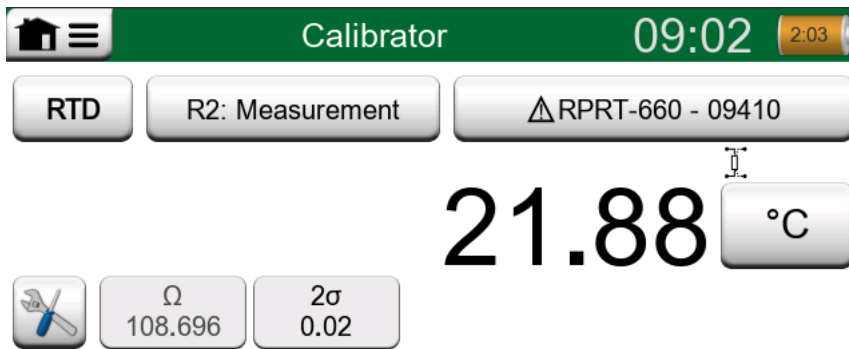

The image shows the "Calibrator" interface with a green header. The header includes a home icon, the title "Calibrator", the time "09:02", and a battery icon showing "2:03". Below the header are three buttons: "RTD", "R2: Measurement", and a button with a warning symbol ( $\Delta$ ) and the text "RPRT-660 - 09410". The main display shows a large temperature reading "21.88" followed by a temperature unit button "°C". Below the temperature reading are three buttons: a wrench and screwdriver icon, a button with the Greek letter  $\Omega$  and the value "108.696", and a button with "2 $\sigma$ " and "0.02".

Figure 163: Example of a User Sensor in Calibrator mode



**Note:** Deleting a user sensor will stop any ongoing measurement, generation, or simulation that is using it.

## Updating User Sensor Data

After the sensor has been recalibrated and the coefficients have changed, the User Sensor data saved in the calibrator needs to be updated. You can access Update mode the same way as when creating a new sensor. Update the coefficients according to the latest calibration certificate and save using the **Accept** button (✓).



**Note:** If calibration results for the User Sensor have been saved in the Documenting Calibrator and the correction coefficients are updated, the new coefficients will also apply to existing calibration results. Always transfer the results to the calibration management software or save them using other means before updating the sensor coefficients.

## Callendar-Van Dusen Formula

When you select **CvD RTD (R<sub>0</sub>, A, B, C)** sensor calculation formula, you can configure the sensor's coefficients according to the Callendar–Van Dusen standard.

The screenshot shows a mobile application interface for configuring a 'User Sensor'. The screen has a green header with a home icon, a menu icon, the title 'User Sensor', and a close button (X). Below the header, there are four input fields for coefficients, each with a corresponding label and a value:

Label	Value
R <sub>0</sub> (Ω)	100
A	0.0039083
B	-5.775E-07
C	-4.183E-12

On the right side of the input fields, there are navigation controls: an up arrow button, a '3 / 3' indicator, and a down arrow button. At the bottom right corner, there is a green 'Accept' button with a white checkmark.

**Figure 164: Constant and coefficients example for Callendar-Van Dusen**

The Callendar-Van Dusen formula for PRTs can be defined using one of two equations, each with its own set of coefficients: A, B and C or  $\alpha$  (alpha),  $\delta$  (delta), and  $\beta$  (beta). In both cases, the R<sub>0</sub> constant is also required.

MC6-Ex supports only the equation using coefficients A, B and C only. If your PRT's calibration certificate provides coefficients  $\alpha$ ,  $\delta$  and  $\beta$ , use the following equations to convert them to A, B and C:

$$A = \alpha \cdot \left(1 + \frac{\delta}{100}\right) \quad B = \frac{-\alpha \cdot \delta}{10^4} \quad C_{T < 0} = \frac{-\alpha \cdot \beta}{10^8}$$

**Figure 165: Callendar-Van Dusen – equations for converting coefficients**

## ITS-90

The ITS-90 (International Temperature Scale of 1990) is a standard used for high-accuracy temperature measurements and calibration of precision thermometers.

When you select the **ITS-90 PRT (R tpw,...)** sensor calculation formula, you can configure the sensor using the R tpw constant. You can also enter one or more deviation coefficients ( $a_x, b_x, \dots$ ), where x typically ranges from 4 to 11, depending on the deviation formula used in the calibration.

If the x identifiers are missing from the coefficients in your calibration certificate, refer to the table below to identify which coefficients have been provided.



**Note:** The definitions of coefficient notations for the ITS-90 subranges are provided in the NIST Technical Note 1265, *Guidelines For Realizing the International Temperature Scale of 1990*.

Calibration ranges, corresponding coefficients and examples of calibration points:

<u>Calibration Ranges*</u>	<u>Corresponding Coefficients</u>	<u>Example of fixed calibration points<sup>(#)</sup>, °C</u>			
Negative (sub-)ranges:					
-189 ... 0 °C	<b>a<sub>4</sub>, b<sub>4</sub></b>	-189.3442,	-38.8344,	0.01	
-38 ... 30 °C	<b>a<sub>5</sub>, b<sub>5</sub><sup>(†)</sup></b>	-38.8344,	0.01,	29.7666	
Positive (sub-)ranges:					
0 ... 30 °C	<b>a<sub>11</sub></b>	0.01,	29.7666		
-38 ... 30 °C	<b>a<sub>5</sub>, b<sub>5</sub><sup>(*)</sup></b>	-38.8344,	0.01,	29.7666	
0 ... 157 °C	<b>a<sub>10</sub></b>	0.01,	29.7666,	156.5985	
0 ... 232 °C	<b>a<sub>9</sub>, b<sub>9</sub></b>	0.01,	156.5985,	231.928	
0 ... 420 °C	<b>a<sub>8</sub>, b<sub>8</sub></b>	0.01,	231.928,	419.527	
0 ... 660 °C	<b>a<sub>7</sub>, b<sub>7</sub>, c<sub>7</sub></b>	0.01,	231.928,	419.527,	660.323
0 ... 962 °C	<b>a<sub>6</sub>, b<sub>6</sub>, c<sub>6</sub>, d</b>	0.01,	231.928,	419.527,	660.323, 961.78

- \*) The range limits in the list are rounded and displayed as they appear in the MC6-Ex user interface.
- t) Subrange 5 appears twice because it must be entered separately for both negative and positive temperature ranges.
- #) Not all calibration laboratories necessarily use the same reference points. The ones listed here are for guidance only.



**Note:** If your calibration certificate includes two sets of coefficients—one for zero current and another for 1 mA current—enter the latter one into the MC6-Ex calibrator.

When you select the ITS-90 PRT (R tpw,...) sensor calculation formula, the **Sensor Range** entered on the first configuration page determines how many additional **User Sensor** pages are added to the MC6-Ex. If the range includes temperatures below zero, the total number of configuration pages will be four:

- **The first page** contains the general settings.
- **The second page** is used to enter the **R tpw** constant value.
- **The third page** allows you to select the deviation formula for the negative temperature subrange and enter the corresponding coefficients ( $a_4$  and  $b_4$  or  $a_5$  and  $b_5$ ).
- **The fourth page** is for selecting the deviation formula for the positive temperature subrange and entering the relevant coefficients ( $a_5$ ,  $a_6$ ,  $a_7$  ... etc.).



**Note:** When the calibration does not include a negative subrange, the third page mentioned above is excluded, and the total number of configuration pages is three.

The screenshot shows a 'User Sensor' configuration window with a green border. At the top, there is a title bar with a home icon, a menu icon, the text 'User Sensor', and a red close button. Below the title bar, the 'Deviation Formula' section contains a text box with the text '0 ... 660 °C: a<sub>7</sub>, b<sub>7</sub>, c<sub>7</sub>'. Below this, there are three input fields for coefficients 'a', 'b', and 'c'. The 'a' field contains '-2.122E-4', the 'b' field contains '-1.407E-4', and the 'c' field contains '5.059E-5'. To the right of these fields are navigation buttons: an up arrow, the text '5 / 5', and a down arrow. At the bottom right corner, there is a green checkmark button.


**Figure 166: Coefficients example for ITS-90**

## Factor

The third method for customizing an RTD sensor (not just PRTs but all types of RTDs) is by using the **Factor**. This approach is suitable for sensors that show a consistent relative error across the entire span, effectively behaving as if there is an offset in their output.

To configure a User Sensor using the Factor, follow these steps:

1. Select a standard RTD **Sensor Type** from the available options.
2. Input a Factor that offsets the standard temperature curve to match your sensor's characteristics.
3. Use a simple reference example. One practical method is to select a standard RTD sensor with a resistance of 1 ohm at 0 °C, such as Pt1.
4. Enter your sensor's actual resistance at 0 °C as the Factor value.

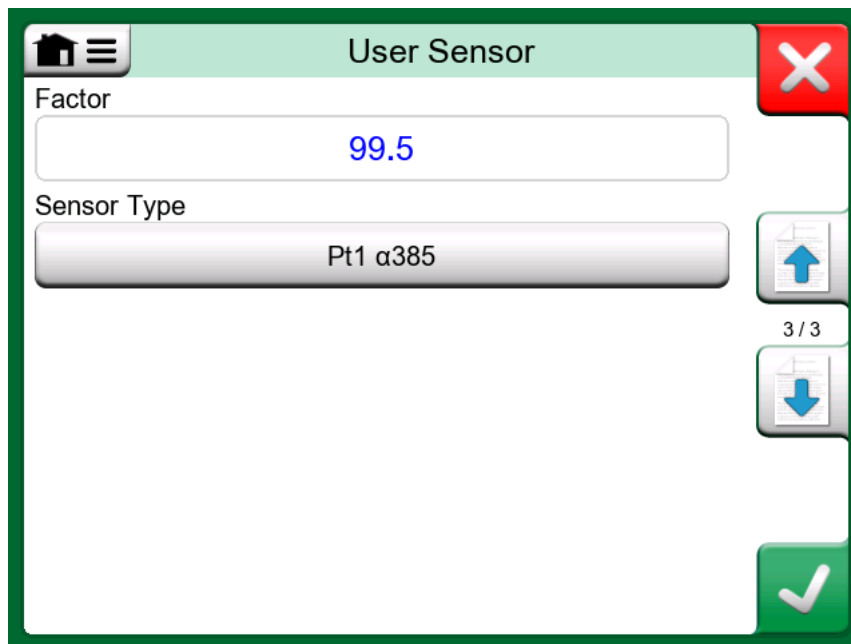

**Figure 167: Configuration page example for Factor**

## Check Sensor Conversion

You can test sensors in the window that displays both pre-entered and custom RTD sensors.

To access **Check Sensor Conversion** feature, open the context-sensitive menu in the User Sensor configuration page.

The [Figure 168: Check Sensor Conversion configuration page](#) shows the first of the **Check Sensor Conversion** pages. This page allows you to select a sensor, choose the unit to be used, and test a single point. This feature is especially useful when you have entered coefficients for a custom sensor and want to verify that they were entered correctly.

To test, enter a temperature value from the calibration certificate and check whether the calculated resistance in the MC6-Ex matches the value on the certificate.

Enter, e.g. a temperature that is in the calibration certificate and check if the calculated resistance in MC6-Ex is the same as on the calibration certificate. If the values match, the coefficients have been entered correctly. If not, review and correct the coefficients you entered.

**Figure 168: Check Sensor Conversion configuration page**

The lower part of the first page allows you to define step sizes for the tables shown on the second and third pages. These tables display the correlation between temperature and resistance (and vice versa).

## Controller Communication




**Warning:** Do not use the USB ports or external controllers in a hazardous area. Controller Communication may only be used in a safe area.

Using MC6-Ex together with a pressure controller or a temperature dry block enables fully automated calibration of various pressure and temperature instruments. Optional communication drivers are available for a range of Beamex and third-party pressure controllers and temperature dry blocks. For a complete list of available communication drivers, please contact Beamex.

To view the installed options on your calibrator navigate to **Settings > About**.

## Enabling Communication with the Controller

The MC6-Ex does not automatically recognize an external controller. To pair the devices, you must configure the controller communication settings. Once the units are paired, communication is plug-and-play when connected to the calibrator. A maximum of four controllers can be assigned to Controller Presets channels.

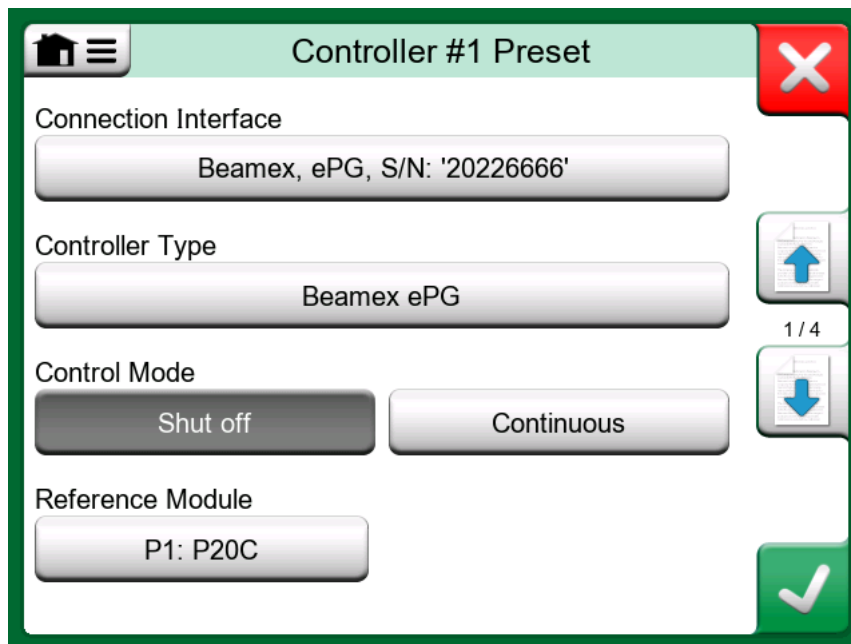


**Figure 169: Controller Preset example**

To set up the connection between the calibrator and the external controller:

1. Connect the devices using a suitable communication cable. Use any available USB-A port on the calibrator.
2. Power on both the calibrator and the controller.
3. From MC6-Ex **Home View**, go to **Settings > Controller Presets**.
4. Specify the following parameters:
  - **Connection Interface:** Displays the connected controllers and their serial numbers. Select the unit you want to pair.
  - **Controller Type:** Choose the appropriate type for the connected controller. The list of options varies according to the controller drivers installed. Each communication driver is a separate option that must be purchased individually.
  - **Control Mode (Shut off or Continuous):** Determines whether pressure adjustment stops at the setpoint or continues after reaching it.

Once an external controller is connected and configured, it is also available in the MC6-Ex Port/Function selection when Pressure or Temperature is selected as the input quantity.

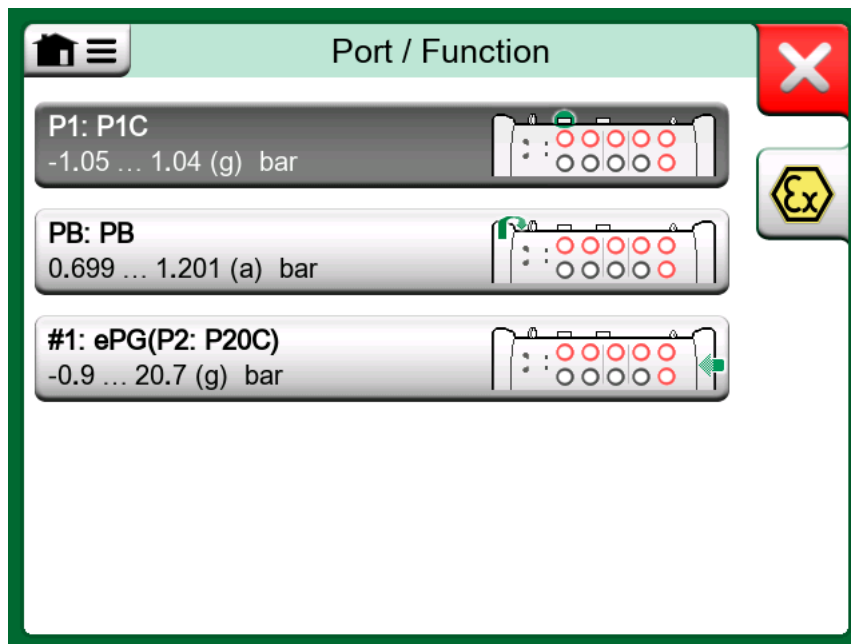

**Figure 170: Pressure Port / Function list with controllers available**

The context-sensitive menu in the **Controller Preset** window includes additional tools for configuring communication settings. The additional settings in the context-sensitive menu can be configured independently for each preset.

The Controller Preset context-sensitive menu also provides access to the **Communication Log**. In the Communication Log window, you can choose the log format: either text-format or binary-format.



**Note:** If you experience communication issues, check the communication settings of the connected controller. These settings may have been modified from the default values. The MC6-Ex calibrator always uses the default values of the controller.



**Note:** When connecting a Beamex FB or MB Temperature Dry Block, make sure both devices are powered on before connecting the communication cable and starting communication between them.

## Calibration Methods with External Controllers

There are three alternative methods of using an external controller with the MC6-Ex calibrator:

- **Controlled and Measured** (full use)

In Controller mode, the calibrator controls an external controller to set the calibration points, and the controller's internal measurement is used to measure the reference signal. Controllers without internal measurement capability, such as the Beamex ePG, cannot use this mode. For pressure controllers, select this mode with Quantity set to Pressure. For temperature dry blocks, select this mode with Quantity set to Temperature.




**Note:** This method is available in the Calibrator, Documenting Calibrator and Data Logger modes. In CMX and LOGiCAL Calibration Management Software, it corresponds to selecting the Controlled and Measured Input method.

- **Controlled**

In Controlled mode, the calibrator manages an external controller to set the calibration points, while the input signal generated is measured by the calibrator. The measurement channel is chosen in the Input Port / Function. For pressure controllers, select this mode with Quantity set to Pressure. For temperature dry blocks, select RTD Temperature or TC Temperature as the Quantity, depending on the reference measurement type.



**Note:** This method is available only in the Documenting Calibrator mode. In CMX and LOGiCAL, it corresponds to selecting Controlled Input method.

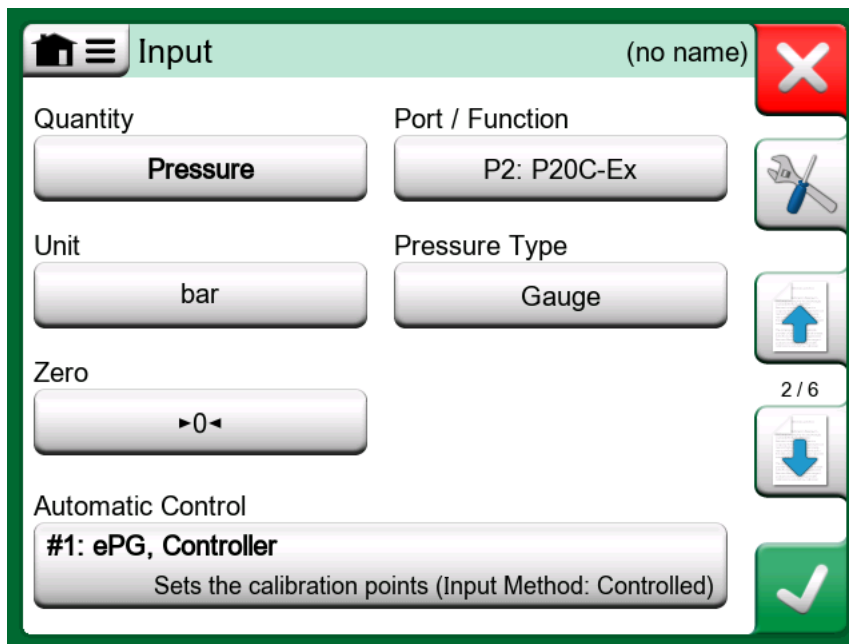

**Figure 171: Instrument Input settings with Controlled method selected**

- **Measured**

In CMX and LOGiCAL, you can also choose Measured as the input method. When using this method for pressure or temperature quantities, the reference signal must be generated by an external source that the calibrator does not control, such as a hand pump for pressure or an ice bath for temperature.

## Wireless Communication



**Warning:** Do not use the USB ports or the USB Bluetooth adapter in a hazardous area. Remove the adapter before entering any hazardous area. Wireless Communication may only be used in a safe area.

The optional Wireless Communication feature enables Bluetooth data transfer between the MC6-Ex and Beamex Calibration Management Software. This functionality eliminates the need for USB cable, simplifying the communication.

Connect the Bluetooth adapter to the calibrator's USB-A port, enable Bluetooth communication in the calibrator's settings, and pair it with a PC. Data can then be transferred between the calibrator and the Beamex Sync client, the CMX Send/Receive window, or the CWSI client. For more information, see chapter [Enabling Communication with a Client Device](#).

Detailed system requirements can be found in chapter [Requirements](#).

## Connection Security

Beamex Wireless Communication uses Bluetooth Low Energy (BLE) technology. We ensure security by authenticating the pairing process and encrypting connections with 128-bit AES encryption. This setup aligns with Security Mode 1, Level 3, providing robust protection.

## Requirements

For Wireless Communication to function, the following criteria must be met:

- ASUS USB Bluetooth adapter provided by Beamex



**Note:** If the Beamex-provided ASUS USB Bluetooth adapter is not approved in your country, you may use a locally sourced micro Bluetooth adapter that meets the following requirements:

- Supports Bluetooth Low Energy (BLE).
- Compatible with Bluetooth 4.2 or higher.
- Maximum height: 8 mm / 0.315".
- Interface: USB-A.



**Note:** It is recommended to use adapters from known manufacturers with all required approvals, such as CE/UKCA.

- Computer or Smart device with Bluetooth Low Energy and support for at least Bluetooth 4.2. From this point onward, referred to as the **Client device**.




**Note:** CMX Calibration Management Software: Bluetooth is supported in version 2.15.1 or later.


## Enabling Communication with a Client Device

To enable Wireless Communication between an MC6-Ex calibrator and a Client device, you must first pair them. Follow the steps below to pair your MC6-Ex with the Client device:


1. Plug the USB Bluetooth adapter into your MC6-Ex.
2. Go to **Home View > Settings > Wireless**. The Wireless button should be visible and accessible on the second page of the Settings. If it is not visible, check the [Troubleshooting](#) chapter.

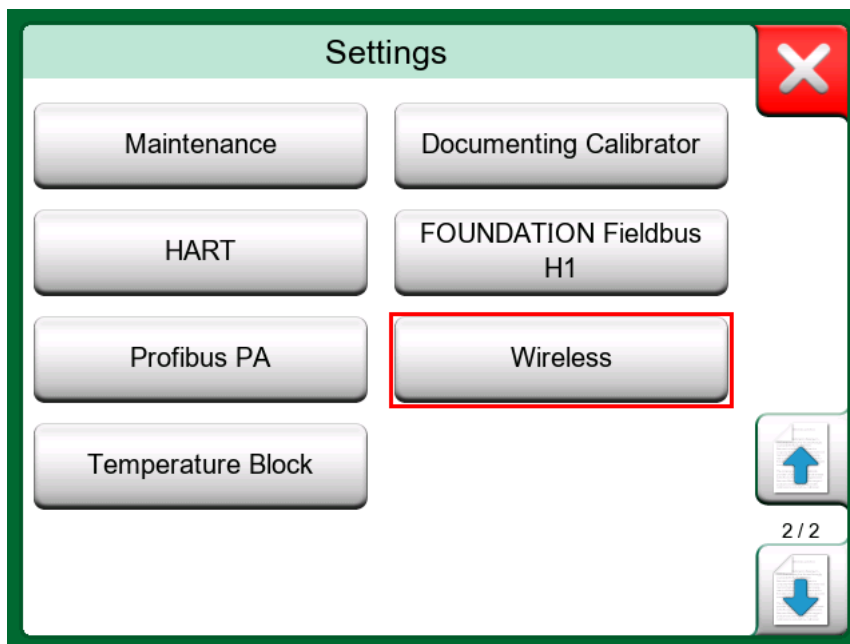


3. Turn Bluetooth on.

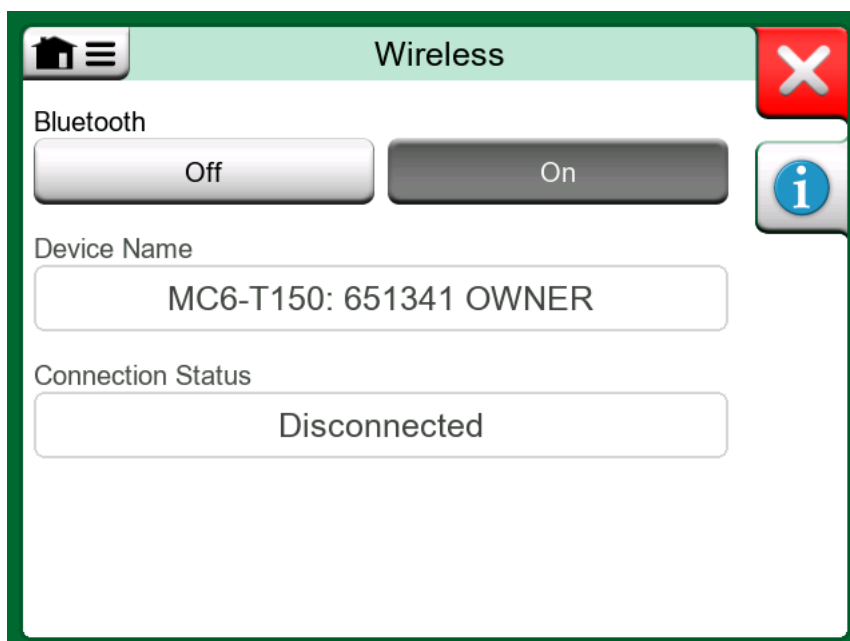

4. Search for available Bluetooth devices on the Client device.

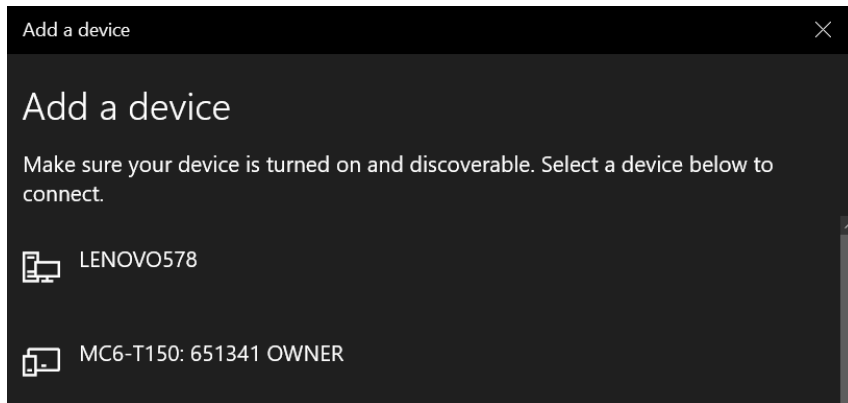


5. Select your calibrator.

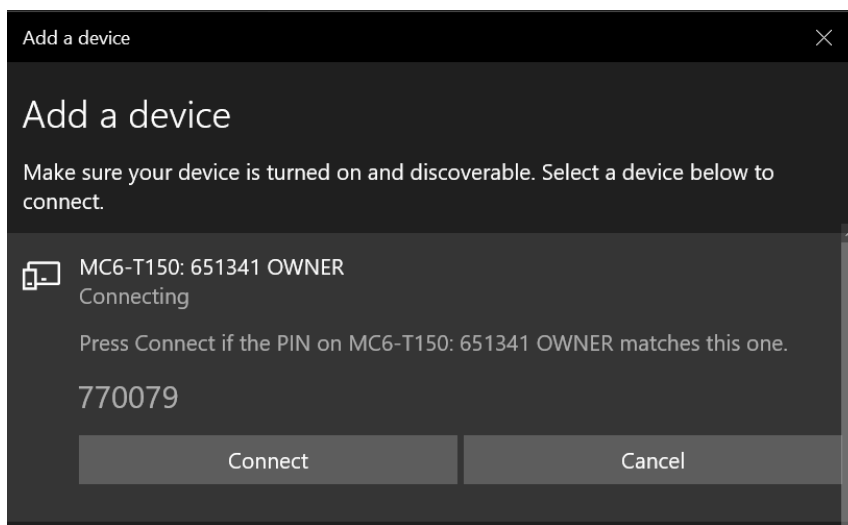

6. Check that the passcode displayed on both the MC6-Ex and the Client device matches, then press **Pair / Connect**.




7. After successful pairing, your MC6-Ex will appear in the Beamex Calibration Management Software. See the example below (CMX Calibration Management Software).

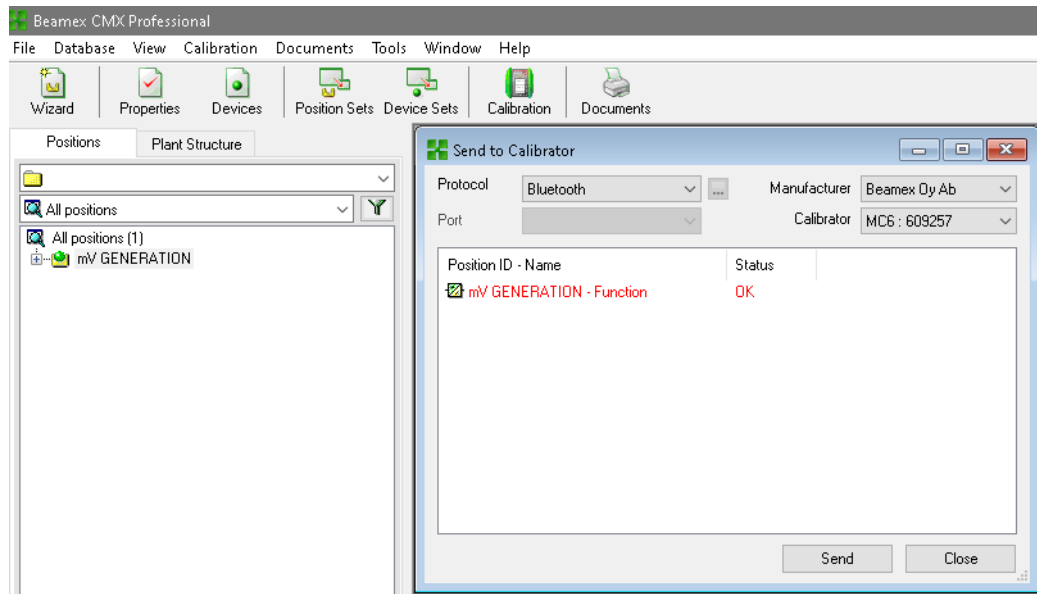


**Tip:** If you need to swap the adapter between calibrator units, first unpair the USB Bluetooth adapter from both the calibrator and the Client device to enable new pairing. Note, that unpairing on the calibrator is only possible when Bluetooth is turned on.

## Information Window

Wireless Communication Information window can be accessed by pressing the **Info** button (.

The Information window displays the main connection parameters, such as the host's and client's MAC addresses and names. For a detailed description and examples of these parameters, see the picture and the explanation table below.

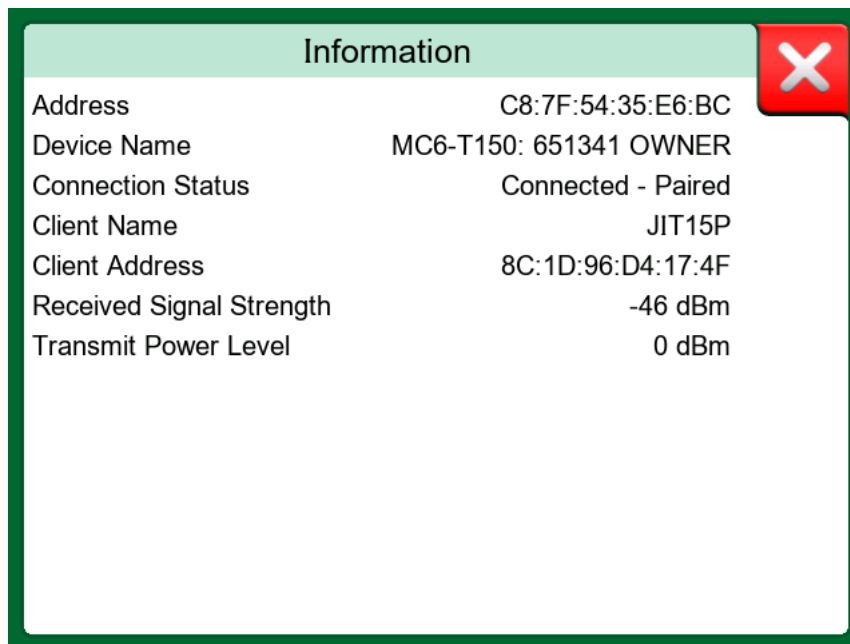

**Figure 172: Information window example**

**Table 7: Information window - parameters and their descriptions**

Address	MAC address of the host device
Name	Name of the host device, formatted as: " <i>Device model: Serial number Owner</i> "
State	Connection status as follows: <ul style="list-style-type: none"> <li>• <i>Disconnected</i> – the devices are not connected</li> <li>• <i>Connected - not paired</i> – the devices are connected but not paired</li> <li>• <i>Connected - paired</i> – the devices are connected and successfully paired</li> </ul>
Client Name	Name of the client device
Client Address	MAC address of the client device
Received Signal Strength	Strength of the received radio signal
Transmit Power Level	Level of transmit power, automatically controlled by the Bluetooth protocol


## Troubleshooting

<b>The Wireless button is greyed out.</b>	
POSSIBLE REASON	SOLUTION
The Wireless Communication option has not been installed.	Contact Beamex Sales to request an upgrade.
No compatible Bluetooth adapter is present.	Check that the adapter meets the requirements, or insert a Beamex-recommended adapter.

<b>It is not possible to pair or establish the connection.</b>	
POSSIBLE REASON	SOLUTION
The USB Bluetooth adapter was swapped between different calibrators.	Unpair the USB Bluetooth adapter from both the calibrator and the Client device to enable new pairing. Note that unpairing on the calibrator is only possible when Bluetooth is turned on.

<b>MC6-Ex is not discoverable, or the wireless connection process is not functioning correctly.</b>	
POSSIBLE REASON	SOLUTION
	Turn Bluetooth off and then back on to potentially resolve the issue


<b>Connection is lost.</b>	
POSSIBLE REASON	SOLUTION
The environment is noisy.	Try changing the Connection setting to <b>Maximum Range</b> (see picture below). It offers lower speed but better coverage.
There is a long distance between Client device and the calibrator.	

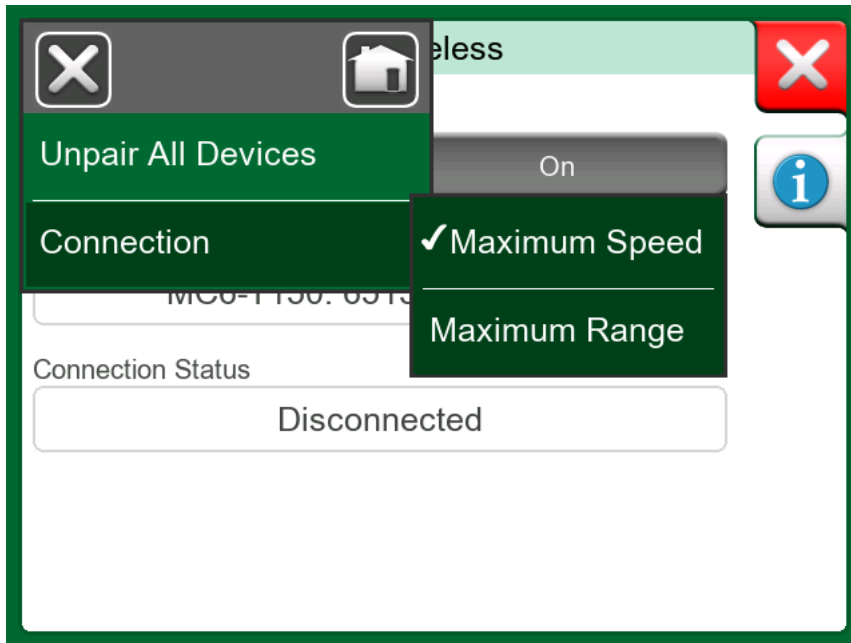

**Figure 173: Connection, Maximum Range**

# Settings

The **Settings** user interface mode allows you to configure MC6-Ex according to your needs.

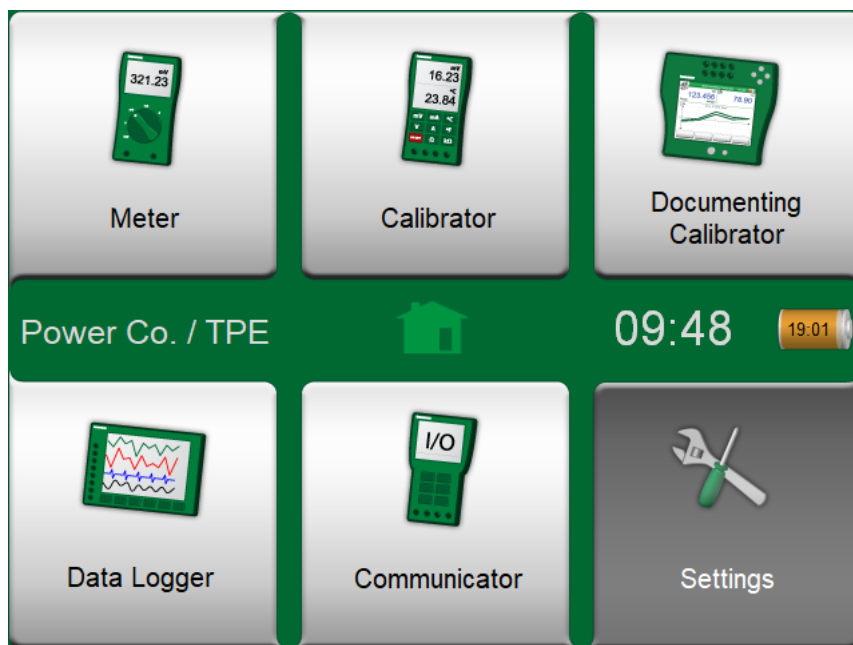

**Figure 174: Home view, Settings user interface mode**

The following settings are available for configuration:

- **Language** – Allows you to select the user interface language.
- **About** – Provides access to information such as the serial number, firmware version, installed modules and options.
- **Power Management** – Lets you define auto-off delays and adjust display brightness.
- **Sound Volumes** – Allows you to set volume levels for different sounds emitted by the calibrator.

- **Date & Time** – Lets you configure the date, time, time zone, and Daylight Saving Time.



**Note:** If the Mobile Security Plus option is enabled, certain settings can only be changed with restrictions:

- Changing Date & Time and Regional Settings requires admin credentials.
- The default PIN code 2010 for changing module data is disabled, and a device-specific code must be used instead.
- Factory reset cannot be performed.

Additional details are available in chapter [Mobile Security Plus Option](#).



**Note:** The calibrator automatically synchronizes its date and time with the computer during communication with the calibration management software, ensuring correct time settings.

- **Regional Settings** – Used to define default values for the temperature unit and scale, set the local net frequency, and select the barometric pressure unit.



**Note:** Changing Regional Settings requires reselecting the Port/Function for the changes to take effect.

- **Owner** – Lets you enter owner information, which is displayed in the Home View.
- **Controller Presets** – Gives you access to preset configurations when controller communication option is installed. Further information can be found in chapter [Controller Communication](#).
- **Maintenance** – Allows you to set the calibration date, update the firmware, align the touch screen, perform a factory reset, and delete usage data.



**Note:** The PIN code for changing the module data is **2010**. The PIN code for MC6-Ex adjustment is device-specific and was provided with the MC6-Ex calibrator. More information is available in chapter [Recalibrating and Adjusting MC6-Ex](#).



**Note:** Use a stylus when aligning the touch screen.

- **Documenting Calibrator** – Contains settings related to instrument calibration, such as enabling “Save as Both,” which allows a single calibration run to be saved as both As Found and As Left.
- **HART, FOUNDATION Fieldbus H1 and Profibus PA** – Provides access to settings for defining communication parameters of smart instruments. For further explanation and descriptions of the available parameters, refer to chapters [Communicator](#) and [Working With Smart Instruments](#).
- **Wireless** – If enabled, allows you to turn on Bluetooth and check the Connection Status.
- **General** – Allows you to change the frequency range. For more information, see Chapter



**Tip:** You can **Recall Factory Settings** from the context-sensitive menu in several subsettings, such as Documenting Calibrator settings or HART settings.

# Maintenance

Beamex calibrators are designed for long service life and to be as easy as possible to repair, maintain, and upgrade. The capabilities of the MC6-Ex can be expanded with software and hardware options. For available options, see chapters [Software Options](#) and [Pressure Modules](#).

After purchasing a software option for an existing calibrator, Beamex will create and deliver an option file (.opt) to you. The software options can be installed using the free **MC6 Option Installer** PC tool, see section [Available PC Tools](#). All hardware options must be installed by Beamex.

The **Beamex Care Plan** is the easiest way to maintain the accuracy and reliability of your MC6-Ex throughout its lifetime. It is a service contract that covers annual recalibration, repairs (including accidental damage), a simplified service return process, and more. For details, visit the <https://www.beamex.com/services/service-plans/>.



**Warning:** MC6-Ex is an intrinsically safe device and must only be opened by Beamex. Opening the MC6-Ex enclosure will compromise safety and void the warranty if it is valid. Battery pack has been designed to be replaceable by the user as instructed in chapter [Replacing the Battery Pack](#).

Accessories and spare parts, such as chargers, cases, and communication cables, can be ordered from the [Beamex Webshop](#).

---

## Cleaning Instructions



**Note:** Before using any cleaning or decontamination method not officially recommended by Beamex, consult an authorised service centre to ensure the method will not damage the equipment.

If MC6-Ex requires cleaning, use a cloth soaked in a mild solution of tall oil soap (pine soap) or a common liquid dish soap. After wiping, wait a few minutes before cleaning the surface again with a cloth dampened with clean water. Never use strong detergents.



**Note:** To clean the display, use a microfiber cloth. If needed, apply a mild detergent and remove it thoroughly afterwards. Use the microfiber cloth only in the safe area!



**Caution:** Isopropanol-based cleaning spray is not recommended for cleaning the MC6-Ex, as it may damage the surfaces. However, it can be used to clean the pressure connectors.



**Note:** Cleaning the pressure modules: Only solvents that are safe for the wetted parts of the pressure module are allowed. After cleaning the overpressure blow holes, tighten the pressure module shield using a maximum torque of 0.4 Nm.

---

## Firmware Update


Beamex products are constantly evolving. Firmware updates are regularly published to introduce new features and enhance performance.



**Note:** To check the current firmware version of your calibrator go to **Settings** > **About** and compare it with the latest release to see whether an update is required.

Firmware update files and instruction can be found under the Resources tab on the [MC6-Ex page](#) on the Beamex website. Save the firmware update file to a USB flash drive, then install it on the calibrator.

The calibrator firmware can be updated through the user interface by navigating to **Settings** > **Maintenance** > **Update Firmware**.

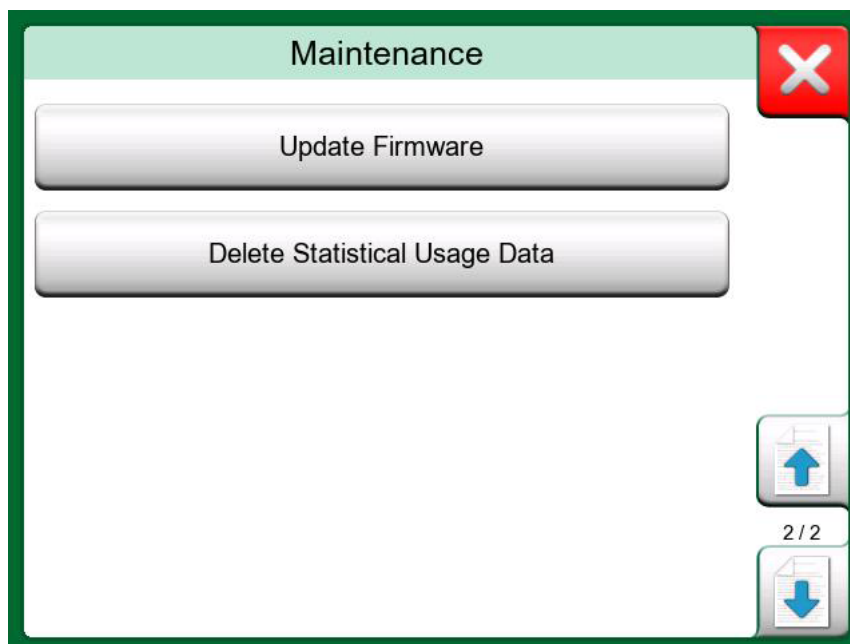

**Figure 175: Update Firmware button in Settings user interface mode**



**Warning:** Firmware updates must be performed in a safe area only. USB devices must not be used in a hazardous area.



**Note:** Updating the firmware does not erase the time, date, or any user-entered data (such as instruments, calibration results, or data logs).

Once the MC6-Ex firmware update is complete, the battery pack firmware update begins. The battery pack LED (5 in [Figure 9: MC6-Ex, rear view](#)) displays the progress, as detailed in the table below.

LED Color	Firmware Update Phase
Yellow	Waiting for firmware package
Blinking Yellow	Receiving firmware from calibrator
Blinking Red/Green	Writing firmware to memory
Green	Firmware update successful
Red ->Yellow -> Green	Restarting

## Replacing the Battery Pack



**Warning:** The battery pack may be safely removed and replaced also in a hazardous area.

Make sure to read and understand all warnings in chapter [Warnings Concerning the NiMH Battery Pack](#).



**Warning:** Using an unauthorized battery pack may compromise the safety of the MC6-Ex, posing a risk of fire or explosion. The use of non-approved battery packs will void the warranty.



The MC6-Ex is equipped with an additional safety mechanism designed to prevent the battery pack from accidentally dropping, especially in offshore environments (see step **#3** in the instructions below).

To remove or replace the Nickel Metal Hydride (NiMH) battery pack, follow these steps:




**Caution:** Ensure the charger is not connected to the MC6-Ex device.

1. Power off the MC6-Ex calibrator and place it upside down so the display faces the table surface.
2. Raise the support stand (see callout #1 in [Figure 176: Replacing the battery pack](#)).
3. Using a Torx T10 screwdriver, unscrew the small upper screw (see drawing A), then unlock the locking mechanism (see drawing B).

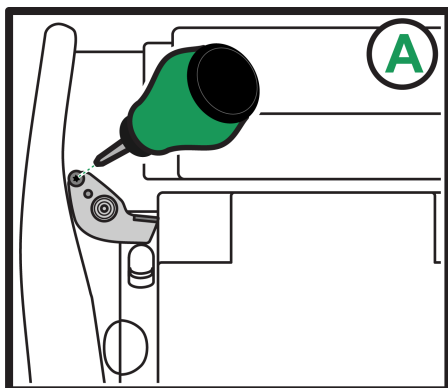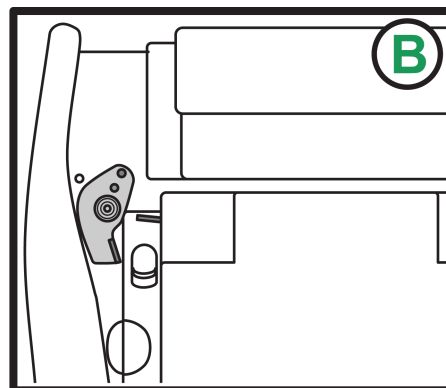**Locked****Unlocked**

4. Pull the tabs (see callout #2 in [Figure 176: Replacing the battery pack](#)) toward each other, then lift the battery pack out from the groove between the tabs.
5. Dispose of the battery pack according to local regulations. See chapter [Disposing the Battery Pack](#).
6. Place the battery pack back into position by gently pulling the tabs toward each other and pressing the pack down. When you hear a "click", the battery pack is securely locked in place.
7. Reassemble the locking mechanism by placing it back into place.

Before starting regular use, teach the MC6-Ex the capacity of the new battery pack. Instructions can be found in chapter [Teaching the Battery](#) .

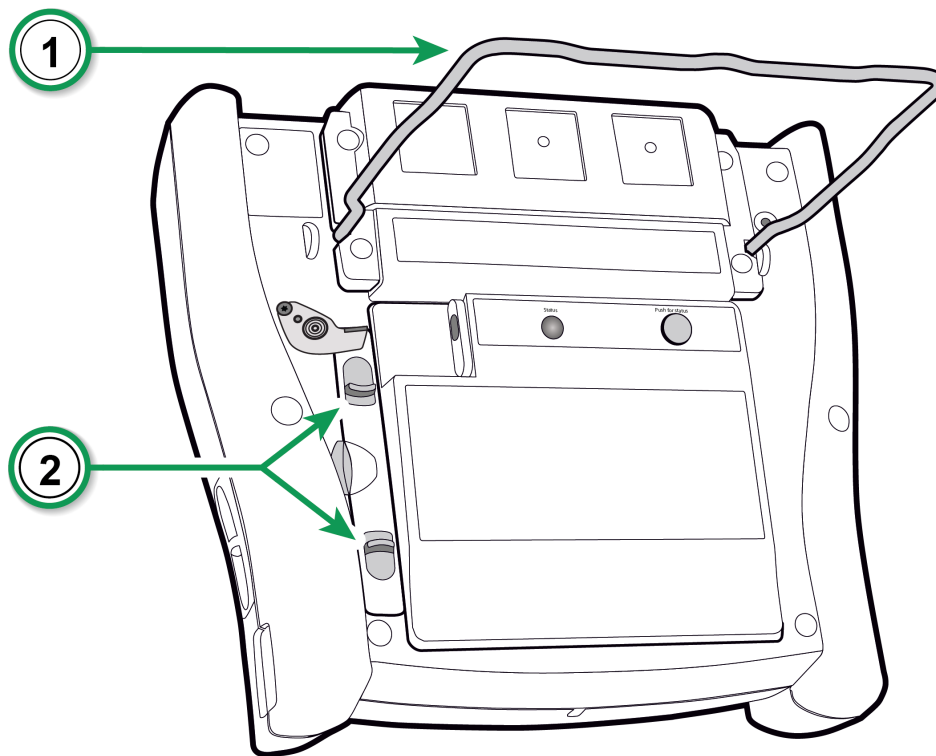

**Figure 176: Replacing the battery pack**

## Teaching the Battery

To ensure accurate battery readings, the calibrator must undergo a full battery cycle — this means charging it to 100%, discharging it completely to 0%, and then charging it back to 100% again without interruptions.

If the calibrator does not go through a full charge-discharge cycle, it may display incorrect capacity and charge level information.

To restore accurate readings, complete a full battery cycle, then teach the calibrator the new battery capacity by following these steps:



**Note:** Make sure the calibrator is powered on and running on battery power. Charger must not be connected.

1. Go to **Settings > Power Management** and set the **Calibrator Auto-off Delay** value to 0.
2. Wait until the unit powers down due to an empty battery pack.
3. Charge the battery pack by plugging in the charger.
4. Allow the battery pack to fully charge without interruptions. A plug icon (🔌) will appear on the display when charging is complete.



**Note:** If the battery is replaced by Beamex service, the teaching cycle is not required.

---

# Recalibrating and Adjusting MC6-Ex

## Recalibrating the Calibrator

As with any test and measurement device, the MC6-Ex must be recalibrated at regular intervals. Beamex recommends annual recalibrations to maintain optimal accuracy and reliability throughout the calibrator's lifetime.

The MC6-Ex is a high-accuracy instrument and should only be recalibrated at laboratories capable of ensuring low measurement uncertainty. It is strongly recommended to use an ISO 17025-accredited laboratory with a certified quality management system. Recalibration through Beamex or a Beamex-authorized service center ensures the calibrator is cleaned, fully tested, updated with the latest firmware, and recalibrated in a facility that meets the calibrator's specifications.

Before sending any equipment for recalibration or repair, submit a service or quotation request through the Beamex Service Portal at <https://services.beamex.com>.

## Calibration and Adjustment Instructions

Detailed MC6-Ex calibration and adjustment instructions are available for calibration laboratories. To request access, please submit a support request at <https://support.beamex.com>. Beamex will verify the request before providing the instructions.

## Changing Calibration Date and Interval

To change the calibration date and interval of the calibrator or its modules, go to **Settings > Maintenance > Change Module Data**. When prompted, enter the PIN code **2010**.

Once the correct PIN is entered, the **Change Module Data** window opens, allowing you to edit the calibration dates and intervals for all built-in modules and connected EXT External Pressure Modules.



**Tip:** To reset the recalibration notification, set a new calibration date or extend the calibration interval.



**Note:** If the **Mobile Security Plus** option is installed, the default PIN code **2010** is disabled. Use the unit-specific PIN code provided with the calibrator.

## Adjusting the Calibrator

A calibration laboratory can adjust the calibrator modules by navigating to **Settings > Maintenance > Adjust Calibrator**. A PIN code entry window will appear. The adjustment PIN code is unit-specific and was shipped with your calibrator.

If the adjustment PIN is lost:

1. Submit a support request to Beamex at <https://support.beamex.com>.
2. Provide your calibrator's serial number and be prepared to verify your identity and ownership of the unit.
3. Beamex will perform the necessary verifications before providing the PIN code.

---

## Preparing the MC6-Ex for Service Returns

If you need to return the unit to the factory for any reason, contact Beamex first. Submit a service or quotation request through the Service Portal at <https://services.beamex.com>.

Before shipping your calibrator, review the instructions for service returns and Beamex policy on shipping equipment with Nickel Metal Hydride (NiMH) batteries at <https://www.beamex.com/services/service-returns/>.



**Note:** Always check and follow all local regulations for shipping equipment with Nickel Metal Hydride (NiMH) batteries.



**Note:** Do not ship equipment to Beamex without prior notice. Always contact Beamex first.



**Note:** Beamex recommends downloading and removing all saved calibration results from the MC6-Ex before shipping. Use calibration management software to store your results permanently.

Place the MC6-Ex in its original packaging as received upon delivery from Beamex. If the original packaging is not available, use 40 mm softeners on all sides to ensure safe delivery.

If you are using another service provider, follow Beamex packing instructions for service returns.

---

## Resetting the Calibrator

There are two types of resets:

- **Reset/Restart:** Used if the calibrator becomes unresponsive. This reset does not erase any user-entered data.
- **Factory Reset:** Restores the calibrator to its original factory state. This reset erases all user-entered data, and the deleted data cannot be recovered.

To reset or restart the calibrator, press and hold the **Home** and **Enter** keys at the same time for 7 seconds.



**Note:** Resetting/restarting the MC6-Ex does not erase the time, date, or any user-entered data (such as instruments, calibration results, or data logs). Only the main processor is reset. However, any open files may be lost.

To perform a Factory Reset, navigate to **Settings > Maintenance > Change Module Data** and enter the PIN code **926535**.



**Note:** Factory reset erases all user-entered data (such as instruments, calibration results, or data logs), and the deleted data cannot be recovered. Factory reset does not erase installed firmware updates, software options, or Device Descriptions.



**Caution:** Deleted data cannot be recovered.



**Note:** Factory reset cannot be performed if the calibrator has Mobile Security Plus option installed.

---

# Disposing of Waste Electrical and Electronic Equipment


Sustainability is a core component of the Beamex design philosophy. We want our customers to continue using their Beamex products for many years, so they are designed to have a long service life and to be as easy as possible to repair, maintain, and upgrade. This supports the circular economy and conserves valuable natural resources. The environmental management system used at Beamex is ISO 14001:2015 certified.

In the European Union (EU) and other regions with separate collection systems, waste electrical and electronic equipment (WEEE) is subject to specific regulations.

The **EU WEEE Directive 2012/19/EU** requires producers of electronic equipment to take responsibility for the collection, reuse, recycling, and proper treatment of WEEE placed on the EU market after August 13, 2005.

The directive aims to:

- Preserve, protect, and improve the quality of the environment
- Safeguard human health
- Conserve natural resources

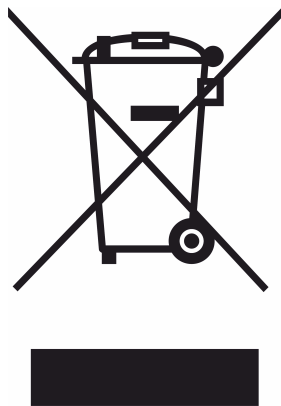

**Figure 177: Symbol for recycling of electrical and electronic equipment**

The symbol presented in the figure above is engraved on the back of the product. It indicates that the product must be taken to an appropriate collection point for the recycling of electrical and electronic equipment.

By returning your calibrator to Beamex for recycling, you can ensure the calibrator is recycled in an environmentally safe and secure manner. The dismantle and disposal process is handled according to Beamex ISO 14001 Environmental management system. Beamex will provide a Certificate of Recycling that certifies that you are released from liability for materials.

For more detailed information about recycling this product, please contact Beamex or waste disposal service provider.

## Disposing the Battery Pack

The MC6-Ex contains a Nickel Metal Hydride (NiMH) battery pack.



**Warning:** Used MC6-Ex battery pack is considered hazardous waste. Always dispose of used batteries safely and according to local regulations.

To dispose of the MC6-Ex battery pack, follow these steps:

1. First, discharge the battery pack by using the calibrator normally.
2. Then, remove the battery pack as described in chapter [Replacing the Battery Pack](#).



**Warning:** To avoid short-circuiting, insulate the terminals with adhesive tape.

3. Finally, place the battery pack in a fireproof container and dispose of it according to local regulations.



**Warning:** Do not crush, short-circuit, or incinerate battery under any circumstances.



**Warning:** Do not transport the battery pack intended for disposal as cargo or freight.

# Statements

---

## Disclaimer

Beamex has taken great care to ensure that this manual contains both accurate and comprehensive information. Notwithstanding the foregoing, the content of this manual is provided “as is” without any representations, warranties or guarantees of any kind, whether express or implied, in relation to the accuracy, completeness, adequacy, currency, quality, timeliness or fitness for a particular purpose of the content and information provided on this manual. The content of this manual is for general informational purposes only. To the extent permitted by law, Beamex shall not be liable for any direct, indirect, special, consequential or incidental loss or damage (including but not limited to damage for third parties and loss of use, loss of profit and loss of production) in relation with the use of this manual, even if Beamex has been advised of the possibility of such damages.

Beamex reserves the right to amend this manual at any time without prior notice. Furthermore, the products this manual describes are subject to change without prior notice due to Beamex’s continuous product development process.

---

## Intellectual Property Rights

### Copyright

The content of this manual is the property of Beamex Oy Ab and/or its subsidiaries and affiliates (referred hereinafter as Beamex). This manual and its content are protected by international copyright laws and all copyrights are retained by Beamex. All rights reserved. Reproduction, distribution, transfer or storage of the content presented in this manual, in whole or in part, is illegal and prohibited without the prior written consent of Beamex.

The Beamex MC6-Ex is a product of Beamex and contains FCG SDC-625 technology. The FCG SDC-625 technology is owned by FieldComm Group (FCG), 9430 Research Blvd., Suite 1-120 Austin, Texas 78759, and may not be adopted, copied, reproduced, modified, licensed, sublicensed, sold or resold other than under license from FCG.

The Beamex MC6-Ex contains licensed software which requires that its source code is available for you. Please contact Beamex to obtain it.

The Beamex MC6-Ex is based in part on the FLTK project (<http://www.fltk.org>).

## Trademarks

"Beamex", "Beamex MC6", "Beamex – World-Class Calibration Solutions" as well as the color combination of green and black as applied to the major part of the visible surfaces of a measurement device, are registered trademarks of Beamex Oy Ab.

No content provided in this manual should be interpreted as a permission or license to use Beamex trademarks. The use of Beamex trademarks without the approval and consent of Beamex is prohibited and violates trademark laws.

HART is a registered trademark of the FieldComm Group (FCG).

FOUNDATION Fieldbus is a registered trademark of FieldComm Group (FCG).

PROFIBUS is a trademark of PROFIBUS International.

Windows is a registered trademark of Microsoft Corporation.

All other trademarks or trade names mentioned in this manual are the property of their respective holders.

# Index

## A

About this manual.....	7
Active Device Descriptions.....	
Basic View.....	123, 127
Device Specific.....	123
Generic.....	123
Adjustment instructions.....	188
Auto-off feature.....	33
Automatic Acceptance.....	85

## B

Battery level.....	29
Battery pack.....	
Charge.....	31
Dispose.....	192
Replace.....	185
Teach.....	187
Beamex.....	
Adjustment.....	188
Recalibration.....	183, 188
Repair.....	183
Service.....	189
Service Portal.....	183
Services.....	44
Buttons.....	23

## C

Calibration.....	
Fail.....	87
Fieldbus instrument.....	146
Group.....	101
HART instrument.....	144
Input.....	75
Instrument Overview.....	82
Map smart instrument data.....	139
Output.....	75
Pass.....	87
Calibration Management Software.....	
CMX.....	42
LOGiCAL.....	42
Calibration Point Acceptance.....	85
Calibration process.....	75
Calibration results.....	
As Found.....	76
As Left.....	76
Combine with Previous Result.....	87
Delete.....	87, 91
History.....	90
Save.....	87
View.....	90
Calibration Results window.....	87

Calibrator.....	72
Callendar–Van Dusen.....	163
Certifications.....	9
Change controller during calibration.....	108
Charger.....	29, 31
Charging procedure.....	31
Charging status.....	29
Cleaning instructions.....	183
CMX.....	42
Communication protocol.....	
FOUNDATION Fieldbus H1.....	122
HART.....	122
PROFIBUS PA.....	122
Communicator.....	122
Connect external pressure module.....	49
Connections.....	
Reference Junction.....	68
Smart instrument.....	66
Thermocouple.....	68
Controller communication.....	168
Copyrights.....	193
Current generation.....	62
Current measurement.....	53
Customize mappings.....	
Device Model Defaults.....	140
Field mapping.....	140
Protocol Defaults.....	140

## D

Data log.....	
Fieldbus instrument.....	146
HART instrument.....	144
Logging methods.....	117
Start.....	117
Triggers.....	113
Data log configuration.....	
Open.....	113
Save.....	113
Data log results.....	
Delete.....	118, 119
History.....	119
Save.....	118
View.....	119
Data Log Viewer.....	44, 120
Data Logger.....	113
Data Logger channel.....	113
Data management.....	28
DD file.....	123
Device Description file.....	123
Device Description Installer.....	44, 123
Disclaimer.....	193
Disconnect external pressure module.....	49
Display.....	28
Dispose battery pack.....	192

Disposing of Waste Electrical and Electronic Equipment.....	191
Documenting Calibrator.....	74

## E

External controllers.....	
Communication log.....	168
Presets.....	168
External Pressure Modules.....	49

## F

Factor.....	166
Factory hierarchy.....	77, 80
Fieldbus Configuration Viewer.....	44, 128
Fieldbus instrument.....	
Calibrate.....	146
Log data.....	146
Trim.....	150
Firmware update.....	
MC6-Ex.....	184
Frequency generation.....	63
Frequency measurement.....	54

## G

Generation.....	
Current.....	62
Frequency.....	63
Pulse.....	65
Voltage.....	63
Get Mapped Values.....	139
Group calibration.....	
Add to group.....	101
Cancel group.....	101
Create group.....	101
Remove from group.....	101
Group Calibration.....	
Settings.....	106
Group settings.....	106

## H

Hardware overview.....	23
HART.....	
Sensitivity.....	136
Settings.....	136
HART instrument.....	
Calibrate.....	144
Log data.....	144
HART instruments.....	
Trim.....	148
Home View.....	34

## I

Input method.....	
Keyed.....	75
Instrument.....	
Calibrate.....	83
Copy.....	82
Create.....	91
Delete.....	82
Move.....	82
Instrument data.....	
Configuration pages.....	91
Device.....	75, 100
Error limit.....	75, 99
Function.....	75, 93
Identification.....	75, 92
Input.....	75, 93
Output.....	75, 93
Position.....	75
Procedure.....	75, 97
Tag.....	75
Instrument List.....	77
Instrument Overview window.....	82
Intrinsic safety.....	
Combined connections.....	12
Input parameters.....	12
Output parameters.....	13
ITS-90.....	164

## L

LOGiCAL.....	42
Loop supply.....	53
Loop supply voltage.....	
Sink mode.....	62
Loop supply voltage'.....	
Source mode.....	62

## M

Maintenance.....	
Clean MC6-Ex.....	183
Dispose battery pack.....	192
Dispose MC6-Ex.....	191
Disposing of Waste Electrical and Electronic Equipment.....	191
Firmware update.....	184
Pack MC6-Ex.....	189
Recalibrate MC6-Ex.....	188
Replace battery pack.....	185
Reset MC6-Ex.....	190
Service.....	189
Teach battery.....	187
MC6-Ex.....	
Accessories.....	44
Battery pack.....	29
Buttons.....	23
Certifications.....	9

Charger.....	29, 31
Clean.....	183
Dispose.....	191
Hardware overview.....	23
Pack.....	189
Ports and connectors.....	23
Power management.....	33
Pressure modules.....	25
Recalibrate.....	188
Reset.....	190
Safety.....	9
Service.....	189
Settings.....	180
Software options.....	43
Specifications.....	21
Terminals.....	23
Warnings.....	9
Measurement.....	
Current.....	53
Frequency.....	54
Pressure.....	46
Pulse counting.....	56
Resistance.....	50, 52
RTD.....	50
Switch sensing.....	57
Thermocouple.....	51
Voltage.....	54
Memory.....	28
Meter.....	70
Mobile Security Plus.....	111

## O

Option Installer.....	44
-----------------------	----

## P

Packing instructions.....	189
PC tools.....	
Data Log Viewer.....	44
Device Description Installer.....	44
Fieldbus Configuration Viewer.....	44
Option Installer.....	44
Remote Controller.....	44
Plant Structure.....	77
Plant Structure Level.....	80
Ports and connectors.....	23
Power management.....	33
Pressure measurement.....	46
Pressure modules.....	25
PRT sensors.....	
Check Sensor Conversion.....	167
Pulse counting.....	56
Pulse generation.....	65

## R

Recalibrating instructions.....	188
Reference junction.....	51
Reference Junction connections.....	68
Reference Junction mode.....	
External.....	68
Fixed.....	68
Internal.....	68
Manual.....	68
Remote Controller.....	44
Replace battery pack.....	185
Resetting instructions.....	190
Resistance measurement.....	52
Resistance simulation.....	61
RTD measurement.....	50
RTD sensors.....	
Check Sensor Conversion.....	167
RTD simulation.....	59

## S

Safety.....	
Precautions and warnings.....	14
Specific conditions of use.....	9
Safety symbols.....	13
Sensor calculation formula.....	
Callendar-Van Dusen.....	163
Factor.....	166
ITS-90.....	164
Service.....	189
Settings.....	180
Simulation.....	
Resistance.....	61
RTD.....	59
Thermocouple.....	60
Smart instrument configuration.....	
Link to CMX.....	131
Manage.....	128
Open.....	128, 130
Print.....	128
Save.....	128, 129
View.....	128, 130
Smart instrument connections.....	66
Smart instrument parameter.....	
Editing.....	135
Smart instruments.....	
Get Mapped Values.....	139
List of found devices.....	137
Parameters.....	133
Supply voltage.....	136
Trimming.....	148
Value Parameter.....	133
Software options.....	
Communicator.....	43
Data Logger.....	43, 113
Mobile Security Plus.....	43, 111
Wireless communication.....	43, 172

Specific conditions of use.....	10
Specifications.....	21
Supply voltage.....	53
Support stand.....	28
Switch sensing.....	57

## T

Teach battery.....	187
Terminals.....	23
Thermocouple connections.....	68
Thermocouple measurement.....	51
Thermocouple simulation.....	60
Tools.....	
Additional Info.....	152
Additional Stability Check.....	152
Alarm.....	152
Damping.....	152
Function Info.....	152
Leak / Stability Test.....	152
Quick Access Buttons.....	152
Ramp.....	152
Resolution.....	152
Scaling.....	152
Step.....	152
Touch screen.....	28
Trademarks.....	194
Trim fieldbus instrument.....	150
Trim HART instrument.....	148
Typographical conventions.....	8

## U

Unpacking.....	6
User interface.....	
Buttons.....	35
Controls.....	35
Date/Time fields.....	37
Editable fields.....	37
Hardware focus indicator.....	35
Modes.....	34
Numeric fields.....	37
Spinning tool.....	37
Text fields.....	37
User Interface mode.....	
Calibrator.....	72
Communicator.....	122
Data Logger.....	113
Documenting Calibrator.....	74
Meter.....	70
Settings.....	180
User sensor.....	
Create new.....	160
Update data.....	163
Use.....	162
User sensors.....	160
User-defined.....	
Calibration points.....	158

Pressure unit.....	47
Steps.....	158
Transfer functions.....	156

## V

Voltage generation.....	63
Voltage measurement.....	54

## W

Warnings.....	
Battery pack.....	19
Charger.....	19
Electrical measurement and generation.....	15
Pressure Measurement.....	16
Smart instruments.....	18
WEEE.....	191
Wireless communication.....	
Bluetooth.....	172
Connect devices.....	174
Connection security.....	173
Information window.....	176
Pair devices.....	174
Requirements.....	173
Troubleshooting.....	178
Work Order View Mode.....	109